

Energizer®



2.0 Ah/4.0 Ah LITHIUM ION BATTERY
EBA20U2/EBA20U4
USER GUIDE

CAUTION: Read this manual before use this machine!

Energizer®

©2022 Energizer. Energizer and certain graphic designs are trademarks of Energizer Brands, LLC and related subsidiaries and are used under license by Builder SAS. All other brand names are trademarks of their respective owners. Neither Builder SAS nor Energizer Brands, LLC is affiliated with the respective owners of their trademarks.

Let's get started.

You're excited to power up, so we'll keep this brief!

1. SAFETY INFORMATION



WARNING! Read all safety warnings and all instructions. *Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. Save all warnings and instructions for future reference.*

a) Recharge only with the charger specified by the manufacturer. *A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.*

b) Use power tools only with specifically designated battery packs. *Use of any other battery packs may create a risk of injury and fire.*

c) When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another. *Shorting the battery terminals together may cause burns or a fire.*

d) Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. *Liquid ejected from the battery may cause irritation or burns.*

1.1 SPECIFIC SAFETY INSTRUCTIONS

The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not

play with the product.

Please read and observe these instructions before using the product.

The battery pack for this tool has been shipped in a low charge condition. You should charge the battery pack fully before use.

Do not incinerate the battery pack even if it is seriously damaged or can no longer hold a charge.

The battery pack can explode in a fire.

Batteries can explode in the presence of a source of ignition, such as a pilot light. To reduce the risk of serious personal injury, never use any cordless product in the presence of open flame. An exploded battery can propel debris and chemicals. If exposed, flush with water immediately.

Do not crush, drop or damage battery pack. Do not use a battery pack or charger that has been dropped or received a sharp blow. A damaged battery is subject to explosion. Properly dispose of a dropped or damaged battery immediately.

Do not crush, drop or damage battery pack. Do not use a battery pack or charger that has been dropped or received a sharp blow. A damaged battery is subject to explosion. Properly dispose of a dropped or damaged battery immediately.

A small leakage of liquid from the battery pack may occur under extreme usage or temperature conditions. This does not necessarily indicate a failure of the battery pack. However, if the outer seal is broken and this leakage comes into contact with your skin wash the affected area quickly with soap and water. If the leakage gets in your eyes flush your eyes with

clean water for a minimum of 10 minutes and seek immediate medical attention.

Inform the medical staff that the liquid is a 25-35% solution of potassium hydroxide.

Never attempt to open the battery pack for any reason. If the plastic housing of the battery pack breaks open or cracks, immediately discontinue its use and do not recharge it.

Do not store or carry a spare battery pack in a pocket or toolbox or any other place where it may come into contact with metal objects. The battery pack may be short-circuited causing damage to the battery pack, burns or a fire.

Do not charge battery tool in a damp or wet location. Following this rule will reduce the risk of electric shock.

For best results, charge the battery tool in a location where the temperature is more than 10°C but less than 40°C, to reduce the risk of serious personal injury, do not store outside or in vehicles.

Never service damaged battery packs. Service of battery packs should only be performed by the manufacturer or authorized service providers.

1.2 RE-CHARGEABLE BATTERIES

- Batteries may leak or explode if not charged or handled correctly. Always observe the following precautions when handling batteries.
- Ensure that the machine is switched off before removing or fitting batteries.
- Do not use this battery with any other product.
- Do not attempt to fit the battery the wrong way round.
- Do not short out, or attempt to dismantle the battery.

- Do not expose the battery to flames or excessive heat.
- Do not immerse in or expose the battery to water.
- Do not store or transport the battery with loose metal objects such as drill and drive bits.
- Batteries are points to leakage when discharged. To avoid damage to the product, remove or re-charge the battery when no charge remains. Store the battery in a cool place when not in use.
- After prolonged use the battery may become hot. Before removing the battery, switch the machine off and allow the battery to cool down. Do not use the battery if you notice any discoloration or distortion of the battery casing.

2. INTENDED USE

The Li-Ion battery specially design to work with *Energizer* range of cordless power tools as below.

EZ20VTHPC-UK	20V LITHIUM EXTENDED HEDGE TRIMMER
EZ20VELPC-UK	20V LITHIUM POLE SAW
EZ20VTHC-UK	20V LITHIUM HEDGE TRIMMER
EZ20VCBC-UK	20V LITHIUM GRASS TRIMMER
EZ20VSEC-UK	20V LITHIUM BLOWER
ELMC20V-UK	20V LITHIUM LAWN MOWER

3. COMPONENTS

(FIG.1)



1	Battery release catch
2	Charge level indicator
3	Charge level indicator button

4. OPERATION

Battery pack	Charger (Not included)
EBA20U2	EFC20U
EBA20U4	

4.1 CHARGING THE BATTERY PACK



Warning ! Only charge in compatible 20V chargers. Use of other chargers may result in fire, damage or serious personal injury.

The battery pack has been shipped in a low charge condition to prevent possible problems. Therefore, you should charge it until the green LED on the charger comes on.

a) Check that your mains voltage is the same as that marked on the rating plate of the battery charger. Insert the power plug of the charger into the socket outlet. The RED LED will then begin to light.

b) Insert the battery pack into the battery charger, then the red LED on charger will begin to Green flash light.

c) You will find a label with “Charger indicator” of the LED indicator on the charger.

The battery pack can become a little warm during the charging. This is normal.

If the battery pack fails to charge, check:

- Voltage at the power socket
- Whether there is good contact at the charging contacts.
- Whether the battery pack is warm or not, The battery protection system will not allow the battery to be charged if the battery temperature is over 40°C after use, allow the battery pack to cool to room temperature before commencing with the charging.

If the battery pack still fails to charge, send the charging unit and the battery pack to our customer service center.

To ensure that the battery pack provides long service, you should take care to recharge it promptly. You must recharge the battery pack when you notice that the power of the cordless vacuum drops. Never allow the battery pack to become fully discharged. This will cause it to develop a defect.

4.2 BATTERY CAPACITY INDICATOR (FIG.1)

Press the switch for the battery capacity indicator . The battery capacity indicator shows the charge status of the battery using 4 LEDs as following:

All 4 LEDs are lit:

The battery is fully charged.

3 LED(s) are lit:

The battery has approx 75% remaining charge.






2 LED(s) are lit:

The battery has approx 50% remaining charge.

1 LED is lit:

The battery will be empty soon, please recharge the battery.

4.3 CHARGER INDICATOR

Indicator status	Explanations and actions
	Ready for use The charger is connected to the mains and is ready for use; there is no battery pack in the charger.
	Charging The charger is charging the battery pack in charge mode.
	Battery pack is full of charge. Charging is finished and battery pack in the charger.
	The temperature of battery is too high or too low, the charger is under protection status. The charging function can be recovered after the temperature is normal.
	Unrecoverable battery malfunction.

5. MAINTENANCE AND STORAGE

5.1 MAINTENANCE

The batteries have been designed to provide maximum trouble-free life. However, like all batteries, they will eventually wear out. DO NOT disassemble battery pack and attempt to replace the batteries. Handling of these batteries, especially when wearing rings and jewellery, could result in serious burns.

To obtain the longest possible battery life, remove the battery pack from the charger once it is fully charged and ready for use.

5.2 STORAGE

Store the battery pack where the temperature is below 27°C.







Store battery packs in a "charged" condition (minimum of 30%-50% charged).

To charge the battery pack after a six months storage period, it is recommended to discharge the battery about 0%-20% (by running it in a tool) and charge afterwards to maximize the battery lifetime.

6. TECHNICAL SPECIFICATIONS

Model	EBA20U2	EBA20U4
Voltage	20V d.c.	20V d.c.
Capacity	2.0Ah	4.0Ah
Charge time	60 minutes	120-130 minutes
Cell type	Lithium-ion	Lithium-ion

7. SYMBOLS EXPLANATION

	Do not dispose of old appliances with domestic rubbish .
	Conforms to relevant safety standards
	Do not expose batteries to temperatures exceeding 40 degrees.
	Do not dispose of batteries in fire. They could explode and cause injury
	Do not dispose of batteries in water.
	Recycling

8. DISPOSAL



Electric power tools, as well as their accessories and packaging, must each be able to follow an appropriate recycling pathway. Only for the countries of the European Union: Do not throw away your electrical appliance with the household waste! In accordance with the European Directive 2012/19/EU on waste electrical and electronic equipment and its implementation in national laws, power tools that can no longer be used must be separated and follow an appropriate recycling pathway.

20V RANGE

		
EBA20U2	EBA20U4	EFC20U
2.0 Ah LITHIUM ION BATTERY	4.0 Ah LITHIUM ION BATTERY	20V FAST CHARGER

		
ELMC20V series	EZ20VCBC series	EZ20VELPC-UK series
20V LITHIUM CORDLESS LAWN MOWER	20V LITHIUM CORDLESS GRASS TRIMMER	20V LITHIUM CORDLESS POLE SAW

		
EZ20VTHPC series	EZ20VSEC series	EZ20VTHC series
20V LITHIUM CORDLESS HEDGE TRIMMER	20V LITHIUM CORDLESS BLOWER	20V LITHIUM CORDLESS HEDGE TRIMMER

9. WARRANTY



WARRANTY

The manufacturer guarantees the product against defects in material and workmanship for a period of 2 years from the date of the original purchase. The warranty only applies if the product is for household use. The warranty does not cover breakdowns due to normal wear and tear.

The manufacturer agrees to replace parts identified as defective by the designated distributor. The manufacturer does not accept responsibility for the replacement of the machine, in whole or in part, and/or ensuing damage.

The warranty does not cover breakdowns due to:

- insufficient maintenance.
- abnormal assembly, adjustment or operations of the product.
- parts subject to normal wear and tear.

The warranty does not extend to:

- shipping and packaging costs.
- using the tool for a purpose other than that for which it was designed.
- the use and maintenance of the machine done in a manner not described in the user manual.

Due to our policy of continuous product improvement, we reserve the right to alter or change specifications without notice. Consequently, the product may be different from the information contained therein, but a modification will be undertaken without notice if it is recognized as an improvement of the preceding characteristic.

READ THE MANUAL CAREFULLY BEFORE USING THE MACHINE.

When ordering spare parts, please indicate the part number or code, you can find this in the spare parts list in this manual. Keep the purchase receipt; without it, the warranty is invalid. To help you with your product, we invite you to contact us by phone or via our website:

- **+33 (0)9.70.75.30.30**
- **<https://services.swap-europe.com/contact>**

You must create a "ticket" via the web platform.

- Register or create your account.
- Indicate the reference of the tool.
- Choose the subject of your request.
- Describe your problem.
- Attach these files: invoice or sales receipt, photo of the identification plate (serial number), photo of the part you need (for example: pins on the transformer plug which are broken).



10. PRODUCT FAILURE

WHAT TO DO IF MY MACHINE BREAKS DOWN?

If you bought your product in a store:

- a) Empty the fuel tank if your product has one.
- b) Make sure that your machine is complete with all accessories supplied, and clean! If this is not the case, the repairer will refuse the machine.

Go to the store with the complete machine and with the receipt or invoice.

If you bought your product on a website:

- a) Empty the fuel tank if your product has one.
- b) Make sure that your machine is complete with all accessories supplied, and clean! If this is not the case, the repairer will refuse the machine.
- c) Create a SWAP-Europe service ticket on the site: <https://services.swap-europe.com> When making the request on SWAP-Europe, you must attach the invoice and the photo of the nameplate (serial number).
- d) Contact the repair station to make sure it is available before dropping off the machine.

Go to the repair station with the complete machine packed, accompanied by the purchase invoice and the station support sheet downloadable after the service request is completed on the SWAP-Europe site

For machines with engine failure from manufacturers BRIGGS & STRATTON, HONDA and RATO, please refer to the following instructions.

Repairs will be done by approved engine manufacturers of these manufacturers, see their site:

- <http://www.briggsandstratton.com/eu/fr>
- <http://www.honda-engines-eu.com/fr/service-network-page;jsessionid=5EE8456CF39CD572AA2AEEDFD290CDAE>
- <https://www.rato-europe.com/it/service-network>

Please keep your original packaging to allow for after-sales service returns or pack your machine with a similar cardboard box of the same dimensions.

For any question concerning our after-sales service you can make a request on our website <https://services.swap-europe.com>

Our hotline remains available at +33 (9) 70 75 30 30.



11. WARRANTY EXCLUSIONS

THE WARRANTY DOES NOT COVER:

- Start-up and setting up of the product.
- Damage resulting from normal wear and tear of the product.
- Damage resulting from improper use of the product.
- Damage resulting from assembly or start-up not in accordance with the user manual.
- Breakdowns related to carburetion beyond 90 days and fouling of carburetors.
- Periodic and standard maintenance events.
- Actions of modification and dismantling that directly void the warranty.
- Products whose original authentication marking (brand, serial number) has been degraded, altered or withdrawn.
- Replacement of consumables.
- The use of non-original parts.
- Breakage of parts following impacts or projections.
- Accessories breakdowns.
- Defects and their consequences linked to any external cause.
- Loss of components and loss due to insufficient screwing.
- Cutting components and any damage related to the loosening of parts.
- Overload or overheating.
- Poor power supply quality: faulty voltage, voltage error, etc.
- Damages resulting from the deprivation of enjoyment of the product during the time necessary for repairs and more generally the costs related to the immobilization of the product.
- The costs of a second opinion established by a third party following an estimate by a SWAP-Europe repair station
- The use of a product which would show a defect or a breakage which was not the subject of an immediate report and/or repair with the services of SWAP-Europe.
- Deterioration linked to transport and storage*.
- Launchers beyond 90 days.
- Oil, petrol, grease.
- Damages related to the use of non-compliant fuels or lubricants.

* In accordance with transport legislation, damage related to transport must be declared to carriers within 48 hours maximum after observation by registered letter with acknowledgement of receipt.

This document is a supplement to your notice, a non-exhaustive list.

Attention: All orders must be checked in the presence of the delivery person. In case of refusal by the delivery person, you must simply refuse the delivery and notify your refusal.

Reminder: The reserves do not exclude the notification by registered letter with acknowledgement within 72 hours.

Information: Thermal devices must be wintered each season (service available on the SWAP-Europe site). Batteries must be charged before being stored.

Energizer®