

# *Energizer*<sup>®</sup>



## RECIPROCATING SAW HEAD FOR ECOMOTION MULTIFUNCTION BASE

**ECO3**

### USER GUIDE

CAUTION: Read this manual before using this unit!





# ***Energizer***®

©2022 Energizer. Energizer and certain graphic designs are trademarks of Energizer Brands, LLC and related subsidiaries and are used under license by Builder SAS. All other brand names are trademarks of their respective owners. Neither Builder SAS nor Energizer Brands, LLC is affiliated with the respective owners of their trademarks.


## **Let's get started.**

You're excited to power up, so we'll keep this brief!

**!** **WARNING:** All safety instructions and technical data are included in the manual for ECOMOTION multifunction tool, please read it before using this unit!

	Conforms to relevant safety standards.
	To reduce the risk of injury, the user must read and understand this manual before using this product.
	Do not dispose of old appliances with domestic rubbish.
	Wear eye protection.

### 1. PART DESCRIPTION:

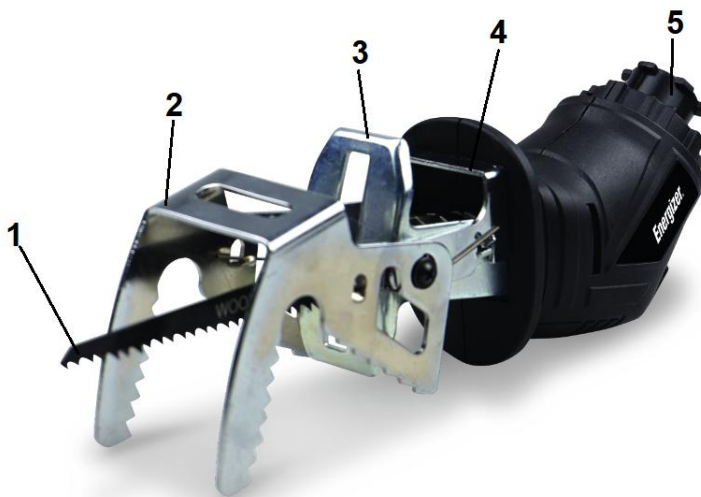

- 1) Blade
- 2) Blade guard
- 3) Soleplate
- 4) Lever for unlocking sawblade
- 5) Fitting joint

### 2. Fitting the Reciprocating saw head with ECOMOTION multifunction base:

- 1) Push the reciprocating saw head along the guide rail into the multifunction base. It locks into place audibly.
- 2) Allow the unlocking lever on base to slide back into position.
- 3) Check reciprocating saw head is secure by pulling on it.

### 3. Installing/changing the blade

**!** **WARNING!** Secure the ECOMOTION multifunction base against switching on. If the appliance is switched on accidentally, there is a danger of injury!

**!** **Caution, risk of Injury!**

- Do not use any blunt or bent blades or blades which are damaged in any other way.
- Always insert a suitable sawblade.

#### 1) Installing the blade:

- a) Push the lever (4) for sawblade unlocking upwards as far as the stop.
- b) Push the sawblade shaft into the sawblade mounting slot.

- c) To unlock, release the lever, it will return to the initial position.
- d) Check that the sawblade is secure by pulling on it.

## **2) Removing the sawblade:**

- a) Press the lever (4) for sawblade unlocking upwards as far as the stop.
- b) then pull the sawblade out of the sawblade mounting.

## **4. Operating the Reciprocating Saw**

- 1) Before switching the appliance on, ensure it is not in contact with the workpiece.
- 2) Turn the appliance on. By using the on/off switch you can progressively control the stroke rate:
  - a) Gentle pressure: low stroke rate.
  - b) Greater pressure: higher stroke rate.
  - c) The on/off switch cannot be locked.
- 3) Place the soleplate (3) on the workpiece.
- 4) Cut with a uniform forward motion.
- 5) After completion of the work, first remove the blade from the saw cut and then switch the appliance off.

***Energizer***<sup>®</sup>