

Energizer[®]



**SANDER HEAD FOR
ECOMOTION MULTIFUNCTION TOOL
ECO5
USER GUIDE**

CAUTION: Read this manual before using this unit!






Energizer®

©2022 Energizer. Energizer and certain graphic designs are trademarks of Energizer Brands, LLC and related subsidiaries and are used under license by Builder SAS. All other brand names are trademarks of their respective owners. Neither Builder SAS nor Energizer Brands, LLC is affiliated with the respective owners of their trademarks.

Let's get started.

You're excited to power up, so we'll keep this brief!

⚠ WARNING: All safety instructions and technical data are included in the manual for ECOMOTION multifunction tool, please read it before using this unit!

	Conforms to relevant safety standards.
	To reduce the risk of injury, the user must read and understand this manual before using this product.
	Do not dispose of old appliances with domestic rubbish.
	Wear eye protection.
	Wear ear protectors. Exposure to noise can cause hearing loss.

1. PART DESCRIPTION:



- 1) Fitting joint
- 2) Sander pad

2. Fitting the sander head with ECOMOTION multifunction base:

- 1) Push the sander head along the guide rail into the multifunction base. It locks into place audibly.
- 2) Allow the unlocking lever on base to slide back into position.
- 3) Check sander head is secure by pulling on it.

3. Attaching/removing sanding sheet

⚠ WARNING! Secure the ECOMOTION multifunction base against switching on. If the appliance is switched on accidentally, there is a danger of injury!

The sanding pad is fitted with Velcro for rapid attachment of the sanding sheet.

- 1) Attaching sanding sheet
 - Press the sanding sheet evenly onto the sanding plate.
 - Ensure that the holes in the sanding sheet are placed above the openings in the sanding plate.

2) Removing sanding sheet

- Simply pull the sanding sheet off the sanding plate.

4. Connecting dust extraction

You can reduce dust production during sanding by attaching a dust extraction system.

- 1) Push the adaptor into the opening on the sander attachment as far as the stop.
- 2) Connect a dust extractor suction hose to the adaptor.

Note: If necessary, you can connect the suction hose of a vacuum cleaner without reducer to the adapter.

Energizer[®]