

Energizer®



CORDLESS PRUNNER

EZ20VST35N

USER GUIDE

CAUTION: Read this manual before using this machine!

Energizer®

©2022 Energizer. Energizer and certain graphic designs are trademarks of Energizer Brands, LLC and related subsidiaries and are used under license by Builder SAS. All other brand names are trademarks of their respective owners. Neither Builder SAS nor Energizer Brands, LLC is affiliated with the respective owners of their trademarks.

Let's get started.

You're excited to power up, so we'll keep this brief!

CONTENTS

1. SAFETY INSTRUCTIONS.....	5
2. YOUR PRODUCT.....	11
3. OPERATION.....	12
4. MAINTENANCE AND STORAGE.....	14
5. TECHNICAL DETAILS.....	16
6. DISPOSAL.....	17
7. DECLARATION OF CONFORMITY.....	18
8. WARRANTY.....	19
9. PRODUCT FAILURE.....	20
10. WARRANTY EXCLUSIONS.....	21

1. SAFETY INSTRUCTIONS

1.1 GENERAL POWER TOOL SAFETY WARNINGS

⚠ WARNING! Read all safety warnings, instructions, illustrations and specifications provided with this power tool. *Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.*

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1) Work area safety

- a) **Keep work area clean and well lit.** *Cluttered or dark areas invite accidents.*
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** *Power tools create sparks which may ignite the dust or fumes.*
- c) **Keep children and bystanders away while operating a power tool.** *Distractions can cause you to lose control.*

2) Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** *Unmodified plugs and matching outlets will reduce risk of electric shock.*
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** *There is an increased risk of electric shock if your body is earthed or grounded.*
- c) **Do not expose power tools to rain or wet conditions.** *Water entering a power tool will increase the risk of electric shock.*
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** *Damaged or entangled cords increase the risk of electric shock.*
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** *Use of a cord suitable for outdoor use reduces the risk of electric shock.*
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** *Use of an RCD reduces the risk of electric shock.*

3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** *A moment of inattention while operating power tools may result in serious personal injury.*
- b) **Use personal protective equipment. Always wear eye protection.** *Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.*
- c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to a power source and/or battery pack, picking up or carrying the tool.** *Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.*
- d) **Remove any adjusting key or wrench before turning the power tool on.** *A wrench or a key*

left attached to a rotating part of the power tool may result in personal injury.

- e) **Do not overreach. Keep proper footing and balance at all times.** *This enables better control of the power tool in unexpected situations.*
- f) **Dress properly. Do not wear loose clothing or jewelry. Keep your hair and clothing away from moving parts.** *Loose clothes, jewelry or long hair can be caught in moving parts.*
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** *Use of dust collection can reduce dust-related hazards.*
- h) **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** *A careless action can cause severe injury within a fraction of a second.*

4) Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.** *The correct power tool will do the job better and safer at the rate for which it was designed.*
- b) **Do not use the power tool if the switch does not turn it on and off.** *Any power tool that cannot be controlled with the switch is dangerous and must be repaired.*
- c) **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** *Such preventive safety measures reduce the risk of starting the power tool accidentally.*
- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** *Power tools are dangerous in the hands of untrained users.*
- e) **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation.** *If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.*
- f) **Keep cutting tools sharp and clean.** *Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.*
- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** *Use of the power tool for operations different from those intended could result in a hazardous situation.*
- h) **Keep handles and grasping surfaces dry, clean and free from oil and grease.** *Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.*

5) Battery tool use and care

- a) **Recharge only with the charger specified by the manufacturer.** *A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.*
- b) **Use power tools only with specifically designated battery packs.** *Use of any other battery packs may create a risk of injury and fire.*
- c) **When the battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** *Shorting the battery terminals together may cause burns or a fire.*
- d) **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** *Liquid ejected from the battery may cause irritation or burns.*

- e) **Do not use a battery pack or tool that is damaged or modified.** *Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.*
 - f) **Do not expose a battery pack or tool to fire or excessive temperature.** *Exposure to fire or temperature above 130°C may cause explosion.*
 - g) **Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** *Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.*
- 6) **Service**
- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** *This will ensure that the safety of the power tool is maintained.*
 - b) **Never service damaged battery packs.** *Service of battery packs should only be performed by the manufacturer or authorized service providers.*

1.2 SPECIFIC SAFETY WARNINGS FOR GARDEN PRUNERS

- 1) **Keep all parts of the body away from the blade. Do not try to remove cut material or to hold material to be cut when the blade is running.** *The blade continues to run after turning off the switch. A moment of inattention when using the garden pruner can lead to severe injury.*
- 2) **Carry the garden pruner by holding them by the handle when the blade is at a standstill.** *Take care not to actuate the switch. Carrying the garden pruner in a correct manner reduces the risk of unintended operation and injuries resulting from the blade.*
- 3) **Always put the cover on the blade when transporting or storing the garden pruner.** *Proper handling of the garden pruner reduces the risk of injury caused by the blade.*
- 4) **Please make sure all switches are turned off and the battery has been removed or switched off before removing jammed cut material or before performing maintenance works on the machine.** *Unexpected operation of the garden pruner when removing jammed material can cause severe injury.*
- 5) **Hold the garden pruner by the insulated gripping surfaces only, as the blade may contact hidden wiring.** *Blade accessory contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.*
- 6) **Keep any power cables away from the cutting area.** *Cables can be hidden in hedges and bushes where they may be accidentally cut by the blade.*
- 7) **Do not use the garden pruner in bad weather, especially if there is a risk of thunderstorms.** *This reduces the risk of being struck by lightning.*

1.3 ADDITIONAL INSTRUCTIONS FOR GARDEN PRUNERS

- 1) **Always hold the device by the device's handle and make sure you have a secure grip.** *Losing control of the device may result in personal injury.*
- 2) **Before starting work, search the working area for hidden objects, e.g. wire fences, hidden lines, etc.** *So as to prevent damage to the device and its components and to prevent the risk of an electric shock.*
- 3) **Ensure the secure footing and stable positioning of the device when working with it, especially when working on slopes. Do not use the device if the intended application requires climbing a ladder or working on similar unstable footprints. Do not overreach. Walking and carrying the device is possible, but do not use the device when walking.** *Loss of balance can lead to loss of control of the device and cause severe injury.*
- 4) **Always carry the garden pruner by holding them by the handle and when the blade is at a standstill. Always put on the protective cover after completion of the work.**

- 5) **Wear suitable working clothes such as sturdy shoes with non-slip soles, sturdy long trousers, gloves and protective glasses. Use hearing protection when using the device.** *Do not wear loose clothing or jewelry as these can be caught in moving parts.*
- 6) **Only use the device in sufficient daylight or with good artificial lighting.** *Lack of light or poor illumination of the working area can lead to accidents.*
- 7) **Never use the device with a damaged protective cover or protective device.** *A defective protective cover or protective device can no longer protect you from severe injury.*
- 8) **Only switch on the device if your hands and feet are out of reach of the cutting unit.** *This reduces the risk of injuries to hands or feet.*
- 9) **Always switch off the device and remove the battery from the device if the following is the case:**
 - *the device is left unattended.*
 - *before removing an obstruction.*
 - *before checking, cleaning or maintaining the device.*
 - *after contact with a foreign object.*
 - *if the device starts to vibrate abnormally.*
- 10) **Vibrations can be harmful to your hands and arms.** *Keep the vibration exposure time to a minimum.*
- 11) **Regularly check the blade for wear or damage.**
- 12) **Do not attempt to slow down the blade movement by pressing against the blade once the device is switched off.** *The blade could be damaged or cause a kickback.*
- 13) **Wait until the device has come to a standstill before putting it down.** *The blade could get caught resulting in a loss of control of the device.*

1.4 SPECIAL SAFETY INSTRUCTIONS FOR BATTERY-OPERATED TOOLS










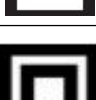






- 1) Ensure that the tool is switched off before inserting the battery. Inserting a battery into a tool that is switched on may result in accidents.
- 2) Recharge the batteries indoors only because the battery charger is designed for indoor use only. Risk of electric shock.
- 3) To reduce the electric shock hazard, unplug the battery charger from the mains before cleaning the charger.
- 4) Do not subject the battery to strong sunlight over long periods and do not leave it on a heater. Heat damages the battery and this is risk of explosion.
- 5) Allow a hot battery to cool before charging.
- 6) Do not open up the battery and avoid mechanical damage to the battery. Risk of short circuit and fumes may be emitted that irritate the respiratory tract. Ensure fresh air and seek medical assistance in the event of discomfort.
- 7) Do not use non-rechargeable battery. This could damage the appliance.
- 8) The recommended ambient temperature range for the charging system during charging is from 4°C to 40°C.
- 9) The recommended ambient temperature range for tool and battery storage is from 0°C to 50°C.
- 10) The recommended ambient temperature range for tool and battery use is from -5°C to 50°C.
- 11) Remove the battery from the device before storage.
- 12) Electrolyte leaking from the cells can cause damage to the skin, clothes or any other items exposed to it. If the electrolyte contacts the skin or clothes, wash thoroughly with clean water. If the electrolyte enters into the eyes, do not rub the eyes but flush them immediately with copious amounts of clean water such as tap water, and immediately consult a doctor.

- 13) Do not disassemble or modify the battery, which can cause short-circuiting between cells or between the cell and its wiring, and disables the battery's safety protection system. These can lead to electrolyte leakage, overheating or a cell or battery, bursting and fire.
- 14) Avoid casual or inadvertent shorting of a battery with metallic objects such as: wire, tools, neckless or hairpins, which can cause short-circuiting, which cause excess current flow, electrolyte leakage, heating of cells or batteries, bursting and fire.
- 15) Keep battery away from a fire or heat. The insulation materials will melt and the gas release vent and protection system will be damaged, causing electrolyte leakage, bursting and possibly fire.
- 16) Do not allow the battery to contact water or gets wet, if so it may short-circuit, overheat, rust or lose its functions.
- 17) Do not expose the battery to mechanical shock, for example, by dropping, throwing or crushing, causing electrolyte leakage, cell and battery heating, bursting and fire.
- 18) Avoid the battery directly connecting to an electric source such as a 12V car socket or car battery, which may cause excess current to flow at high voltage and can cause electrolyte leakage, overheating of a cell or battery, bursting and fire..

1.5 SAFETY INSTRUCTIONS FOR CHARGER


- 1) This charger can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the charger in the safe way and understand the hazards involved. Children shall not play with the charger. Cleaning and user maintenance of the charger shall not be made by children without adult supervision.**
- 2) If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**
- 3) To charge the battery, use only the charger supplied.**
- 4) Never charge non-rechargeable batteries.**
- 5) During charging, the batteries must be placed in a well ventilated area.**

1.6 SYMBOLS

	Conforms to relevant safety standards.
 	To reduce the risk of injury, the user must read and understand this manual before using this product.
	Wear eye and hearing protection.
	Wear protective gloves.
	Wear protective shoes.
	Danger!
	Do not expose to rain.
	Do not dispose of old appliances with domestic rubbish.
	Class II, double isolation (only for charger).
	Do not expose the the battery to water.
	Do not incinerate the battery.
	Ambient temperature of 40°C max, only for the battery.
	Indoor use only for charger.
	Recycling.
	Fuse.

2. YOUR PRODUCT

 2.1 PRODUCT DESCRIPTION

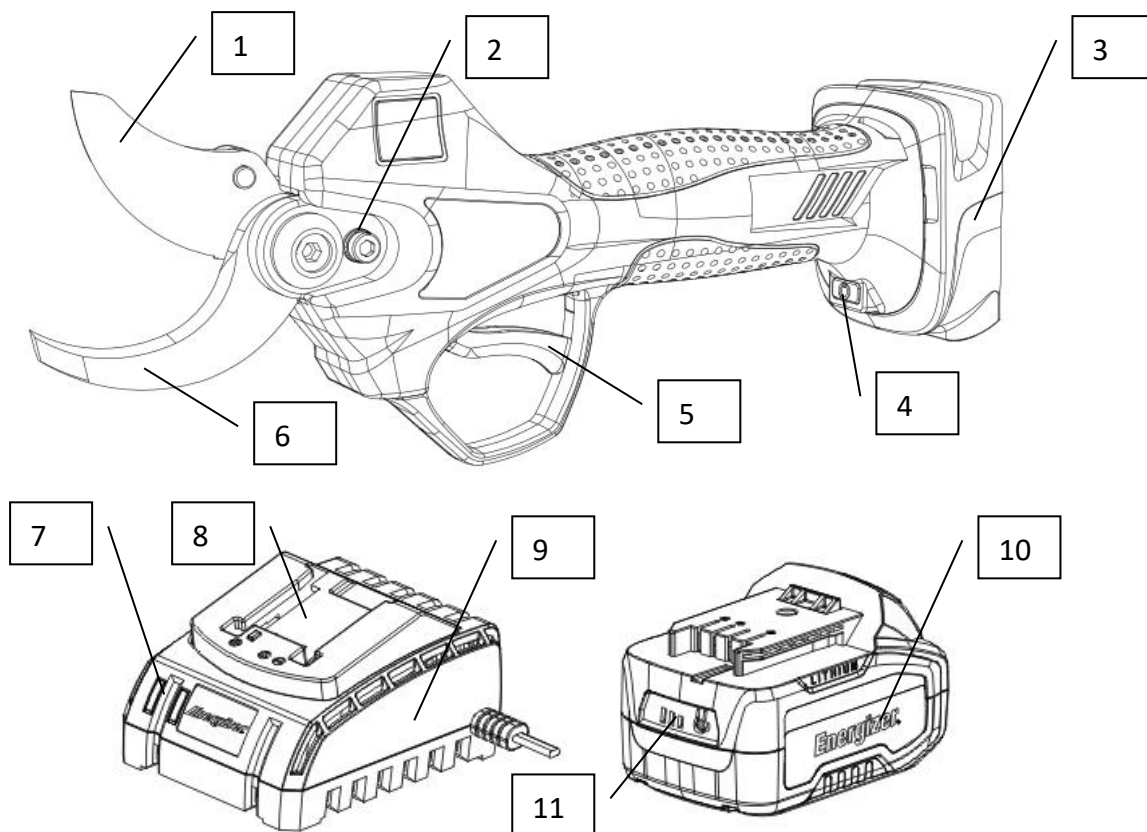

1. Movable blade
2. Axle pin
3. Battery pack insert interface
4. Power switch
5. Trigger switch
6. Fixed blade
7. Charge LED light indicator
8. Slot of battery charging
9. Charger (not provided)
10. Battery (not provided)
11. Battery capacity indicator

2.2 INTENDED USE

 
- 1) Only use the device:
 - a) Pruning fruit trees, shrubs as well as hedges.
 - b) Cutting and shortening of branches and twigs up to a thickness of 35 mm (soft wood; reduced diameter when using hard wood) whilst adhering to the technical data. The device is suitable for private and commercial use.
- 2) We recommend using the power tool with original accessories.
- 3) This device is not suitable for large-scale lawn care or for cutting large branches (see Technical data chapter).
- 4) The device is not suitable for cutting metals, wire, steel wire, stone or plastic.
- 5) Any other use than the one described in the chapter "Intended use" is regarded as reasonably foreseeable misuse.
- 6) People who use this device must: have read and understood the instructions, especially the Safety chapter.
- 7) The following persons must not use the device:
 - a) Children.

- b) Persons with reduced physical, sensory or mental capabilities.
- c) Persons with lack of experience and knowledge.
- d) Persons unfamiliar with the instructions.

2.3 SCOPE OF THE DELIVERY

Included in the case:

- 1) Electric Pruning Shears (1pc)
- 2) Tool Kit (1set)

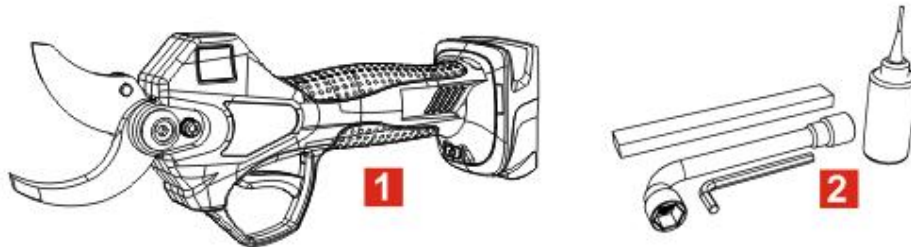


3. OPERATION

3.1 CHARGING THE BATTERY PACK

! IMPORTANT! The battery pack is not fully charged at the factory. Before attempting to charge them, thoroughly read all of the safety instructions.

 - 1) Assure that the charger you use is applicable to the battery pack.
- 2) Insert the charger into 220-240V~, 50-60Hz outlet. The indicator light (7) will turn green to show the power is connected.
- 3) Insert the battery (10) into the slot of charger (8). Make sure the contact with the charger is correct.
- 4) When charging, the indicator light (7) will turn red.
- 5) When the battery pack is fully charged, the indicator light (7) will turn green.
- 6) Frequently monitor the charger and battery pack while connected.
- 7) Unplug the charger and disconnect it from the battery pack when finished.
- 8) Allow the battery pack to cool completely before using it.
- 9) Store the charger and battery pack indoors, out of reach of children.

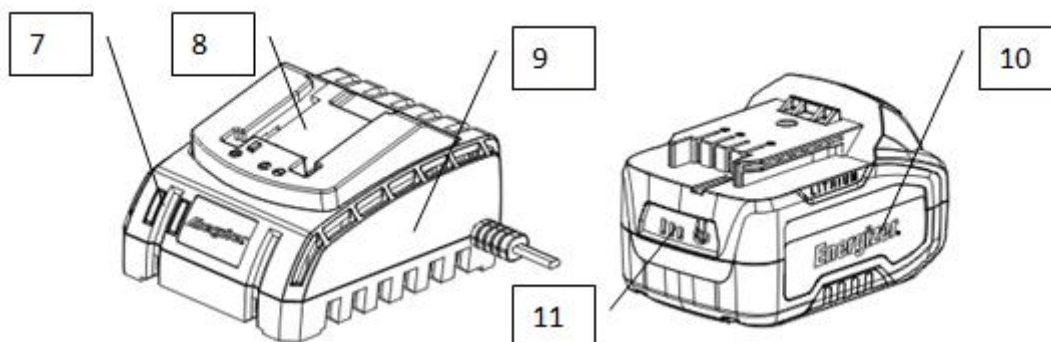

! NOTE: If the battery does not fit properly, disconnect it and confirm that the battery pack is the correct model for this charger as shown on the specification chart. Do not charge any other battery pack or any battery pack that does not securely fit the charger.

! NOTE: If battery is hot after continuous use in the tool, allow it to cool down to room temperature before charging. This will extend the life of your batteries.

! NOTE: Using your thumb or fingers to press the battery's release button in and pull the battery pack off at the same time.

3.2 BATTERY CAPACITY INDICATOR

There is a battery capacity indicator on the battery pack; you can check the capacity status of the battery if you press the button. Before using the machine, please press switch trigger to check if the battery is full enough to work properly.

3.3 INSERTING AND REMOVING THE BATTERY

! WARNING: Before making any adjustments ensure the pruner is switched off.

- 1) Remove the battery: press the battery release latch in and at the same time pull the battery pack off.
- 2) To insert the battery: push the battery pack onto the contacts of the tool.

3.4 SETTING UP

- 1) Insert the battery into the power connector of the pruner.
- 2) Lightly press the power switch (4) to turn it on.
- 3) Double click the trigger, the pruner blades will automatically open.
- 4) Normal pruning: press trigger to close the blades and release the trigger to open blades.
- 5) Blade closing: continue to press the trigger, a buzz means the blade will stay closed.
- 6) Before operation, in order to see if the pruner performances well, please press the trigger to close and release the trigger to open the blades without cutting anything. Repeat this for a few times.

3.5 FAILURE TIPS

Buzzer Sound Frequency Times	Failure	Solution Method
2	Communication abnormal	Check whether the cable connector of each part is loose
4	Motor phase loss	Send to local dealer for repair
Buzzer sounds continuously	Safety warning	Check if the body is touching the blade
The indicator light is steady red	Battery capacity failure	Check if battery capacity is low

3.6 ANTI-CUTTING HAND FUNCTION DESCRIPTION

- 1) After the scissors are turned on, the anti-cutting hand function is enabled by default. When the other hand of the operator touches the blade, a current loop is formed, the buzzer continuously emits a beep, and the scissors stop working.
- 2) Long press the trigger for 5 seconds and hear the buzzer sound twice, the anti-cutting hand function is turned off, the scissors can continue to work, but the anti-cutting hand function has

been lost

- 3) After the anti-cutting hand function is turned off, press and hold the trigger again and hear the buzzer twice, and the anti-cutting hand function can be turned on again
- 4) After the scissors are turned off and turned on again, the anti-cutting function is turned on by default.

⚠️ Note: When using pruning shears, the original intention of the anti-cutting hand function is to provide additional protection for the operator to reduce the occurrence of accidental injuries, but it does not rule out that it will fail and lose the protection function in the event of improper operation. During the operation, the operator should always operate carefully to prevent fingers from approaching the blade working area to prevent accidental injuries.

3.7 OPERATION PRECAUTIONS

- 1) Do not cut branches beyond the specified diameter indicated, do not cut hard items such as metals, stone or any other non-plant materials. If the blades are worn or damaged, please replace the blades.
- 2) Keep the pruning shears clean, use a clean cloth to clean the pruning shears, battery and charger (do not use any abrasive or solvent-based cleaning agent), use a soft brush or a dry to clean the dust off the pruning shears head.
- 3) Do not immerse the pruning shears, battery or charger in any liquid.
- 4) Follow instructions as given for proper use of the pruning shears, do not use the pruning shears when the tool itself, battery or charger is damaged.
- 5) Do not use the pruning shears if it could not operate or shut down properly, send for servicing immediately. It is dangerous to use the pruning shears when the tool could not operate or shut down properly.
- 6) Please ensure the power pruner is powered OFF during any adjustment, changing accessories or storage. This protective measure aims to reduce the risk of accidental pruning shears activation.
- 7) Please ensure the blades are closed when not in use, storage of the pruning shears must keep out of reach from children, do not allow any person who is not familiar with the pruner operation or instruction to use the pruning shears, it is dangerous to use the pruning shears without proper training and understanding.
- 8) The use of the pruning shears must comply with instructions stated in this manual and methods of use as well as taking in considerations of the working environment and nature of work undertaken. The use of the pruning shears not within its stated capability and specifications is dangerous.
- 9) Remove all dirt from the moving and fixed blades after each use, thereafter apply lubricant on the blade side where both moving and fixed blade contact. This will ensure the blades are maintained in good conditions and reduce resistance during use prolonging the pruner and blade lifespan.

4. MAINTENANCE & CLEANING

4.1 MAINTENANCE

Activities required before starting maintenance

Warning of electrical voltage

Do not touch the mains plug or the battery with wet or damp hands.

- Switch the device off.
- Allow the device to cool down completely.
- Remove the battery from the device.

Maintenance tasks which require the housing to be opened must only be carried out by authorized specialist companies or by SWAP.

Notes on maintenance

- Keep the blade sharp and free of rust by regularly checking it and greasing it with suitable grease or penetrating oil.

Inside the device, there are no parts that need to be maintained or lubricated by the user.

Safety signs and labels on the device

Check the safety signs and labels attached to the device at regular intervals.

Replace illegible safety signs!

Safety signs on the battery and the charger

Check the safety signs attached to the battery and the charger at regular intervals. Replace illegible safety signs!

4.2 CLEANING

The device should be cleaned before and after each use.

Warning of electrical voltage

There is a risk of a short-circuit due to liquids penetrating the housing!

Do not immerse the device and the accessories in water.


Make sure that no water or other liquids can enter the housing.

 
- Clean the device with a soft, damp and lint-free cloth. Make sure that no moisture enters the housing. Protect electrical components from moisture. Do not use any aggressive cleaning agents such as cleaning sprays, solvents, alcohol-based or abrasive cleaners to dampen the cloth.
- Dry the device with a soft, lint-free cloth.
- Clean the blades with a soft brush and oil them with universal oil spray after each use.
- Keep the connecting terminals on the device and charger clean.

4.3 BLADE REPLACEMENT

When the moving blade no longer crosses the fixed blade throughout its length, or when the power pruner could no longer have a clean cut after grinding, blade replacement is recommended with the following steps.

- 1) For safety, before replacing the blade, please ensure the pruning shear is powered OFF and the power cable is disconnected from the battery.
- 2) Refer to the diagrams below on the procedure to replace the blade.
- 3) Clean up the blade after replacing, connect to power cable to battery, power ON to test the blade, close up the blade to complete the whole procedure.

 **Note:** Fixed and movable blades can be replaced individually; do not worry about the size of the replacement blade aperture, the opening will automatically return to normal size during power ON after completing blade replacement.

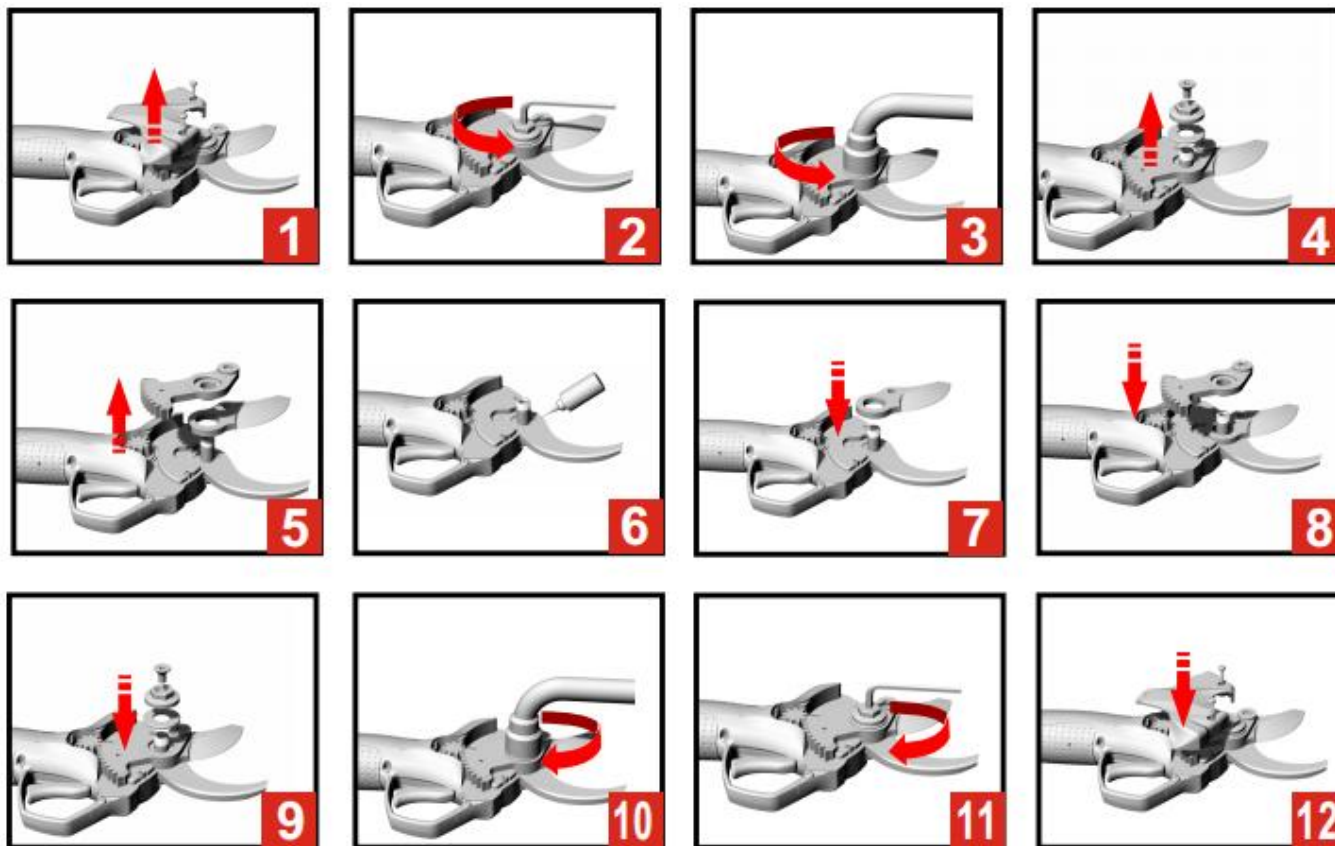

5. TECHNICAL DATA

Rated voltage	20V d.c.
Motor type	Brushless
Motor speed	18000/min
Cutting capacity for soft branches	Ø35mm max
Cutting capacity for hard branches	Ø25mm max
Blade material	SK5
Type of protection	IPX0
Weight (without battery)	1.3kg
Battery type	EZB2A, 20V d.c. 2.0Ah, Lithium-ion
Charger type	EZCR20V-1, charger with VDE plug Input: 220-240V~ 50-60Hz, 65W Output: 21V d.c., 2,5A
Sound pressure level	Max. LpA =68.7dB(A), K= 3 dB(A)
Sound power level	Max. LwA =79.7dB(A), K= 3 dB(A)
Sound power level guarantee	83 dB(A)
Vibrations Ah _{AG}	Max. ah,AG=1.14m/s ² , K=1,5m/s ²

INFORMATION

- The declared vibration total value(s) and the declared noise emission value(s) have been measured in accordance with a standard test method and may be used for comparing one tool with another.
- The declared vibration total value(s) and the declared noise emission value(s) may also be used in a preliminary assessment of exposure.

WARNING!

- The vibration and noise emissions during actual use of the power tool can differ from the declared values depending on the ways in which the tool is used especially what kind of workpiece is processed.
- Need to identify safety measures to protect the operator that are based on an estimation of exposure in the actual conditions of use (taking account of all parts of the operating cycle such as the times when the tool is switched off and when it is running idle in addition to the trigger time).
- Wear hearing protection.

6. DISPOSAL



Electrical products should not be discarded with household products. According to the European Directive 2012/19/EU on waste electrical and electronic equipment and its implementation into national law, electrical products used must be collected separately and disposed of at collection points provided for this purpose. Talk with your local authorities or dealer for advice on recycling.

BATTERY PACK



Li-ion

This product contains Li-ion. To preserve natural resources, please recycle or dispose of batteries properly. Local, state or federal laws may prohibit disposal of Li-ion batteries in ordinary trash. Consult you local waste authority for information regarding available recycling and/or disposal options.

7. DELARATION OF CONFORMITY



BUILDER SAS

32 rue Aristide Bergès - Z.I. du Casque - 31270 Cugnaux - France

declares that,

Product: CORDLESS PRUNNER

Trade mark: ENERGIZER

Model: EZ20VST35N

Serial number: 20221015089-20221015288

Is in conformity with the essential requirements and other relevant provisions of the applicable European Directives, based on the application of European harmonized standards. Any unauthorized modification of the apparatus voids this declaration.

European Directives (including, if applicable, their amendments up to the date of signature);

Rohs directive 2011/65/EU + (EU) 2015/863

2014/30/EU; 2006/42/EC

LVD Directive 2014/35/UE

European harmonized standards

EN 62841-1: 2015

EN ISO 12100:2010

EN IEC55014-1:2021

EN IEC55014-2:2021

EN IEC 61000-3-2:2019

EN 61000-3-3:2013+A1:2019

EN 60335-1:2012+A11:2014+A13:2017+A1:2019+A14:2019+A2:2019

EN 60335-2-29: 2004+A2:2010+A11:2018

EN 62233:2008

Cugnaux, 23/09/2022

Philippe MARIE / PDG

Responsible of the technical file: Mr Olivier Patriarca

8. WARRANTY

Energizer[®]

WARRANTY

The manufacturer guarantees the product against defects in material and workmanship for a period of 2 years from the date of the original purchase. The warranty only applies if the product is for household use. The warranty does not cover breakdowns due to normal wear and tear.

The manufacturer agrees to replace parts identified as defective by the designated distributor. The manufacturer does not accept responsibility for the replacement of the machine, in whole or in part, and/or ensuing damage.

The warranty does not cover breakdowns due to:

- insufficient maintenance.
- abnormal assembly, adjustment or operations of the product.
- parts subject to normal wear and tear.

The warranty does not extend to:

- shipping and packaging costs.
- using the tool for a purpose other than that for which it was designed.
- the use and maintenance of the machine done in a manner not described in the user manual.

Due to our policy of continuous product improvement, we reserve the right to alter or change specifications without notice. Consequently, the product may be different from the information contained therein, but a modification will be undertaken without notice if it is recognized as an improvement of the preceding characteristic.

READ THE MANUAL CAREFULLY BEFORE USING THE MACHINE.

When ordering spare parts, please indicate the part number or code, you can find this in the spare parts list in this manual. Keep the purchase receipt; without it, the warranty is invalid. To help you with your product, we invite you to contact us by phone or via our website:

- **+33 (0)9.70.75.30.30**
- **<https://services.swap-europe.com/contact>**

You must create a "ticket" via the web platform.

- Register or create your account.
- Indicate the reference of the tool.
- Choose the subject of your request.
- Describe your problem.
- Attach these files: invoice or sales receipt, photo of the identification plate (serial number), photo of the part you need (for example: pins on the transformer plug which are broken).



9. PRODUCT FAILURE

WHAT TO DO IF MY MACHINE BREAKS DOWN?

If you bought your product in a store:

- a) Empty the fuel tank if your product has one.
- b) Make sure that your machine is complete with all accessories supplied, and clean! If this is not the case, the repairer will refuse the machine.

Go to the store with the complete machine and with the receipt or invoice.

If you bought your product on a website:

- a) Empty the fuel tank if your product has one.
- b) Make sure that your machine is complete with all accessories supplied, and clean! If this is not the case, the repairer will refuse the machine.
- c) Create a SWAP-Europe service ticket on the site: <https://services.swap-europe.com>. When making the request on SWAP-Europe, you must attach the invoice and the photo of the nameplate (serial number).
- d) Contact the repair station to make sure it is available before dropping off the machine.

Go to the repair station with the complete machine packed, accompanied by the purchase invoice and the station support sheet downloadable after the service request is completed on the SWAP-Europe site.

For machines with engine failure from manufacturers BRIGGS & STRATTON, HONDA and RATO, please refer to the following instructions.

Repairs will be done by approved engine manufacturers of these manufacturers, see their site:

- <http://www.briggsandstratton.com/eu/fr>
- <http://www.honda-engines-eu.com/fr/service-network-page;jsessionid=5EE8456CF39CD572AA2AEEDFD290CDAE>
- <https://www.rato-europe.com/it/service-network>

Please keep your original packaging to allow for after-sales service returns or pack your machine with a similar cardboard box of the same dimensions.

For any question concerning our after-sales service you can make a request on our website <https://services.swap-europe.com>

Our hotline remains available at +33 (9) 70 75 30 30.



10. WARRANTY EXCLUSIONS

THE WARRANTY DOES NOT COVER:

- Start-up and setting up of the product.
- Damage resulting from normal wear and tear of the product.
- Damage resulting from improper use of the product.
- Damage resulting from assembly or start-up not in accordance with the user manual.
- Breakdowns related to carburetion beyond 90 days and fouling of carburetors.
- Periodic and standard maintenance events.
- Actions of modification and dismantling that directly void the warranty.
- Products whose original authentication marking (brand, serial number) has been degraded, altered or withdrawn.
- Replacement of consumables.
- The use of non-original parts.
- Breakage of parts following impacts or projections.
- Accessories breakdowns.
- Defects and their consequences linked to any external cause.
- Loss of components and loss due to insufficient screwing.
- Cutting components and any damage related to the loosening of parts.
- Overload or overheating.
- Poor power supply quality: faulty voltage, voltage error, etc.
- Damages resulting from the deprivation of enjoyment of the product during the time necessary for repairs and more generally the costs related to the immobilization of the product.
- The costs of a second opinion established by a third party following an estimate by a SWAP-Europe repair station.
- The use of a product which would show a defect or a breakage which was not the subject of an immediate report and/or repair with the services of SWAP-Europe.
- Deterioration linked to transport and storage*.
- Launchers beyond 90 days.
- Oil, petrol, grease.
- Damages related to the use of non-compliant fuels or lubricants.

* In accordance with transport legislation, damage related to transport must be declared to carriers within 48 hours maximum after observation by registered letter with acknowledgement of receipt.

This document is a supplement to your notice, a non-exhaustive list.

Attention: All orders must be checked in the presence of the delivery person. In case of refusal by the delivery person, you must simply refuse the delivery and notify your refusal.

Reminder: The reserves do not exclude the notification by registered letter with acknowledgement within 72 hours.

Information: Thermal devices must be wintered each season (service available on the SWAP-Europe site). Batteries must be charged before being stored.

Energizer®