

Energizer®



CORDLESS HEDGE TRIMMER EZ20VTHPC-UK USER GUIDE

Energizer®

©2019 Energizer. Energizer and certain graphic designs are trademarks of Energizer Brands, LLC and related subsidiaries and are used under license by Builder SAS.

All other brand names are trademarks of their respective owners.

Neither Builder SAS nor Energizer Brands, LLC is affiliated with the respective owners of their trademarks

Let's get started.

You're excited to power up, so we'll keep this brief!

1. SAFETY WARNINGS



WARNING Read all safety warnings and all instructions. *Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.*

Save all warnings and instructions for future reference. *The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.*

1) Work area safety

- a) **Keep work area clean and well lit.** *Cluttered or dark areas invite accidents.*
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** *Power tools create sparks which may ignite the dust or fumes.*
- c) **Keep children and bystanders away while operating a power tool.** *Distractions can cause you to lose control.*

2) Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** *Unmodified plugs and matching outlets will reduce risk of electric shock.*
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** *There is an increased risk of electric shock if your body is earthed or grounded.*
- c) **Do not expose power tools to rain or wet conditions.** *Water entering a power tool will increase the risk of electric shock.*
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** *Damaged or entangled cords increase the risk of electric shock.*
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** *Use of a cord suitable for outdoor use reduces the risk of electric shock.*
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** *Use of an RCD reduces the risk of electric shock.*

NOTE the term "residual current device (RCD)" may be replaced by the term "ground fault circuit interrupter (GFCI)" or "earth leakage circuit breaker (ELCB)".

3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** *A moment of inattention while operating power tools may result in serious personal injury.*
- b) **Use personal protective equipment. Always wear eye protection.** *Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.*
- c) **Prevent unintentional starting. Ensure the switch is in the off-position connecting to power source and/or battery pack, picking up or carrying the tool.** *Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.*
- d) **Remove any adjusting key or wrench before turning the power tool on.** *A wrench or a key left attached to a rotating part of the power tool may result in personal injury.*
- e) **Do not overreach. Keep proper footing and balance at all times.** *This enables better control of the power tool in unexpected situations.*
- f) **Dress properly. Do not wear loose clothing or jewelry. Keep your hair, clothing and gloves away from moving parts.** *Loose clothes, jewelry or long hair can be caught in moving parts.*
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** *Use of dust collection can reduce dust-related hazards.*

4) Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.** *The correct power tool will do the job better and safer at the rate for which it was designed.*
- b) **Do not use the power tool if the switch does not turn it on and off.** *Any power tool that cannot be controlled with the switch is dangerous and must be repaired.*

c) **Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** *Such preventive safety measures reduce the risk of starting the power tool accidentally.*

d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** *Power tools are dangerous in the hands of untrained users.*

e) **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** *Many accidents are caused by poorly maintained power tools.*

f) **Keep cutting tools sharp and clean.** *Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.*

g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** *Use of the power tool for operations different from those intended could result in a hazardous situation.*

5) Battery tool use and care

a) **Recharge only with the charger specified by the manufacturer.** *A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.*

b) **Use power tools only with specifically designated battery packs.** *Use of any other battery packs may create a risk of injury and fire.*

c) **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** *Shorting the battery terminals together may cause burns or a fire.*

d) **Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** *Liquid ejected from the battery may cause irritation or burns.*

6) Service

a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** *This will ensure that the safety of the power tool is maintained*

Hedge trimmer safety warnings:

- **Keep all parts of the body away from the cutter blade. Do not remove cut material or hold material to be cut when blades are moving. Make sure the switch is off when clearing jammed material.** *A moment of inattention while operating the hedge trimmer may result in serious personal injury.*
- **Carry the hedge trimmer by the handle with the cutter blade stopped. When transporting or storing the hedge trimmer always fit the cutting device cover.** *Proper handling of the hedge trimmer will reduce possible personal injury from the cutter blades.*
- **Keep cable away from cutting area.** *During operation the cable may be hidden in shrubs and can be accidentally cut by the blade.*
- Check for any foreign objects in the hedge, such as wire fences.
- Hold the hedge trimmer correctly, for example with both hands if it is equipped with two handles.
- Anyone who uses or performs maintenance work on this machine must be familiar with these instructions and are aware of possible hazards. Prevent children, sick people or not able to use the machine. While you are standing in the work area, be aware of the presence of children
- Observe local or regional safety measures in your area. This also applies to all provisions relating to safety at the workplace and to health prevention in the workplace

- The manufacturer cannot be held responsible if the machine has been modified in an unauthorized manner or in such a way as to constitute a final damage.
- Observe the nature of the area where the work is being performed.
- When cutting, make sure you have good lighting.
- Ensure your stability when working on slopes or on irregular surfaces or in the presence of moisture, snow or frost.
- Do not allow unauthorized persons to approach the machine. Visitors and spectators, especially children, the sick or the disabled, must not have access to the work area.
- Take precautions when storing the tool. When the machine is not in use, it must be stored in a dry, if possible high or protected place, in order to prevent access.
- Use the tool for the tasks you want to perform. In this context, it is advisable, for example, to avoid using a tool or a small accessory for a job requiring the use of a heavy tool.
- Use the tool only for the purpose for which it was designed.
- Wear appropriate clothing. Your outfit should be appropriate to work and not bother you. Wear protective clothing that protects against cuts.
- Use personal protective equipment. This includes at least: safety shoes, goggles, ear protectors, protective gloves, etc.
- Never use an unsafe cutting tool. There is a risk of injury from projected objects.
- Before starting the trimmer, remove all the keys and check that the tool is securely assembled.
- Stay alert at all times. Be attentive to what you are doing. Make use of your common sense. Do not use the tool when you are tired. Do not use the tool under the influence of alcohol, drugs or drugs that alter or decrease concentration. Also, do not use the tool when you are sick.
- After using the machine for an extended period of time, you may experience circulation problems in your hands. Extend the duration of use by wearing appropriate gloves and taking regular breaks. Please note that the running time of the motorized machine is shortened due to user discomfort due to poor circulation, too low outside temperature or excessive machine driving power during the works.
- Take account of damaged components. Check the machine before using it. Damaged components must be repaired or replaced as soon as possible by authorized persons. Defective switches must be replaced by an authorized dealer. Do not use the machine if it cannot be turned off or turned on with a switch. When repairs are required, please contact your nearest dealer.
- Before any adjustment or maintenance operation, the motor must always be switched off.
- Use only approved components. Use only identical replacement parts as replacements during maintenance or repair work. Contact your authorized dealer for advice. Do not use metal swivel chains and flail blades.
- When transporting and storing the tool, make sure it is secure. Put the protective device on the blade when the machine is to be transported, stored, cleaned and maintained
- To avoid damage or injury, be careful when handling and transporting the tool. Do not forget to put the protective device on the blade each time.
- Do not use the device when you are tired, sick under the influence of alcohol or drugs.
- Use only accessories and protections recommended by the manufacturer. It is recommended that your dealer provide a list of recommended accessories if necessary. Use of parts not recommended by the manufacturer may result in personal injury, accident and malfunction of the tool.
- Maintain a good balance when using the tool. Stay firm feet on the ground so as not to fall. Do not lean too much, do not put yourself in positions that may unbalance and hurt you. Use the harness supplied with the tool.
- Periodically check that the cutting elements stop when the machine is idling.

- Warning! The use of another cutting head or other accessories and extensions, even when specifically recommended, may result in injury or property damage.
- The machine must not be used for purposes other than those intended. Any divergent use of these purposes must therefore be considered as unauthorized use. The user is solely responsible, thereby systematically releasing the manufacturer from any liability for personal injury or damage resulting from such unauthorized use.
- Keep persons at a minimum distance of 15 mm from the work area.

Intended Use

Your hedge trimmer is a device used by a person to cut hedges and shrubs by working with one or more blades arranged linearly and back and forth. A potential hazard exists if the device is used for other purposes. Improper handling of the hedge trimmer increases the risk of blade injury. Only the use of spare parts and accessories approved by the manufacturer is permitted. Specially design to work with Energizer range of battery and charger.

Any other use may be dangerous and severely damage the trimmer. Examples of improper use may include, but not limited to:

- General grass cutting and in particular near kerbs;
- Chopping material for composts;
- Using the machine for cutting non plant material

Residual risks

- Cuts from the blade
- Inhalation of particles of material to be cut
- Projection of the parts of the cutting blades
- Contact with uncovered cutting head (wounds, cuts)
- Contact with tool in operation (injuries, cuts)
- Development of toxic dusts / fumes when used in confined spaces (vomiting / nausea)
- Hearing loss in the absence of proper hearing protection

Symbols



Warning symbol



Read the instructions manual



Wear an ocular protection



Wear a hearing protection



Do not expose to rain or humidity



Remove the battery when the tool is damaged and before maintenance. Read the instructions.



Wear protective gloves



Wear antiskid protective shoes=



Be aware of the cutting elements



 
Maximum height of use (15 meters)




Risk of projections. Keep bystanders away.

2. YOUR PRODUCT

a. Description

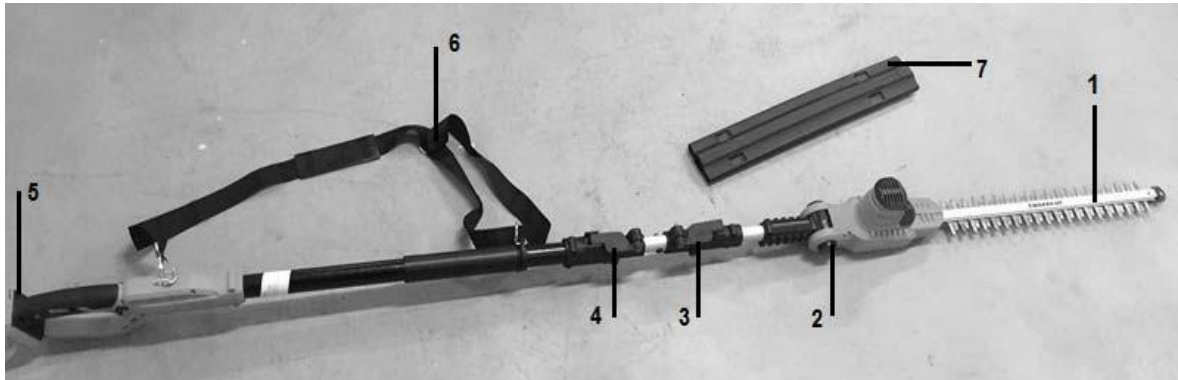

 1. Cutting blade
2. Pole position knob
3. Quick release (install the pole)
4. Quick release (telescopic handle)
5. Battery port
6. Harness
7. Blade guard

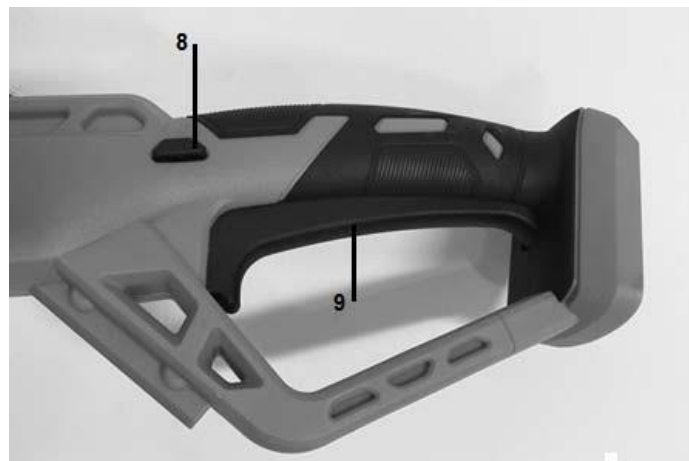

8. Safety lock-out switch
9. ON/OFF switch

The tool is provided with a hexagon key.

b. Technical data

Voltage	20 V d.c.
Cutting length	420mm
Mass of tool	4,1 kg
Sound pressure level	LpA: 77,3 dB(A) K= 3 dB(A)
Measured sound power level	LwA: 88,1 dB(A) K= 3 dB(A)
Guarantee sound power level	LwA: 92dB(A)
Vibration	<2,5m/s ² K=1,5 m/s ²

Information

The declared vibration total value has been measured in accordance with a standard test method and may be used for comparing one tool with another;

The declared vibration total value may also be used in a preliminary assessment of exposure.

Warning

The vibration emission during actual use of the power tool can differ from the declared total value depending on the ways in which the tool is used;
need to identify safety measures to protect the operator that are based on an estimation of exposure in the actual conditions of use (taking account of all parts of the operating cycle such as the times when the tool is switched off and when it is running idle in addition to the trigger time).

Wear hearing protection.

3. CHARGING

a. **Charging**

Energizer range battery and charger are sold together. Battery has not been fully charged at the factory.

Before using it for the first time, charge the screwdriver's battery for 60min to 130min. Insert the charger plug into the charging socket and plug the charger into a 230V/50Hz electrical outlet. Detailed information please read carefully the manual for battery and charger.

Charge status

To display the amount of charge left in the battery, press the charge level indicator button.



Charge level indicator	Amount of charge remaining
	0-10%
	10-25%
	25-50%
	50-75%
	75-100%

4. ASSEMBLY

a. **Installing the pole**

Unscrew the pad and remove the screw which is on the tool. Install the pole in the unit until it clicks in place. Reinstall the pad and screw it in place.

Note: the pad must be put on the vertical way (against the tool) to secure the pole.



b. **Fixing/attaching the shoulder strap**

Hook the shoulder strap into the two attachments.



Adjust the length of the shoulder strap to your size.

c. Installing the battery pack

Warning! Always remove battery pack from your tool when you are assembling parts, making adjustments, cleaning, carrying, transporting or when not in use. Removing battery pack will prevent accidental starting that could cause serious personal injury.

NOTE: To avoid serious personal injury, always remove the battery pack and keep hands clear of the lock-out button when carrying or transporting the tool.

Slide the battery pack into the tool base (Note the battery has raised ribs which allows it to fit into the pole saw only one way). Make sure the battery pack snaps into place and that battery pack is secured in the tool before beginning operation.

Improper installation of the battery pack can cause damage to internal components.



d. Removing the battery pack

Locate the battery release catch on the top of the battery and press downwards. Whilst holding down the battery release catch slide the battery pack away from the tool.



5. OPERATION

a. Switching on and off

NOTE: Before using the hedge trimmer, the protective case has to be removed from the cutter bar.

Switching on

- Press the safety lock-out switch (1). Keep it pressed and then press the ON/OFF switch (2).
- The safety lock-out switch can be released now.



Switching off

- Release the ON/OFF switch.

 
b. Adjusting the telescopic handle

The telescopic handle can be adjusted continuously by means of the quick release:

- o Loosen the quick release by pulling upwards.



- Adjust the length by pushing or pulling as required.

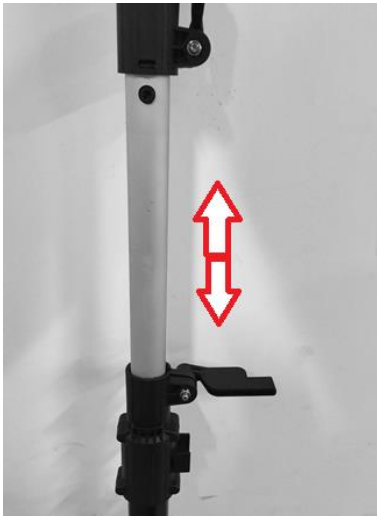


- Close the quick release by pulling it back down.


NOTE: If the quick release does not have enough tension, this can be tightened with the assembly tool

c. Working position

 
The hedge trimmer can be operated in 4 different working positions.

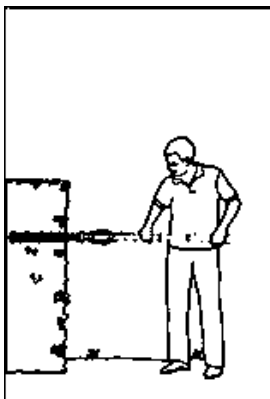

 Lateral cutting: Telescopic handle refracted

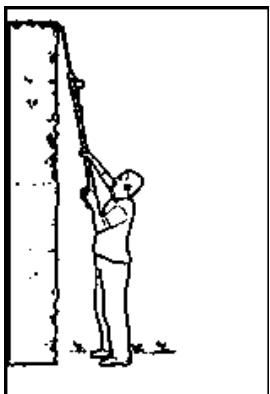

 High vertical cutting: Telescopic handle extended

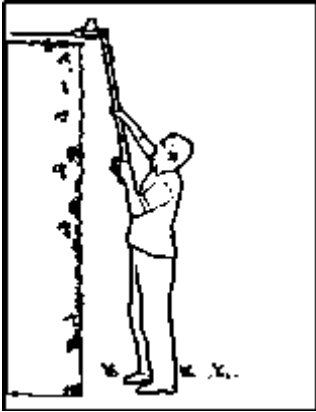

handle extended

High horizontal cutting: Motor unit set at 75°, telescopic



extended

 
Low cutting: Motor unit set at -60°, telescopic handle

d. **Adjusted motor unit angle**

For high and low cutting, you can adjust the angle of the motor unit in 15° steps from 75° to -60°.

Remove the battery pack from the tool.

Press the two release buttons at the same time.

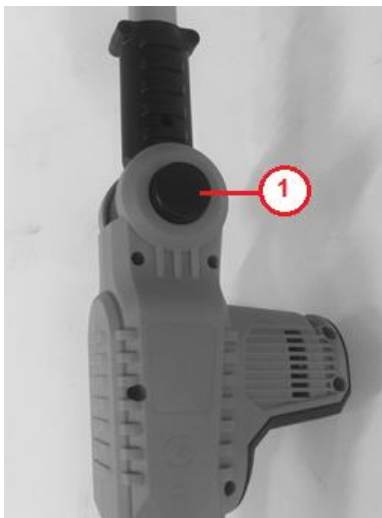

Adjust the angle of the motor unit in the desired direction.

Let go of the release buttons and the motor unit will click into place.

Replace the battery pack on the tool.

6. MAINTENANCE AND STORAGE

a. Cleaning and maintenance

A WARNING! RISK OF INJURY! Always switch the appliance off and remove the battery before carrying out any work on the appliance.

- The appliance must always be kept clean, dry and free from oil or grease.
- Never allow liquids to get into the appliance.
- Use a soft, dry cloth to clean the housing. Never use petrol, solvents or cleansers which can damage plastic.
- Check the hedge trimmer for loose screws on the cutter bar and tighten these if necessary.
- Remove stuck cuttings.
- Maintain the cutting mean with appropriate lubricating oil.
- If a lithium-ion battery is to be stored for an extended period, the charge level should be checked regularly. The optimum charge level is between 50% and 80%. The optimum storage climate is cool and dry.

c. Transport and storage

- a. Disconnect the battery pack before transport and storage.
- b. Use the protective case for transporting the appliance.
- c. Ensure that the appliance cannot switch on during transport.
- d. Always clean the appliance thoroughly before storing.
- e. Store the appliance in a dry place and out of the reach of children.
- f. Store the appliance horizontally or secured against falling.

7. DISPOSAL



Electrical products should not be discarded with household products. According to the European Directive 2012/19/EU on waste electrical and electronic equipment and its implementation into national law, electrical products used must be collected separately and disposed of at collection points provided for this purpose. Talk with your local authorities or dealer for advice on recycling.



WARRANTY

The manufacturer warrants the product against defects in materials and workmanship for a period of 2 years from the date of purchase to the original purchaser. The guarantee applies when the product is used as a home tool. The warranty does not extend for failures due to normal wear and tear.

The manufacturer agrees to replace the spare parts that are classified as defective by a designated distributor. The manufacturer will not accept responsibility for the replacement of the machine, either partially or in full, and / or consequential damages.

The warranty does not cover failures due to:

- Insufficient maintenance.
- Assembly, adjustment or abnormal operation of the product.
- Spare parts that are subject to wear.

Nor does the guarantee extend to:

- Cost of freight and packaging.
- The use of the tool for any other purpose than for which it was designed
- Use and maintenance of the machine in a manner not described in the user's manual.

As part of our policy of continuous product improvement, we reserve the right to alter or modify specifications without prior notice. As a result, the product may differ from the information contained herein, but any alteration will only be implemented without prior notice if it is classified as an improvement of the previous specification.

READ THE MANUAL CAREFULLY BEFORE USING THE MACHINE.

When ordering spare parts, please quote the part number or code, this can be found in the parts list included in this manual.

Keep the purchase receipt; Without it, no guarantee will be valid.

In order to get help about your pole hedge trimmer we invite you to go through this link or to call us by phone +33 (0)8.20.20.22.68:

<https://services.swap-europe.com/contact>

You need to create a "ticket" via their platform.

- Login or create your account
- Put your tool reference
- Choose the subject of your request
- Explain your problem
- Attach these files: the invoice or receipt, the nameplate picture (serial number), the picture of the part you need (for example: pins on the transformer plug that broke away)

We offer you a warranty extension to 1 year. To profit it, please follow the below proceeding:

- Connect on the website:
- Insert your contact details
- Register your tool with:
 - The reference
 - The serial number
 - The date you bought the tool
- Generate automatically the PDF warranty certificate and print it.

8. DECLARATION OF CONFORMITY



EC Declaration of conformity

BUILDER SAS
32, rue Aristide Bergès - ZI 31270 Cugnaux – France

Declares that the machine

Designation: CORDLESS POLE HEDGE TRIMMER
Model: EZ20VTHPC-UK

Serial number :

Is in conformity with the European Directives:

Machine Directive 2006/42/EC

EMC Directive 2014/30/EU

ROHS Directive 2011/65/EU

Noise emission Directive 2000/14/EC Annex V + 2005/88/EC

Measured sound power level	LwA: 88,1 dB(A) K= 3 dB(A)
Guarantee sound power level	LwA: 92dB(A)

This product is also in conformity with the following standards:

EN60745-1:2009+A11:2010

EN60745-2-15:2009+A1:2010

EN ISO 10517:2009+A1:2013

EN55014-1:2006+A1:2009+A2:2011

EN55014-2:2015

The technical documentation is kept by: Olivier Patriarca

Philippe MARIE / PDG
Cugnaux, 10/07/2019