

FEIDER

MACHINES



SHREDDER

FBVES2800-UK

USER GUIDE

CAUTION: Read the instructions before using this machine.

CONTENET

1. SAFETY INSTRUCTIONS	3
2. EXPLANATION OF SYMBOLS	13
3. PARTS LIST	<u>14</u>
4. CHARACTERISTICS	<u>14</u>
5. GETTING STARTED	<u>15</u>
6. OPERATION	<u>16</u>
7. MAINTENANCE AND STORAGE	<u>18</u>
8. DECLARATION OF CONFORMITY	<u>19</u>
9. WARRANTY	<u>20</u>
10. PRODUCT FAILURE	<u>21</u>
11. WARRANTY EXCLUSIONS	<u>22</u>

1. SAFETY INSTRUCTIONS



Before using this product, carefully read and understand all the safety recommendations and instructions for safe operation.

Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Keep this manual handy so that you may refer to it later whenever any questions arise.

Always be sure to include this manual when selling, lending, or otherwise transferring the ownership of this product.



IMPORTANT! This product should only be used by experienced users, who have thoroughly read this instruction manual.

Only persons who have received adequate instructions should use the product.

Never allow children, persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge or people unfamiliar with these instructions to use the machine.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children.

Never allow children or persons unfamiliar with these instructions to use the product

1.1- General safety instructions

Read the instructions carefully. Be familiar with the controls and the proper use of the appliance

- For safe operation



1. Never operate this product when you are fatigued, ill, or upset, or under the influence of medication that may make you drowsy, or if you are under the influence of alcohol or drugs. Keep in mind, that the operator or user is responsible for accidents or hazards occurring to other people or their property.



2. Wear personnel protective equipment: gloves; safety footwear, snug fitting clothing, goggles or face protection, hearing and head protection devices.

Use vibration-proof gloves.

3. Never allow people unfamiliar with these instructions to use the appliance. Local regulations may restrict the age of the operator.



Never operate the appliance while people, especially children, or pets are nearby. Do not start or use the product when persons are nearby.

Keep bystanders (esp. children) and animals out of the work area. Children, pets and bystanders should be kept away when you start or operate the product

Keep children away.

The use of this product by children is forbidden.

Keep the product away from children or from their environment.

Children should be supervised to ensure that they do not play with the product.

Never leave the product unattended especially when children are nearby.

4. Never start working until you have a clear work area, and secure footing,
5. Keep all parts of your body away from the feeding opening when the engine is running.
6. Before you start the product, make sure the product is properly assembled and that insertion chamber is not obstructed.



7. All product service, other than the maintenance listed in the Instructions Manual, should be performed by competent service personnel.
8. Always switch off the engine before carrying any intervention.



9. Do NOT expose to and do not use during bad weather conditions: never work in bad weather (e.g. rain, storm, snow, high wind ...), never work when visibility is poor or in very high or low temperatures. Never leave product outdoors under the rain.
10. Keep the handles dry, clean and free of grease, oil or fuel.
11. Operate the product only in outdoors or in well ventilated areas.
12. Do not operate the product on slopes or any other unstable location.
- 13.1. Become familiar with the controls and the proper use of the equipment.
- 13.2. Store idle machine. When not in use, product should be stored in a dry, locked up place, out of reach of children.
- 13.3. Do not force the tool.

It will do the job better and safer at the rate speed for which it is intended.

The product will do a better and safer job if it is used only for the purposes it was designed for.

13.4. Remove adjusting keys and wrenches

Form the habit of checking to see that keys and adjusting wrenches are removed from the machine before operating it.

13.5. Defective switches or other part that is damaged should be properly repaired or replaced by an authorized service centre. Do not use the machine if the switch does not turn it on and off.

13.6. Warning

The use of any accessory or attachment, other than those recommended in this instruction manual, may present a risk of injury to persons or animals and may cause damages.

The user or operator is solely responsible for accidents or hazards or any damages or injury caused to properties and/or persons and/or animals.

The user/operator is responsible for the safety of third persons present or entering the work area.

13.7. Remarks

The safety precautions and instructions given in this manual are unable to cover in detail all the conditions and situations that may arise.

The operator and/or user must use common sense and caution when operating the product especially for any matters that are not referred in the above

1.2- Safety precautions

1.2.1- Initial preparation before operation

- When you operate the machine, always wear full-length trousers, as well as sturdy, closed footwear that provide good support. Do NOT operate the machine wearing shorts, when barefoot or wearing open sandals!

- Do not wear loose clothing or jewellery that can be drawn into the inlet. Keep long hair away from the inlet. Under no circumstances should jewellery, any other body ornamentation, or loose clothing be worn while operating the tool as these items could be drawn into the suction orifice. Avoid wearing clothing that is loose fitting or that has hanging cords or ties.

When working outdoors, rubber gloves and non-slip footwear should always be worn.

If you have long hair, put it in a hair net.

- Wear protective equipment and always wear protective goggles while operating the tool.

Wearing protective equipment such as a dust mask, non-slip footwear, protective gloves, a helmet and/or hearing protection (depending on the type and application of the electrical device concerned) reduces the risk of injury.

- When performing work that generates dust, wear a dust protective mask to prevent dust irritation.

- Each time before you use the machine, check the integrity of the product's power cord and your own extension cord for signs of damage and ageing. Do not use the machine if the cord is damaged or worn. The product should only be operated when its accessories are in perfect working order.

Any damaged or defective components should be repaired immediately by a qualified technician. Never attempt to use an incomplete, not fully assembled or modified machine.

- Under no circumstances or if safety equipment such as collection box is not installed, before using, always visually inspect to see, that the **shredding means, shredding means** bolts and other fasteners are secure, the housing is undamaged and that guards and screens are in place. Replace worn or damaged components in sets to preserve balance. Replace damaged or unreadable labels.

- Only use a weather proof extension cable fitted with coupler to IEC 60320-2-3.

Only extension cords that are rated for outdoor use should be used outdoors.

Any extension cord used should have a minimum cross section of not light than H07RN-F 2x1.5mm².

1.2.2- During use

- Before starting the machine, make certain that the feeding chamber is empty. Do not allow hands or any other part of the body or clothing inside the feeding chamber, discharge chute, or near any moving part.

- Always direct the cable to the rear away from the appliance. Make sure the power cord is kept behind and away from the device while you work.

- If the power cord or extension cord becomes damaged during use, disconnect the supply cord from the mains immediately. **DO NOT TOUCH THE CORD BEFORE DISCONNECTING THE SUPPLY CORD FROM ITS**

POWER SOURCE.

- If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- Do not carry the appliance by the cable. Never use the power cord as a handle to lift or carry the device.
- Always disconnect the product from the mains supply in the following circumstances:
 - . whenever you leave the machines; when the machine is not in use, is being carried/transported, or is left unattended.
 - . before clearing a blockage; while examining, cleaning or unclogging the product.
 - . before checking, cleaning or working on the product, performing maintenance on it, or attaching accessories to it.
 - . If the cutting device strikes a foreign object (e.g. small stone, piece of metal...) or starts to vibrate abnormally.
- Use the machine in daylight or with adequate illumination (good artificial light).
- Keep proper balance and footing at all times. Do not overreach. Never stand at a higher level than the base of the machine when feeding material into it.
- Bear in mind that the force generated by an electrical device can make you lose your balance. Therefore, make sure that your feet are firmly planted and that your body is well balanced when you are operating the product.
- Never operate the machine on damp areas or wet grass.
- Do NOT use the machine on slope areas.
- Keep the chute outlet and ventilation holes (cooling air inlets) unobstructed, clear of debris and clean at all times.

- Do not assume of your knowledge of the machine. Remember that a split second of negligence is sufficient to cause serious damage. Be aware of your surroundings and stay alert for potential hazards that you may not hear while operating the product.
 - Keep a safe distance from the ejection zone when working with the tool.
 - Be especially careful that material contains no metal parts, stones, bottles, cans or other foreign objects before inserting into the tool.
 - If the cutting mechanism strikes any foreign objects or if the machine should start making any unusual noise or vibration, immediately shut off the power source and allow the machine to stop. Disconnect the machine from the supply and take the following steps before restarting and operating the machine:
 - i) inspect for damage;
 - ii) replace or repair any damaged parts;
 - iii) check for and tighten any loose parts.
 - If the machine becomes clogged, shut-off the **power source** and disconnect the machine from supply before cleaning debris.
- Never operate the machine with defective guards or shields, or without safety devices, for example debris collector in place.
- Keep the **power source** clean of debris and other accumulations to prevent damage to the **power source** or possible fire.
- Do not transport this machine while the **power source** is running.

Stop the machine, and remove plug from the socket. Make sure that all moving parts have come to a complete stop

- whenever you leave the machine,
- before clearing blockages or unclogging chute,
- before checking, cleaning or working on the machine.

Do not tilt the machine while the **power source** is running.

1.2.3- Before maintenance and storage

- When the machine is stopped for servicing, inspection, or storage, or to change an accessory, shut off the power source, disconnect the machine from the supply and make sure that all moving parts are come to a complete stop. Allow the machine to cool before making any inspections, adjustments, etc. Maintain the machine with care and keep it clean.

Always allow the machine to cool before storing.

When servicing the shredding means be aware that, even though the power source is switched off due to the interlock feature of the guard, the shredding means can still be moved.

Never attempt to override the interlocked feature of the guard.



















- Keep all nuts, bolts and screws tight to be sure the appliance is in safe working condition.
- Check the debris collection box frequently for signs of wear and/or deterioration.
- Replace any worn or damaged parts.
- Make sure to use only genuine/original replacement parts and accessories.

- For reasons of safety, any worn or damaged component should be replaced or repaired immediately by a qualified technician.
- When not in use, store the machine only in a dry place that is inaccessible to children.

1.2.4- Before starting the product

- Only operate the product after completely assembling it. Do NOT operate product if it is not fully and properly assembled!
- Before each use, check the machine for any signs of damage.
- Prior to each use, check the power cord for signs of damage. Under no circumstances should the power cord be used if it shows any signs of damage.
- Ensure that the machine is only connected to conventional sockets with a 230-240V alternating current supply. Only use extension cables if they are really necessary. The use of extension cables may cause a drop in voltage, which will result in the machine not performing to its peak or the motor overheating.
- The machine can be plugged into any 230-240 volt AC outlet with 10 amps of fuse protection. The electrical outlet is to be protected by an earth leakage circuit breaker (ELCB) with a max triggering current of 30mA (i.e. the appliance should be supplied via a Residual Current Device (RCD) with a tripping current of not more than 30mA).

2. EXPLANATION OF SYMBOLS

	Do not expose to weather conditions (ex.: rain, snow ...) or to moisture. Do not use nor leave outdoor during weather conditions (e.g. rain, snow...) Do not use in the rain or leave outdoors while it is raining.
	Caution! Risk of injury and/or damage and/or deterioration of product in case on non-compliance to safety requirements.
	Read the instructions manual.
	Class II product with double or reinforced insulation
 	Wear eye protection. Wear ear protection. The machine may exceed 85 dB(A) at the workplace; in this case, noise protection measures need to be taken to protect the user.
 	Wear protective gloves and shoes with non-slippery sole.
	Keep all parts of your body away from moving parts and from the shredder opening. Rotating cutting knife. Keep hands and feet away from the openings while tool is running.
	Do not step on the collection box.
 	Keep persons (esp. children) and animals away from product and working area. Projection hazard (e.g. small debris). Keep bystanders at a safe distance (at least 3m) away from the tool while in operation.
	Let moving parts come to a standstill before carrying any intervention on machine.
	Locked and unlocked position
	Cutting diameter adjustment
	Disconnect product from its power source before maintenance, cleaning or any intervention on product; when you do not use product or when you leave it unattended for any period. Disconnect product from its main power source, if product, power cable, or extension cord is damaged or cut during operation. Unplug product by pulling the plug. Do not pull the cable.
	Do not dispose of this product with household rubbish. Dispose of this product in the nearest recycle centre. Please contact your local authority or local recycle centre for further information for its safe disposal.
	Guarantee sound power level.

3. PARTS LIST

- 1- Push Stick
- 2- Feeding opening (feeding chamber)
- 3- Safety switch
- 4- Forward / Reverse mode switch
- 5- ON/OFF switch
- 6- Power cord anchoring device
- 7- Power cord & plug
- 8- Sliding rail
- 9- Lock button
- 10- Collection box
- 11- Support foot
- 12- Tubes (legs support tubes)
- 13- Wheel
- 14- Wheel cover
- 15- Counter plate adjusting knob
- 16- Back cover
- 17- Handle



Fig.1

 
4. CHARACTERISTICS

Voltage	230-240 V ~ 50 Hz
Power	2800 W (P40)
No load speed n_0	60 min ⁻¹
Insulation protection class	II
Ingress Protection	IP4
Operating cycle	P40-S6(40%) means 40s load and 60s idle time operation model
Cutting diameter (max)	44 mm
Collection bag capacity	60 L
Sound Pressure Level (L_{PA})	Measured 79.1 dB (A) K = 3 dB(A)
Sound Power Level (L_{WA})	Measured 91.7 dB(A) K=2.67dB(A) Guaranteed 94 dB(A)
Weight (approx.)	14.5 kg

5. GETTING STARTED

4.1- Unpacking

- Remove product from its packaging.
- Check that tool and accessories are not missing or damaged.
- If you find anything part missing or damaged, **do not** operate the tool until the part has been replaced or the fault has been rectified.

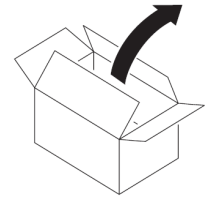

Failure to do so could result in serious personal injury.

4.2- Content

The unit package contains:

- Main unit
- 1 Collection box
- 1 Push stick
- Hex Wrench
- Instructions manual

4.3- Assembly

The machine requires some assembly prior to first time use.

This includes fitting the wheels, the tubes (support feet) to the housing and collection box.

4.3.1- Tubes (Support Feet, see Fig.2)

Turn the shredder upside down and pivot the tubes (support feet) upward.

Insert the supplied wheel axle (A) through the respective openings of each tube.

 
4.3.2- Wheels (Fig.3)

Put the supplied washer (B) and sleeve (C) onto the wheel axle (A) (Fig. 3B)

Place the wheels (D) and tighten nut (E) by hand (Fig. 3C).

Using the supplied hex wrench (F), fix the wheel axle and at the same time firmly tighten the nut by using a wrench (not supplied) (G). (Fig. 3D)

Finally, place the wheel cover (H) in the center of the wheel. (Fig. 3E)

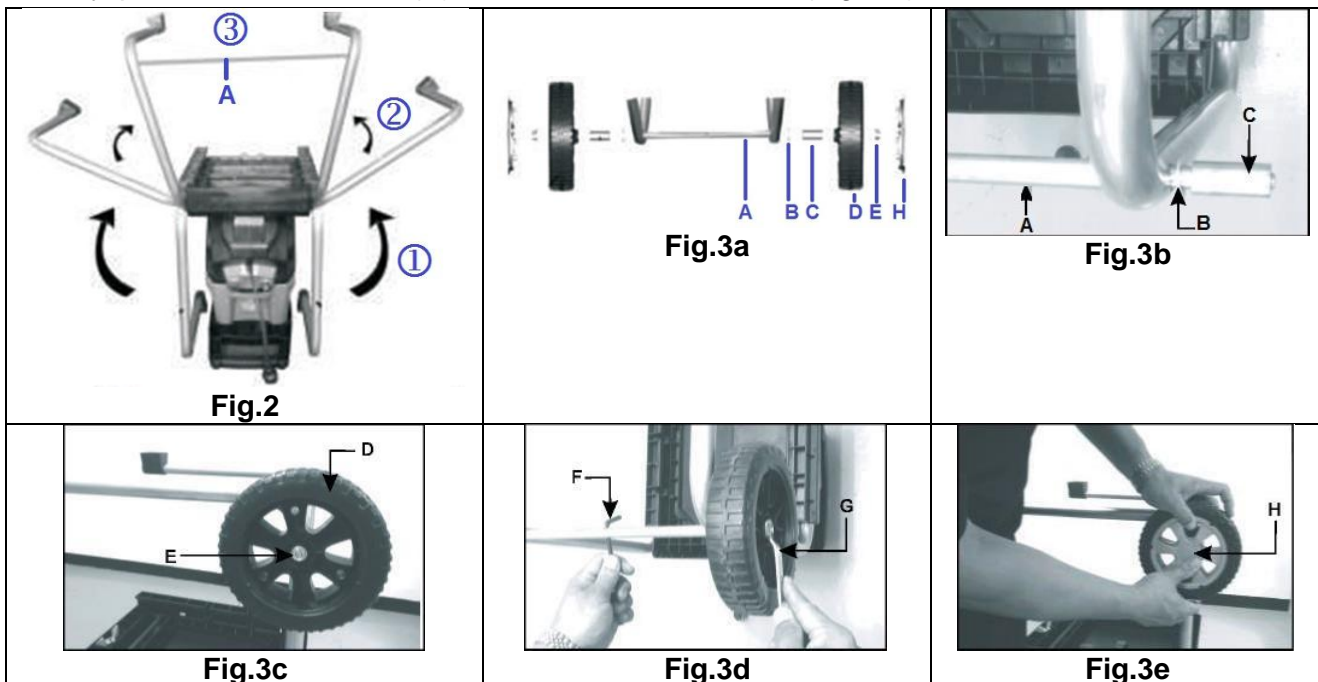

Turn the shredder back on its stand and wheels.

ATTENTION: Take care when turning the unit onto its wheels as the unit has an uneven weight distribution.

4.3.3- Collection box (Fig.4)

To insert the collection box:

Press down the lock button (A).

Then insert the collection box into the sliding rails (8).

Press the lock button (A) upward.

To remove the collection box:

Press down the lock button (A).

Then slide the collection box out of the undercarriage.

Note: Before you remove and empty the collection box, ensure that the machine has been disconnected from its power supply.

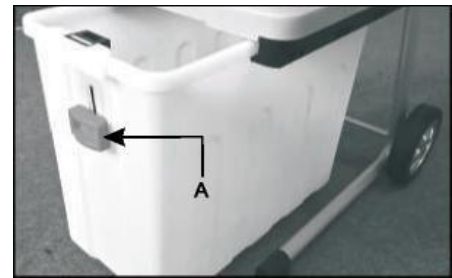 


Fig.4

4.4- Start and Stop (Fig.5)

To Start the machine:

Press the Forward/Reverse switch (A) to FORWARD "+" position.

Press the On/Off switch (B) to (I) ON position to start the motor.

To Stop the machine:

Press the On/Off switch (B) to (O) OFF position to stop the motor.



Fig.5

4.5- Overload protection (Fig.5)

This machine is equipped with an overload protection system, to protect the motor from being damaged. The safety switch will automatically switch off the power when the motor is overloaded.

Wait for at least 1 minute before restarting by first pressing the reset button and then the On/Off switch.

If the motor does not restart, do the following (wear safety gloves) :

1. Press the safety switch (C).
2. Press the Forward/Reverse switch (A) to REVERSE "-" position.
3. Press and hold the On/Off switch (B) to (I) ON position to remove any objects that could obstruct the blades.

6. OPERATION

5.1- Intended use

- The product is intended for outdoor domestic use in private gardens.
- The product is designed to shred garden debris such as clippings and small twigs within the limits of its characteristics (smaller than 40mm in diameter).

It is not to be used for any other purpose outside of the described scope in this manual.

- It is recommended to use the product only on dry surfaces, do NOT operate on damp or wet working area.
- Do not use the machine for unsuitable purposes (for ex. for shredding other materials such as plastic, paper; metal...)
- The tool is not intended for artisanal, commercial, professional or industrial use (ex.: in public parks...).

5.2- Operation

⚠ BEFORE any operation:

- Always visually inspect that the product does not show signs of use or damage. Replace any used or damaged part.
- Check that the screws, bolts and nuts are well tightened. Tighten firmly the screws, bolts and nuts when needed.
- Ensure that the collection box is properly and securely installed.
- Ensure that the machine is only connected to conventional sockets with a 230-240V alternating current supply.
- Only use extension cables, if they are really necessary, intended for outdoor use and approved.

The use of extension cables may cause a drop in voltage, which will result in the machine not performing to its peak or the motor overheating.

- Look into the feeding chamber to make sure it is empty. Do NOT start machine before clearing any material still present in the feeding chamber.

⚠ DURING operation

- Keep proper balance and footing at all times. Do not over reach. Never stand at a higher level than the base of the machine, when feeding material into it.
 - Always keep your fingers and hands away from the feeding chamber. Use the push stick to push in the material.
 - When feeding material into the machine **be extremely careful** that pieces of metal, rocks, glass bottles, cans or other foreign objects are not included.
 - If the cutting mechanism strikes any foreign objects or if the machine should start making any unusual noise or vibration, switch off the machine and allow it to come to a complete stop, disconnect the plug from the power source, and take the following steps:
 - Inspect the machine for damage.
 - Check for and tighten any loose parts.
 - Have any damaged parts replaced or repaired by an authorized service center with original parts.
 - Always stand clear of the discharge zone when operating this machine.
- Do not allow processed material to build up in the discharge zone; this may prevent proper discharge and can result kickback of material through the feed intake opening. Empty the collection box regularly.
- Do not transport this machine while the power source is running.
 - Switch off the machine and disconnect the plug from its power source whenever you leave the work area.
 - Do not tilt the machine while in operation.
 - Motor should be kept clean of debris and other accumulations.

5.2.1- Power cord plugging

Plug the power plug into an approved electrical extension cord, and loop the extension cord around the power cord anchoring hook.

Connect the extension cord plug to power supply.

Tip: The extension cord may come undone from the power cord during use. To avoid this, use the cable restraint (9).

5.2.2- To switch ON and OFF

See 4.4.

Important : After you have switched off the machine, do not leave it unattended while still connected to the electrical supply. Unplug from mains and store product.

5.2.3- Use.

1. Insert the material to be shredded into the opening (feeding chamber) on the right side. It will be automatically drawn into the machine by the cutter as it turns anticlockwise.
2. Do not stuff the opening completely full to avoid jamming the machine.
3. Alternate feeding branches and small litter that is a bit wet and decomposed. This will also help to avoid jamming the cutter.
4. Squashy kitchen rubbish must be composted, never put it through the shredder!
5. Branches with leaves must always be entirely through the shredder and out of the way before feeding new material into the machine. Make sure the shredded material is able to fall unobstructed into the collection box without blocking the outlet.
6. The ventilation opening must not be locked by the shredded material.
7. Continuous shredding of thick wood or branches can cause the machine to jam.
8. Soft material like leaves or sprigs can easily block the inlet; use a push stick to poke it in.
9. Always check litter for nails and stones before shredding as they can seriously damage the shredder.
10. For better performance and comfort, it is recommended to empty the collection box regularly (for ex. when it reaches 2/3rd of its capacity).

Tips for shredding:

Depending on the type, age and dryness of the wood, branches will be more or less easily shredded.

The best results are obtained when fresh branches are shredded shortly after being cut.

 
 
It is recommended to shred soft garden waste in small quantity, especially when the waste is wet. You can avoid blockage by performing periodic shredding sessions.

5.2.4 – Adjusting the counter plate

To obtain an optimum shredding result and prevent damage to the blade, the counter plate must be adjusted at regular intervals.


The counter plate must also be adjusted when so called interlinkage occurs.

1. Turn counter plate adjusting knob (A) clockwise until a slight friction noise can be heard and fine aluminum chips fall from the ejector chute for a short period of time.
2. Then, the materials to be shredded should be fully cut again.

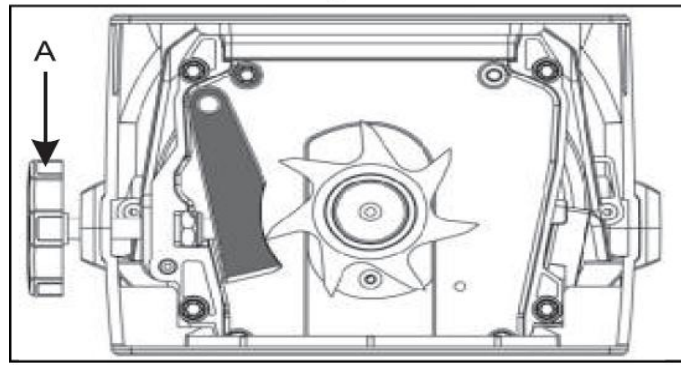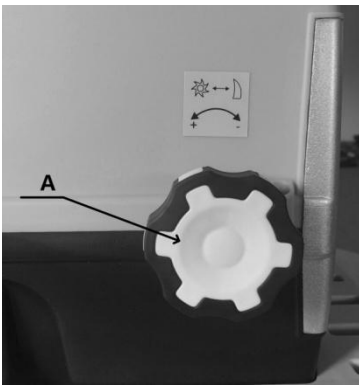


5.2.5- Replacing the counter plate

 1. Open the back cover by loosening the 4 Screws (A).
2. Take out the counter plate (B) and replace with a new one.
3. Put back the back cover and tighten the 4 screws.

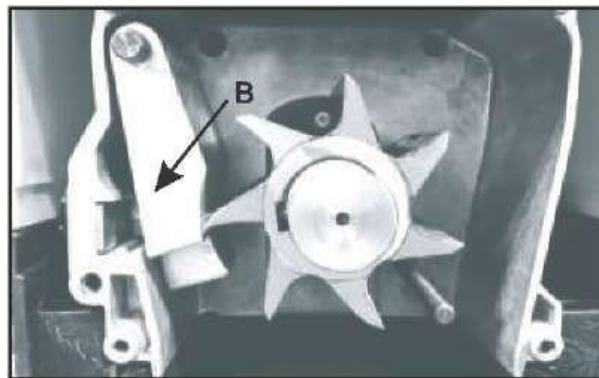

7. MAINTENANCE AND STORAGE

 **Before any intervention on product, ensure that product is disconnected from its power source.**

Reminder: Make sure to maintain the machine in good working condition, carry out regular maintenance of the machine after each use and before storage. Any breach or default of adequate maintenance reduces the life of the machine and increases the risk of breakdowns and accidents.

To preserve the security system throughout the life of the machine, it is important to perform maintenance and proper cleaning, **DO NOT** use non-compliant replacement parts and **DO NOT** dismantle yourself the machine or change the security features.

6.1- After using the machine

- 1) Empty the collection box.
- 2) Check the machine (feeding inlet and chute) and remove material residue.

6.2- Cleaning

Clean plastic parts with a soft and clean cloth

Do not use aggressive cleansers (solvents or abrasive cleansers), or an abrasive sponge.

Do not use any caustic to clean the plastic parts.

Do not put or immerse machine in water or any other liquid, and ensure that no water gets inside the machine.

Do not clean the machine with running water or high pressure.

6.3- Storage

Clean product and empty the collection box.

Store product, instructions manual and accessories in its original packaging.

Product must be stored in a clean, dry location. Always lock up product and keep out of reach of children.

Do not store product in temperatures lower than 0°C (32°F)

Do not place or store any object on top of the product.

6.4- Disposal

- Debris & remnants: do not throw with household rubbish or in the environment. Dispose of any debris and remnants in rubbish collection centres or seek advice from your local municipality.
- Machine: do not dispose with household garbage. Do not throw into the environment. Dispose of the product in a collection centre for waste of electrical and electronic equipment, or a waste drop-off centre; or seek advice from your local municipality.
- Proceed with disposal of remnants, machine, accessories and packaging according to local regulations regarding the protection of the environment.

8. DECLARATION OF CONFORMITY



BUILDER SAS
ZI, 32 rue Aristide Bergès – 31270 Cugnaux - France

Declares that the machinery designated below:

Silent shredder
FBVES2800-UK

Serial number: **20210734420-20210734669**

Complies with the provisions of the Directive “machinery” 2006/42/EC and national laws transposing it:

Also complies with the following European directives:

EMC Directive 2014/30/EU
ROHS Directive 2011/65/EU+2015/863/EU
Noise directive 2004/14/EC and 2005/88/EC
Sound power level - measured: 91.7 dB(A) K = 2.67 dB(A)
Guaranteed: 94 dB(A)

Also complies with European standards, with national standards and the following technical provisions:

EN 60335-1:2012/A2:2019
EN 50434:2014
EN 55014-1:2017
EN 55014-2:2015
EN IEC 61000-3-2:2019
EN 61000-3-11:2000

Responsible for the technical file: M. Olivier Patriarca

Cugnaux, on 12/05/2021

Philippe MARIE / PDG

9. WARRANTY



WARRANTY

The manufacturer guarantees the product against defects in material and workmanship for a period of 2 years from the date of the original purchase. The warranty only applies if the product is for household use. The warranty does not cover breakdowns due to normal wear and tear.

The manufacturer agrees to replace parts identified as defective by the designated distributor. The manufacturer does not accept responsibility for the replacement of the machine, in whole or in part, and/or ensuing damage.

The warranty does not cover breakdowns due to:

- insufficient maintenance.
- abnormal assembly, adjustment or operations of the product.
- parts subject to normal wear and tear.

The warranty does not extend to:

- shipping and packaging costs.
- using the tool for a purpose other than that for which it was designed.
- the use and maintenance of the machine done in a manner not described in the user manual.

Due to our policy of continuous product improvement, we reserve the right to alter or change specifications without notice. Consequently, the product may be different from the information contained therein, but a modification will be undertaken without notice if it is recognized as an improvement of the preceding characteristic.

READ THE MANUAL CAREFULLY BEFORE USING THE MACHINE.

When ordering spare parts, please indicate the part number or code, you can find this in the spare parts list in this manual. Keep the purchase receipt; without it, the warranty is invalid. To help you with your product, we invite you to contact us by phone or via our website:

- **+33 (0)9.70.75.30.30**
- **<https://services.swap-europe.com/contact>**

You must create a "ticket" via the web platform.

- Register or create your account.
- Indicate the reference of the tool.
- Choose the subject of your request.
- Describe your problem.
- Attach these files: invoice or sales receipt, photo of the identification plate (serial number), photo of the part you need (for example: pins on the transformer plug which are broken).



10. PRODUCT FAILURE

WHAT TO DO IF MY MACHINE BREAKS DOWN?

If you bought your product in a store:

a) Empty the fuel tank if your product has one.

b) Make sure that your machine is complete with all accessories supplied, and clean! If this is not the case, the repairer will refuse the machine.

Go to the store with the complete machine and with the receipt or invoice.

If you bought your product on a website:

a) Empty the fuel tank if your product has one.

b) Make sure that your machine is complete with all accessories supplied, and clean! If this is not the case, the repairer will refuse the machine.

c) Create a SWAP-Europe service ticket on the site: <https://services.swap-europe.com> When making the request on SWAP-Europe, you must attach the invoice and the photo of the nameplate (serial number).

d) Contact the repair station to make sure it is available before dropping of the machine.

Go to the repair station with the complete machine packed, accompanied by the purchase invoice and the station support sheet downloadable after the service request is completed on the SWAP-Europe site

For machines with engine failure from manufacturers BRIGGS & STRATTON, HONDA and RATO, please refer to the following instructions.

Repairs will be done by approved engine manufacturers of these manufacturers, see their site:

- <http://www.briggsandstratton.com/eu/fr>
- <http://www.honda-engines-eu.com/fr/service-network-page;jsessionid=5EE8456CF39CD572AA2AEEDFD290CDAE>
- <https://www.rato-europe.com/it/service-network>

Please keep your original packaging to allow for after-sales service returns or pack your machine with a similar cardboard box of the same dimensions.

For any question concerning our after-sales service you can make a request on our website <https://services.swap-europe.com>

Our hotline remains available at +33 (9) 70 75 30 30.



11. WARRANTY EXCLUSIONS

THE WARRANTY DOES NOT COVER:

- Start-up and setting up of the product.
- Damage resulting from normal wear and tear of the product.
- Damage resulting from improper use of the product.
- Damage resulting from assembly or start-up not in accordance with the user manual.
- Breakdowns related to carburetion beyond 90 days and fouling of carburetors.
- Periodic and standard maintenance events.
- Actions of modification and dismantling that directly void the warranty.
- Products whose original authentication marking (brand, serial number) has been degraded, altered or withdrawn.
- Replacement of consumables.
- The use of non-original parts.
- Breakage of parts following impacts or projections.
- Accessories breakdowns.
- Defects and their consequences linked to any external cause.
- Loss of components and loss due to insufficient screwing.
- Cutting components and any damage related to the loosening of parts.
- Overload or overheating.
- Poor power supply quality: faulty voltage, voltage error, etc.
- Damages resulting from the deprivation of enjoyment of the product during the time necessary for repairs and more generally the costs related to the immobilization of the product.
- The costs of a second opinion established by a third party following an estimate by a SWAP-Europe repair station
- The use of a product which would show a defect or a breakage which was not the subject of an immediate report and/or repair with the services of SWAP-Europe.
- Deterioration linked to transport and storage*.
- Launchers beyond 90 days.
- Oil, petrol, grease.
- Damages related to the use of non-compliant fuels or lubricants.

* In accordance with transport legislation, damage related to transport must be declared to carriers within 48 hours maximum after observation by registered letter with acknowledgement of receipt.

This document is a supplement to your notice, a non-exhaustive list.

Attention: all orders must be checked in the presence of the delivery person. In case of refusal by the delivery person, it you must simply refuse the delivery and notify your refusal.

Reminder: the reserves do not exclude the notification by registered letter with acknowledgement within 72 hours.

Information:

Thermal devices must be wintered each season (service available on the SWAP-Europe site). Batteries must be charged before being stored.

FEIDER

MACHINES



BUILDER SAS
32, rue Aristide Bergès - ZI 31270 Cugnaux – France
Made in PRC 2021