


HYUNDAI
POWER PRODUCTS

AIRLESS PAINT SPRAYER HSP650

INSTRUCTIONS ORIGINALES

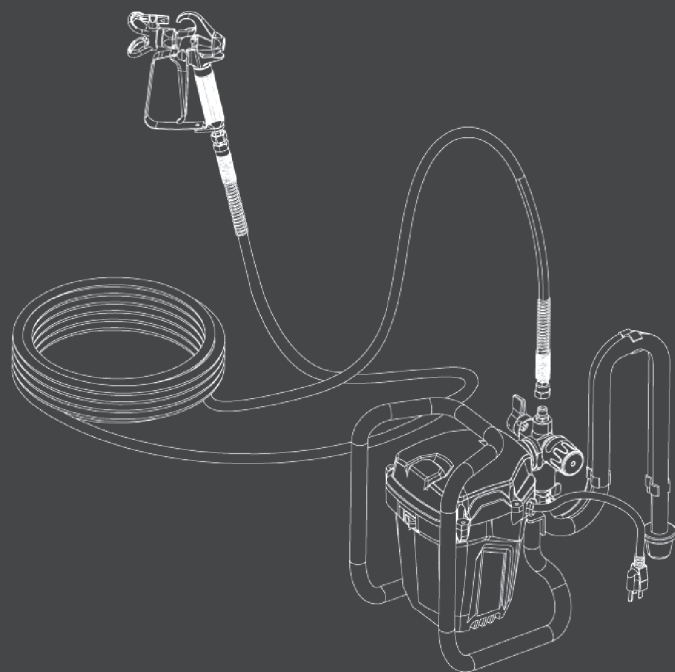

—For portable spray application of architectural paints and coatings



Important Safety Instructions:

Read all warnings and instructions in this manual. Save these instructions.

Must be grounded when use this pump: Read Grounding instructions. Use only grounded electrical outlets or Ground equipment and conductive objects in work area,se only grounded electrical outlets or Ground equipment and conductive objects in work area.

Have heart problem or with heart pacemaker people, strictly prohibit to use this pump.

When unpacking, make sure that the product is intact and undamaged. If any parts are missing or broken, please contact to where you buy this product.

◎ Important safety instructions.....	2~3
◎ Technical Data.....	3
◎ Warning	4~6
◎ Installation.....	7~8
◎ Operation instruction.....	9~10
◎ Pressure Relief Procedure.....	11
◎ Airless Sprayer Cleaning Procedure.....	13~16
◎ Grounding and electric requirements.....	17~18
◎ Daily Maintain.....	19
◎ Troubleshooting.....	20
◎ Parts List.....	21-22
◎ Airless Sprayer Electrical Installation Drawing.....	23

※ IMPORTANT SAFETY INSTRUCTIONS

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

WARNING – When using tools, basic precautions should always be followed, including the following:

- a) **SAVE THESE INSTRUCTIONS**-To reduce the risks of fire or explosion, electrical shock and injury to persons, read and understand all instructions included in this manual. Be familiar with the controls and the proper usage of the equipment.
- b) **WARNING-To reduce the risk of fire or explosion:**
 - 1) Do not spray flammable or combustible materials near an open flame or sources of ignition such as cigarettes, motors, and electrical equipment.
 - 2) For units intended for use with only water-based materials-Do not spray or clean with flammable liquids. **For use with water-based liquids only.**
 - 3) For units intended for use with only water-based or mineral spirit-type materials with a minimum flash point of 21C°(69.8 F°) Do not spray on clean with liquids having a flash point less than 21C°(69.8 F°)
 - 4) Paint or solvent flowing through the equipment is able to result in static electricity. Static electricity creates a risk of fire or explosion in the presence of paint or solvent fumes. All parts of the spray system, including the pump, hose assemble, spray gun, and objects in and around the spray area shall be properly grounded to protect against static discharge and sparks. Use only conductive or grounded high-pressure airless paint sprayer hoses specified by the manufacturer.
 - 5) Verify that all containers and collection systems are **grounded** to prevent static discharge.
 - 6) **Connect to a grounded outlet and use grounded extension cords. Do not use a 3 to 2 adapter.**
 - 7) Do not use a paint or a solvent containing halogenated hydrocarbons. See operating instructions for examples of these types of materials.
 - 8) Keep spray area well ventilated. Keep a good supply of fresh air moving through the area. Keep pump assembly in a well ventilated area. Do not spray pump assembly.
 - 9) Do not smoke in the spray area.
 - 10) Do not operate light switches, engines, or similar spark producing products in the spray area.
 - 11) Keep area clean and free of paint or solvent containers, rags, and other flammable materials.
 - 12) Know the contents of the paints and solvents being sprayed. Read all Material safety Data Sheets (MSDS) and container labels provided with the paints and solvents. Follow the paint and solvent manufacturer's safety instructions.
 - 13) Fire extinguisher equipment shall be present and working.
- c) **WARNING-To reduce the risk of skin injection.**
 - 1) Do not aim the gun at, or spray any person or animal.
 - 2) Keep hands and other body parts away from the discharge. For example, do not try to stop leaks with any part of the body.
 - 3) Always use the nozzle tip guard. Do not spray without nozzle tip guard in place.
 - 4) Only use a nozzle tip specified by the manufacturer.
 - 5) Use caution when cleaning and changing nozzle tips. In the case where the nozzle tip clogs while spraying, follow the manufacturer's instructions for turning off the unit and relieving the pressure before removing the nozzle tip to clean.
 - 6) Do not leave the unit energized or under pressure while unattended. When the unit is not in use, turn off the unit and relieve the pressure in accordance with the manufacturer's instructions.
 - 7) High-pressure spray is able to inject toxins into the body and cause serious bodily injury. In the event that injection occurs, seek medical attention immediately.
 - 8) Check hose and parts for signs of damage. Replace and damaged hoses of parts.
 - 9) This system is capable of producing 20.7Mpa. Only use replacement parts or accessories that are specified by the manufacturer and that are rated a minimum of 22.8Mpa.
 - 10) Always engage the trigger lock when not spraying. Verify the trigger lock is functioning properly.
 - 11) Verify that all connections are secure before operating the unit.
 - 12) Know how to stop the unit and bleed pressure quickly. Be thoroughly familiar with the controls.

d) WARNING-To reduce the risk of injury.

- 1) Always wear appropriate gloves, eye protection, and a respirator or mask when painting.
- 2) Do not operate or spray near children. Keep children away from equipment at all times.
- 3) Do not overreach or stand on an unstable support. Keep effective footing and balance at all times.
- 4) Stay alert and watch what you are doing.
- 5) Do not operate the unit when fatigued or under the influence of drugs or alcohol.
- 6) Do not kink or over-bend the hose.
- 7) Do not expose the hose to temperatures or to pressures in excess of those specified by the manufacturer.
- 8) Do not use the hose as a strength member to pull or lift the equipment.
- 9) The Max. pressure of the air hose is 22.8Mpa, the normal pressure is 20.7Mpa
- 10) The paint can be compatible: phenol aldehyde paint series, nitril paint series, alkyd paint series, epoxy resin paint series, oxidized rubber paint series, latex paint series, water soluble paint series. The paint should be put in shade and dry place.
- 11) Be aware of any hazards presented by the material being sprayed and consult the markings on the container or information supplied by the manufacturer of the material to be sprayed, including requirements for the use of personal protective equipment.
- 12) Do not spray any material there the hazard is not know.




Technical Data

TYPE:	RP8626
Power requirements	230±10%Vac, 50±1Hz
Input power	650-750W
Rated current	2.0~4.5A
Maximum working pressure	3000PSI 20.7Mpa
Working pressure	0-20.7Mpa
Sound pressure level:	97 db
Vibration value:	0.715 m/s ²
Maximum delivery gpm (lpm)	1.1
Working environment temperature requirement:	5℃~40℃
Working environment humidity requirement:	30%~95%
Standard nozzle	517
Transportation and storage temperature requirement:	25℃~55℃
Paint hose:	7.6m
Paint outlet connector:	1/4-18-NPSM
Weight:	6.1kg



Warning

The following warnings are for the setup, use, grounding, maintenance and repair of this equipment. The exclamation point symbol alerts you to a general warning and the hazard symbol refers to procedure-specific risks. Refer back to these warnings. Additional, product-specific warnings may be found throughout the body of this manual where applicable.

	<p>FIRE AND EXPLOSION HAZARD</p> <p>Flammable fumes, such as solvent and paint fumes, in work area can ignite or explode. To help prevent fire and explosion:</p> <ul style="list-style-type: none"> • Use equipment only in well ventilated area. • Eliminate all ignition sources; such as pilot lights, cigarettes, portable electric lamps, and plastic drop cloths (potential static arc). • Sprayer generates sparks. When flammable liquid is used in or near the sprayer or for flushing or cleaning, keep sprayer at least 20 feet (6 m) away from explosive vapors. • Keep work area free of debris, including solvent, rags and gasoline. • Do not plug or unplug power cords or turn lights on or off when flammable fumes are present. • Ground equipment and conductive objects in work area. Read Grounding instructions. • If there is static sparking or you feel a shock, stop operation immediately. Do not use equipment until you identify and correct the problem. • Keep a working fire extinguisher in the work area.
	<p>ELECTRIC SHOCK HAZARD</p> <p>Improper grounding, setup, or usage of the system can cause electric shock.</p> <ul style="list-style-type: none"> • Turn off and disconnect power cord before servicing equipment. • Use only grounded electrical outlets. • Use only 3-wire extension cords. • Ensure ground prongs are intact on sprayer and extension cords. • Do not expose to rain. Store indoors.
	<p>SKIN INJECTION HAZARD</p> <p>High-pressure fluid from gun, hose leaks, or ruptured components will pierce skin. This may look like just a cut, but it is a serious injury that can result in amputation. Get immediate surgical treatment.</p> <ul style="list-style-type: none"> • Do not point gun at anyone or at any part of the body. • Do not put your hand over the spray tip. • Do not stop or deflect leaks with your hand, body, glove, or rag. • Engage trigger lock when not spraying. • Follow Pressure Relief Procedure in this manual, when you stop spraying and before cleaning, checking, or servicing equipment.



EQUIPMENT MISUSE HAZARD

Misuse can cause death or serious injury.

- Do not exceed the maximum working pressure or temperature rating of the lowest rated system component. Read **Technical Data** in all equipment manuals.
- Use fluids and solvents that are compatible with equipment wetted parts. Read **Technical Data** in all equipment manuals. Read fluid and solvent manufacturer's warnings. For complete information about your material, request MSDS from distributor or retailer.
- Check equipment daily. Repair or replace worn or damaged parts immediately with manufactory replacement parts only.
- Do not alter or modify equipment.
- Use equipment only for its intended purpose. Call your distributor for information.
- Route hoses and cables away from traffic areas, sharp edges, moving parts, and hot surfaces.
- Do not kink or over bend hoses or use hoses to pull equipment.
- Comply with all applicable safety regulations.
- Keep children and animals away from work area.
- Do not operate the equipment when fatigued or under the influence of drugs or alcohol.



PRESSURIZED ALUMINUM PARTS HAZARD

Do not use 1, 1, 1-trichloroethane, ethylene chloride, other halogenated hydrocarbon solvents or fluids containing such solvents in pressurized aluminum equipment.

Such use can cause serious chemical. Reaction and equipment rupture, and result in death, serious injury, and property damage.



BURN HAZARD

Equipment surfaces can become very hot during operation. To avoid severe burns, do not touch hot equipment. Wait until equipment has cooled completely.



MOVING PARTS HAZARD

Moving parts can pinch or amputate fingers and other body parts.

- Keep clear of moving parts.
- Do not operate equipment with protective guards or covers removed.
- Pressurized equipment can start without warning. Before checking, moving, or servicing equipment, follow the **Pressure Relief Procedure** in this manual. Disconnect power or air supply.



TOXIC FLUID OR FUMES HAZARD

Toxic fluids or fumes can cause serious injury or death if splashed in the eyes or on skin, inhaled, or swallowed.

- Read warnings to know the specific hazards of the fluids you are using.
- Store hazardous fluid in approved containers, and dispose of it according to applicable guidelines.



PERSONAL PROTECTIVE EQUIPMENT

You must wear appropriate protective equipment when operating, servicing, or when in the operating area of the equipment to help protect you from serious injury, including eye injury, inhalation of toxic fumes, burns, and hearing loss. This equipment includes but is not limited to:

- Protective eye wear
- Clothing and respirator as recommended by the fluid and solvent manufacturer
- Gloves
- Hearing protection

Special Focus

- A) Forbidden use of machines which are not designed for potentially explosive atmospheres
- B) Use of electrostatic atomizing and spraying equipment with machines not specially designed for this equipment, because it may result in serious hazards for the operators
- C) Hazards resulting from contact with and/or breathing of toxic materials, gases, mists and vapours which may be created by operation of the machine. Such warnings shall also include such regarding the use of personal protective equipment and reminding the user to be aware of the recommendations of the coating material manufacturer;
- D) Surface temperatures of any part of the machine, reachable during normal operation, maintenance and servicing but not normally in contact with the human body, which can exceed 48°C or be less than 0°C.
- E) DO NOT aim or point gun or spray at any person or animal.;
- F) Please read and understand this entire manual before attempting to assemble, operate or install the product.
- G) Please make sure Plug into grounded outlet.;
- H) It is recommended to use the below coating section diagram to best select the proper tip size you intend to use for your particular spraying application. Please consult your local retailer if you are unsure of the proper tip size which should be used. DO NOT spray acids, corrosive materials, toxic chemicals, fertilizers or pesticides with this item.

Coating Selection						
Tip Hole Size (expressed as diameter, based on area of elliptical orifice)	Stains	Enamels	Oil-based primers and paints	Interior latex paints	Exterior latex paints	Acrylics
0.011 in. (0.28 mm)	X					
0.013 in. (0.33 mm)	X	X	X	X		
0.015 in. (0.38 mm)		X	X	X	X	
0.017 in. (0.43 mm)			X	X	X	X
0.019 in. (0.48 mm)					X	X

- I) To reduce your exposure to these chemicals & fire/explosion risk, work in a well-ventilated area and wear safety equipment, Such as as respirator or dust mask specially designed to filter microscopic particles.;
- J) ALWAYS check air hoses for weak or worn connections before each use and make certain that all connections are secure.
- K) ALWAYS be aware of your work area surroundings and the people around the work area to ensure your safety.
- L) The Coating and auxiliary material is harmful for your health & environment So Reduce the quantity of coating and/or auxiliary materials at workplaces to a minimum

Special Attention:

- a) Maximum allowable pressure for the coating material.....20.7 Mpa (3000psi)
- b) Typical coating material flow rate for sample conditions: 1.1L/Min
- c) Type and use of any safety devices in the machine:
 1. Temperature control device
 2. Maximum pressure control device
 3. Maximum electrical current control device
 4. Creepage protect control device
 5. Hand-hurt protect device



INSTALLATION:

RETURNS NOT ACCEPTED & WARRANTY VOID
if Sprayer is not properly cleaned immediately after every use.

Clean Sprayer immediately to prevent permanent damage.

Prime/Spray Switch



This switch toggles the unit between priming mode and spraying mode.

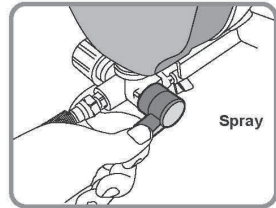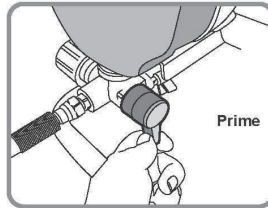

Trigger Lock

When engaged, this mechanism prevents the trigger from being pulled accidentally such as if the gun is dropped.

Lock whenever not in use.

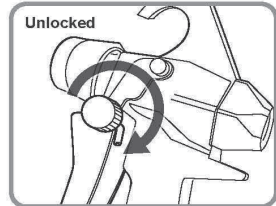
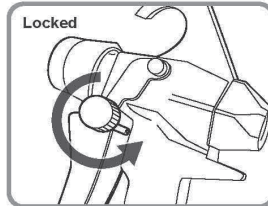


Nozzle

The nozzle is reversible and removable to make cleaning and unclogging easier.


Turn to Spray (▶) position to use the spray gun.

Turn to Clean (Eject) position to clean the nozzle.

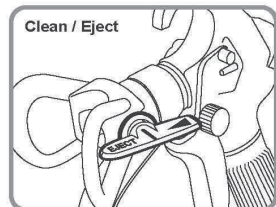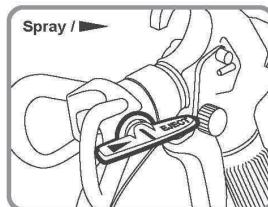

Pressure Control Knob

The Pressure Control Knob can be adjusted for High Pressure Spraying, Low Pressure Spraying, Priming/Cleaning, or Rolling. Align the Pressure Control Knob with indicator on the Sprayer Housing to set the function.

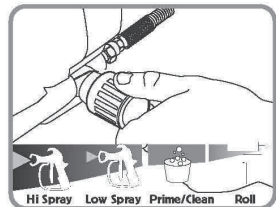

Low Pressure Spray

Rolling



High Pressure Spray


Prime/Clean

**RETURNS NOT ACCEPTED & WARRANTY VOID
if Sprayer is not properly cleaned immediately after every use.**


Clean Sprayer immediately to prevent permanent damage.

Setup


Note: Remove or cover objects that you want to protect from overspray (paint mist).

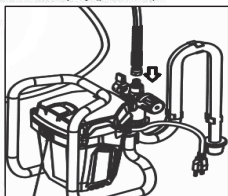

1. Attach Paint Hose to Paint Hose Outlet and tighten with wrench.

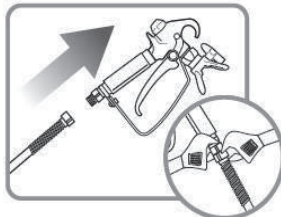


2. Attach Paint Hose to Paint Gun and tighten with two wrenches.

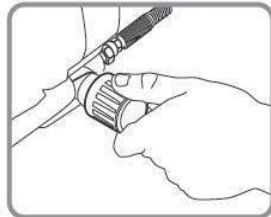


3. Turn Pressure Control Knob to Low Pressure Spray setting.

To Relieve Sprayer Pressure

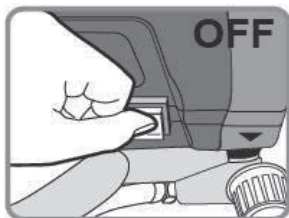


1. Turn Power Switch off and unplug unit from outlet.

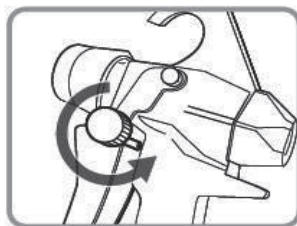


4. Turn Trigger Lock Knob to Locking position.

Note: Always set to Prime mode between uses.

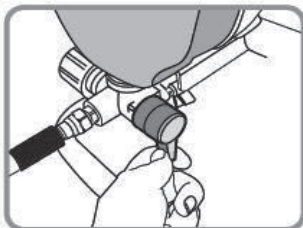

2. Switch Prime/Spray switch to Prime mode.

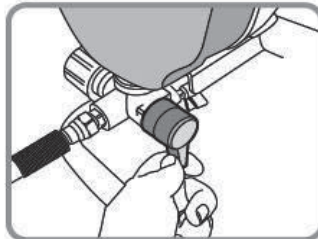

3. Point gun into paint pail and activate Sprayer Trigger to relieve pressure.

Operating Instructions

BEFORE STARTING

(1) CHECK all fittings and connections in the pump system, hose, and gun to ensure that they are tight.

CHECK to ensure that there is a spray tip in the gun, and that the tip is the correct size for the coating you are to spray. (There are various tips available, for each type of coating or configuration.)

(2) MAKE SURE the power source is securely grounded and match the motor rating of your sprayer.

(3) New spray: Oil is used by the factory for testing and protection. It is necessary to flush unit before spraying. Clean the pump with warm soapy water, Make sure the hydraulic oil in the pump is clean and sufficient in volume then begin the following procedure

1. Remove spray tip from gun
2. Put the input hose and pressure relief tube into the bucket with some water,
3. Turn on the motor and push the pressure valve upright. In a few seconds, water will begin to flow up through the tube and flow out from outlet valve, tighten the outlet valve deasil, then tighten the pressure valve deasil.
4. When the pressure reaches up to around 207bar, check if there is any leakage on the outlet hose, if it's leak, Please check. Don't stop or deflect leaks with your hand, body, glove or rag.
5. If doesn't leak, open the spray gun and have a testing spray. Clean the oil in pump. Change the soapy water and use clean water when the spray is clean.
6. Turn off power, Continue to spray till no water out.
7. Unlock trigger lock. Put the pressure valve upright, till no soapy water in pump.

Pressure release procedure

Whenever instructed to relieve pressure, Stop spraying, Check or service equipment or install or clean spray tip.

1. Engage trigger safety lock on gun. Turn Off power and turn sprayer pressure control to lowest pressure setting.
2. Hold gun against side of flushing pail. Trigger gun into pail to relieve pressure.
3. Turn off pump and release fluid pressure by turning the pressure relief prime valve located on the side of the pump down.

RETURNS NOT ACCEPTED & WARRANTY VOID
if Sprayer is not properly cleaned immediately after every use.

Clean Sprayer immediately to prevent permanent damage.

Priming Spray Gun

This procedure is used for first time operation and also to flush storage fluids out of the Sprayer.

Priming Water-Based vs. Oil-Based Paints

Oil-based Paint:

Flush with mineral spirits followed by warm clean water.


WARNING! TO PREVENT FIRE:

When using mineral spirits, ground gun by holding it against a metal container while flushing.


Water-based (Latex) Paint:

Flush with warm clean water.


Priming and Startup Steps

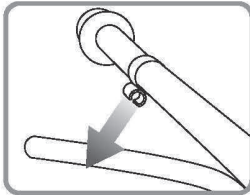


1. Separate smaller Priming Tube from Suction Tube.

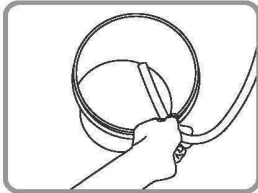


2. Place Priming Tube in waste bucket.

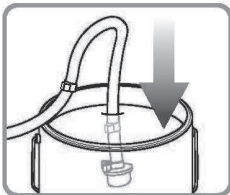


3. Submerge Suction Tube in water or flushing solvent.

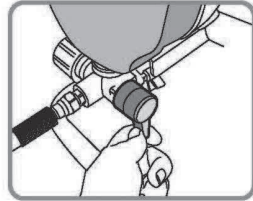


4. Turn Prime/Spray switch to Prime mode.

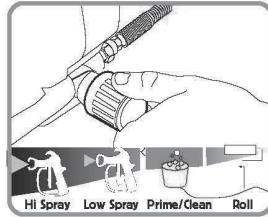

5. Adjust Pressure Control Knob to Prime/Clean setting.

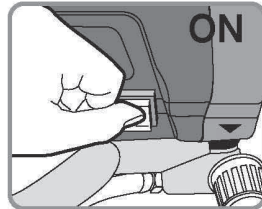


6. Plug in Sprayer and turn on power.

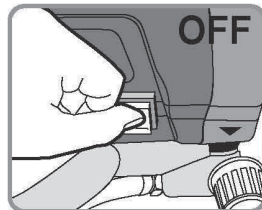


7. Sprayer will start pumping and water or flushing solvent as well as air bubbles will be purged from system. Let fluids discharge from Priming Tube into waste bucket for 30 to 60 seconds then switch Power to Off.

RETURNS NOT ACCEPTED & WARRANTY VOID
if Sprayer is not properly cleaned immediately after every use.


Clean Sprayer immediately to prevent permanent damage.

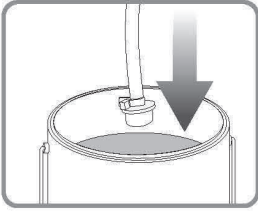


8. Remove Suction Tube from water or flushing solvent and submerge in paint pail.

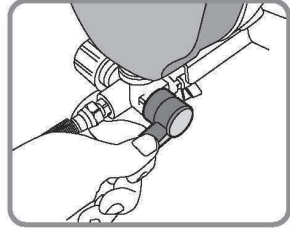


11. Turn Spray/Prime Switch to Spray mode and continue to spray into waste bucket.

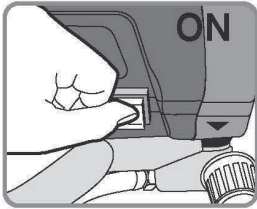


9. Switch Power to On.

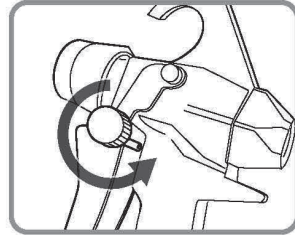

12. Stop spraying and activate trigger lock.

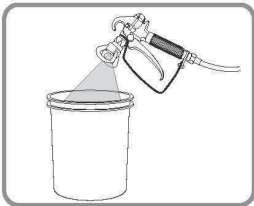

10. Paint should work itself from Suction Tube to Sprayer to Priming Tube until paint discharges from Return Tube. Point gun into waste bucket and pull trigger.

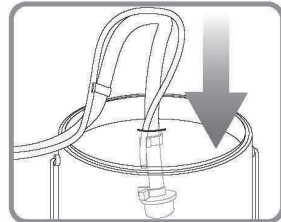

13. Remove the Priming Tube from the waste bucket and clip to Suction Tube and submerge in paint pail.

14. If the motor stops, the pump and tubes are primed. If it does not stop, repeat priming steps.

15. Start Painting.


RETURNS NOT ACCEPTED & WARRANTY VOID
if Sprayer is not properly cleaned immediately after every use.

Clean Sprayer immediately to prevent permanent damage.


Painting

Before painting, ensure the Sprayer has been primed (see Priming and Startup steps) and verify that Nozzle Tip is aligned properly.

Note: Remove or cover objects that you want to protect from overspray and paint mist.

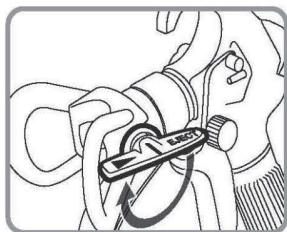


1. Once primed, adjust nozzle to Spray setting.

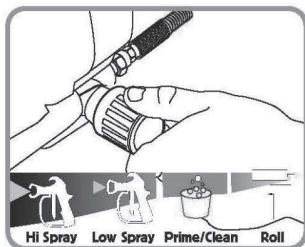


2. Start spraying at the lowest setting on the Pressure Control Knob and increase pressure as needed by turning clockwise to create a good spray pattern.

Painting Techniques


Before painting, ensure the Sprayer has been primed (see Priming and Startup steps) and verify that Nozzle Tip is aligned properly. Keep the gun approximately 1 foot from the surface.

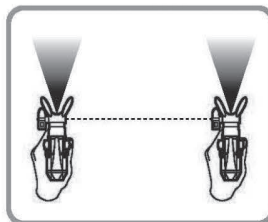

1. Keep gun straight and move arm across at a steady rate while staying one foot from the surface.

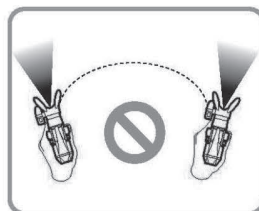

2. Do not fan the gun or paint will be uneven.

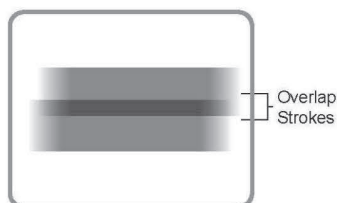

3. Overlap strokes by half, always aim stroke at bottom edge of last stroke.

RETURNS NOT ACCEPTED & WARRANTY VOID
if Sprayer is not properly cleaned immediately after every use.



Clean Sprayer immediately to prevent permanent damage.

Clearing Spray Tip


Occasionally, the Spray Gun Tip will become clogged with paint. Follow these instructions to clear Spray Gun Tip.




1. Switch power off and set Trigger Lock.

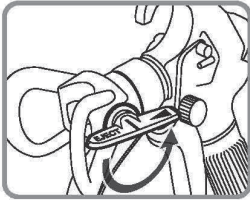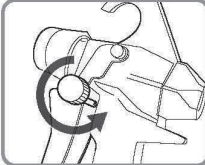


2. Adjust nozzle to clean setting.

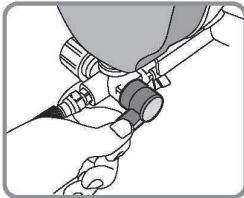


3. Turn Spray/Prime Switch to Spray mode.

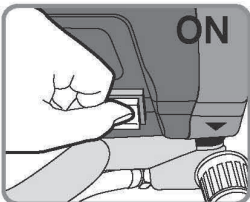


4. Turn power on.

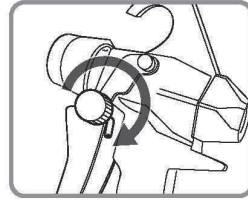


5. Unlock Trigger.

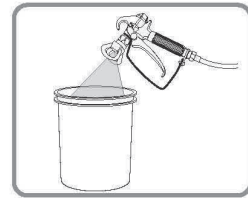

6. Spray into waste bucket until clog clears.

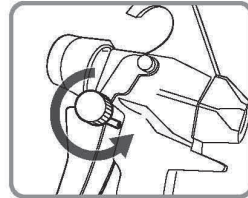

7. Release Trigger and engage Trigger Lock.

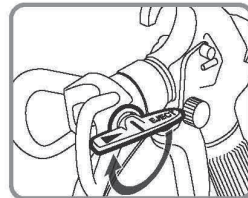


8. Adjust nozzle to Spray mode.


**RETURNS NOT ACCEPTED & WARRANTY VOID
if Sprayer is not properly cleaned immediately after every use.**

Clean Sprayer immediately to prevent permanent damage.


Cleaning

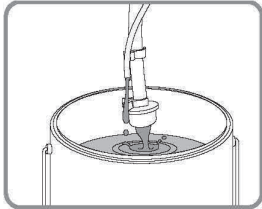


1. Relieve pressure and drain paint from Tubes.

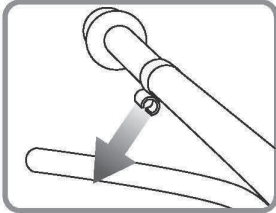



2. Separate tubes.

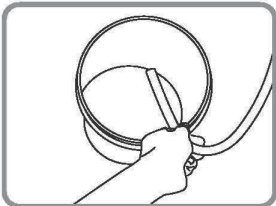


3. Place Priming Tube in empty waste bucket.

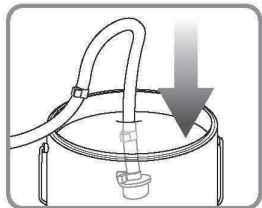


4. Submerge Suction Tube in water or flushing fluid.

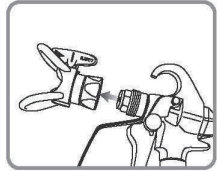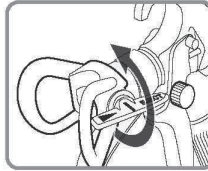


5. Unthread Spray Tip and remove.

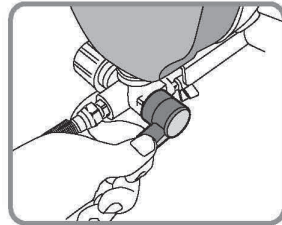

6. Turn to Spray mode.

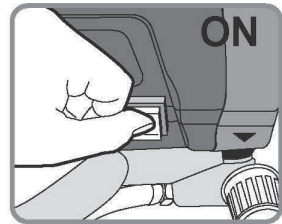


7. Switch power to on.

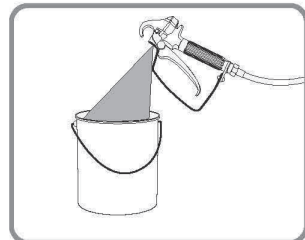


8. Spray paint into paint pail.

RETURNS NOT ACCEPTED & WARRANTY VOID
if Sprayer is not properly cleaned immediately after every use.


Clean Sprayer immediately to prevent permanent damage.

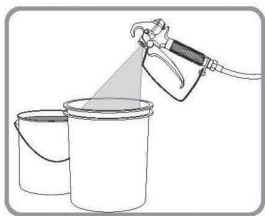


9. Change to waste bucket as paint thins.

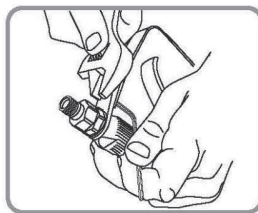


13. Remove trigger guard from housing.

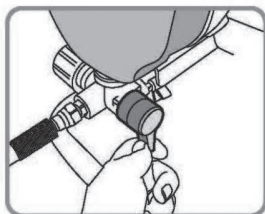


10. Turn to Prime mode.

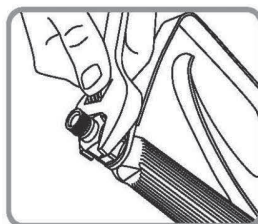


14. Unscrew nut.

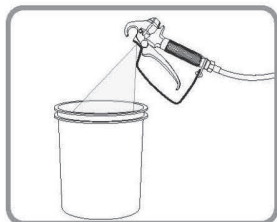


11. Continue to flush until clear.

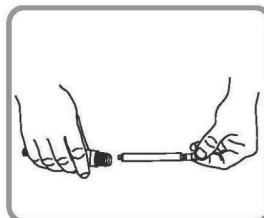

15. Remove filter.

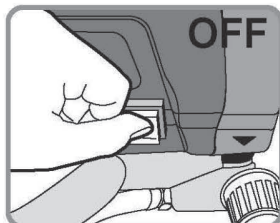

12. Release trigger, turn power off and relieve pressure.

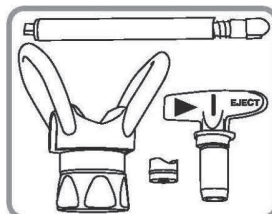

16. Clean all parts in warm, soapy water or flushing fluid with a bristled brush.

**RETURNS NOT ACCEPTED & WARRANTY VOID
if Sprayer is not properly cleaned immediately after every use.**

Clean Sprayer immediately to prevent permanent damage.


Long Term Storage

When cleaning for long term storage (more than 48 hours).


It is very important that the Paint Sprayer is not stored with any water or water-based material left in the Pump, Hose, Tubes, or Spray Gun. This will corrode the product.

IMPORTANT: Clean the Sprayer before storage. See "Cleaning" on pages 16-17.


1. Remove paint hose if not already removed.

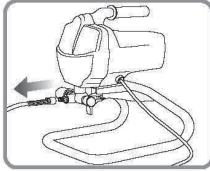


2. Turn the unit over and loosen the Clamps from both Tubes, then disconnect Tubes from the Pump Body.

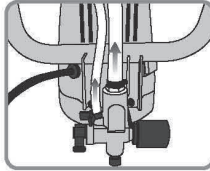


3. Add one ounce of light household oil or a pump storage product into each inlet.

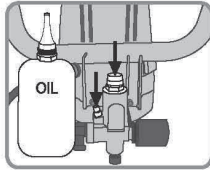


4. Turn Prime/Spray switch to Spray.

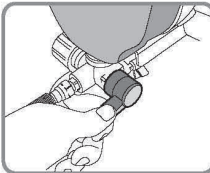


5. Turn Pressure Control Knob to Low/Spray.

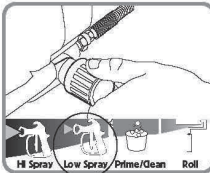


6. Hold a rag over the paint hose outlet.

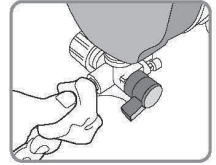


7. Switch Power to ON for five seconds, then turn the power OFF.

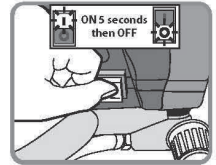

8. Turn Prime/Spray switch to Prime, this will keep storage fluids in sprayer.

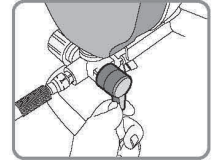

9. Replace the Tubes and secure with the Clamps.

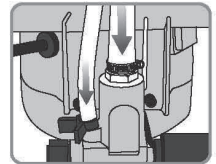

10. Wipe the sprayer with a clean cloth. Store in a clean dry location out of reach of children.

Grounding and Electric Requirements



Grounding Instructions

This product must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with an appropriate grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.


Improper installation of the grounding plug can result in a risk of electric shock.

If repair or replacement of the cord or plug is necessary, do not connect the green grounding wire to either flat blade terminal. The wire with insulation having a green outer surface with or without yellow stripes is the grounding wire and must be connected to the grounding pin. Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided. If the plug will not fit the outlet, have the proper outlet installed by a qualified electrician.

The sprayer cord includes a grounding wire with an appropriate grounding contact.




The sprayer requires for type 8626: 220-240Vac, 50Hz, 11A, circuit with a grounding receptacle.

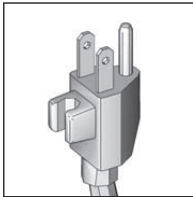

The sprayer requires for type 8626: 100-120Vac, 60 Hz, 11A, 1 phase, circuit with a grounding receptacle.

Never use an outlet that is not grounded or an adapter.

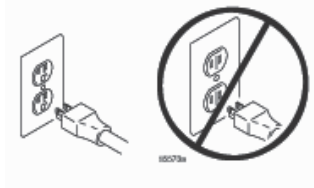

Do not use the sprayer if the electrical cord has a damaged ground contact. Only use an extension cord with an undamaged ground contact.



Small  s may reduce sprayer performance.

Spray gun: ground through connection to a properly grounded fluid hose and pump.

Fluid supply container: follow local code.

Solvent and Oil-based fluids: follow local code. Use only conductive metal pails placed on a grounded surface such as concrete. Do not place the pail on a nonconductive surface such as paper or cardboard, which interrupts grounding continuity.

Grounding the metal pail: Connect a ground wire to the pail by clamping one end to pail and other end to ground such as a water pipe.

To maintain grounding continuity when flushing or relieving pressure: hold metal part of the spray gun firmly to the side of a grounded metal pail, then trigger the gun.



Electrical bonding



A hose, hose assembly, and spray gun assembly shall be constructed to provide electrical bonding to dissipate static electricity from the tip of the Spray gun through the spray gun assembly and the couplings at the ends of the hose to the pump assembly. The spray gun assembly shall also provide an external means to dissipate static electricity during the cleaning process when spraying into a metal container.

Construction

Black hose is constructed of an extruded, seamless thermoplastic inner tube, chemically bonded to multi-layers of high tensile synthetic resistant polyurethane cover. A static drain element of flexible, electrically conductive material is located between the braid layers.

FEATURES

- Polyurethane cover permits greater flexibility and tighter bends
- Resistant to flex fatigue
- Dissipates static charge
- Will not swell or degrade in contact with most paint chemicals, oils and most other solvents
- Light weight- approximately half that of comparable rubber or wire hose
- O.D. smaller than comparable rubber hose without reducing the I.D., pressure rating, or fluid-carrying capacity
- Highly abrasion resistant
- Extremely durable

Daily Maintain

Equipment lifetime is rely on daily maintain. The following respects should be obeyed:

1. Read the Manual carefully before first using.
2. Check the electrical requirement before each working.
3. Thorough cleaning equipment and the accessories after using.
4. Coil the tube after cleaning, in case of any damage.
5. Add some lubricant if long time not use.

General Repair Information



Flammable materials spilled on hot, bare, motor could cause fire or explosion. To reduce risk of burns, fire or explosion, do not operate sprayer with cover removed.

- Keep all screws, nuts, washers, gaskets, and electrical fittings removed during repair procedures. These parts usually are not provided with replacement kits.
- Test repairs after problems are corrected.
- If sprayer does not operate properly, review repair procedure to verify you did it correctly. See **Troubleshooting**, page 8.
- Overspray may build up in the air passages. Remove any overspray and residue from air passages and openings in the enclosures whenever you service sprayer.
- Do not operate the sprayer without the motor shroud in place. Replace if damaged. Motor shroud directs cooling air around motor to prevent overheating and insulates the control board from accidental electric shock.



To reduce risk of serious injury, including electric shock:

- Do not touch moving or electric parts with fingers or tools while testing repair.
- Unplug sprayer when power is not required for testing.
- Install all covers, gaskets, screws and washers before you operate sprayer.

CAUTION


- Do not run sprayer dry for more than 30 seconds. Doing so could damage pump packings.
- Protect the internal drive parts of this sprayer from water. Openings in the cover allow for air cooling of the mechanical parts and electronics inside. If water gets in these openings, the sprayer could malfunction or be permanently damaged.
- Prevent pump corrosion and damage from freezing. Never leave water or water-base paint in sprayer when its not in use in cold weather. Freezing fluids can seriously damage sprayer. Store sprayer with Pump Armor to protect sprayer during storage.

Troubleshooting

1. Common Problem of Equipment

Problem	What To Check <i>(If check is OK, go to next check)</i>	What To Do <i>(When check is not OK, refer to this column)</i>
Motor Won't Operate		
Basic Fluid Pressure	1. Pressure control knob setting. Motor will not run if set at minimum (fully counter-clockwise).	1.Slowly increase pressure setting to see if motor starts
	2. Spray tip or fluid filter may be clogged.	2.Relieve pressure ,then Then clear clog or clean gun filter
Basic Mechanical	1. Pump frozen or hardened paint	1.Thaw sprayer if water or water-based paint has frozen in sprayer. Place sprayer in warm area to thaw. Do not start sprayer until thawed completely. If paint hardened (dried) in sprayer, replace pump packings.
	2. Displacement pump connecting rod pin. Pin must be completely pushed into connecting rod and retaining spring must be firmly ingroove or pump pin.	2. Push pin into place and secure with spring retainer.
	3. Motor. Remove drive housing assembly.	3. Replace motor if fan won't turn.
Low Output	1. Worn spray tip.	1.Relieve pressure, Replace tip
	2. Verify pump does not continue to stroke when gun trigger is released.	2. Service pump.
	3. Prime valve leaking.	3. Relieve pressure, Then repair prime valve.
	4. Suction tube connections	4. Tighten any loose connections. Check o-ring on suction tube.
	5. Electric supply with volt meter. Meter must read 220-240 Vac or 100-120 Vac (According to models). Low voltages reduce sprayer performance.	5. Reset building circuit breaker; replace building fuse. Repair electrical outlet or try another outlet.
	6. Extension cord size and length.	6. Replace with a correct, grounded extension cord.
	7. Leads from motor to circuit board for damaged or loose wire connectors. Inspect wiring insulation and terminals for signs of overheating.	7. Be sure male terminal pins are centered and firmly connected to female terminals. Replace any loose terminals or damaged wiring. Securely reconnect terminals.

	8. Worn motor brushes which must be greater than 1/4 in. (6 mm).	8. Replace brushes.
	9. Motor brushes binding in brush holders.	9. Clean brush holders. Remove carbon dust by using compressed air to blow out brush dust.
	10. Low stall pressure. Turn pressure control knob fully clockwise.	10. Replace pressure control assembly.
	11. Motor armature for shorts by using an armature tester (growler) or perform spin test,	11. Replace motor

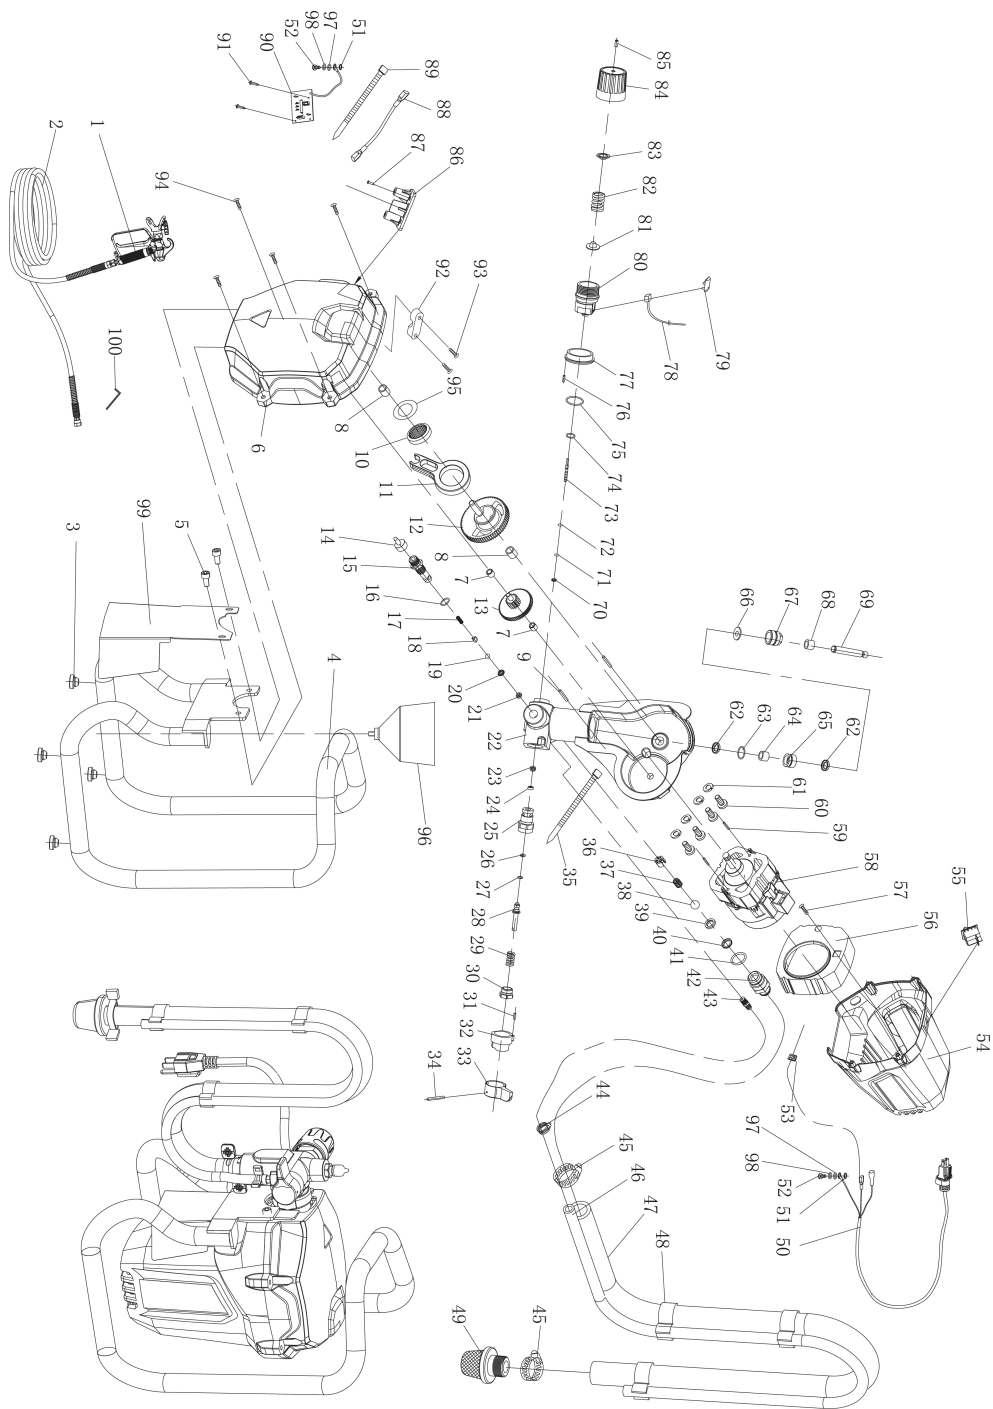


No.	Description	Qty.	No.	Description	Qty.	No.	Description	Qty.
1	Airless spray gun	1	34	Pin 2.5*25	1	67	Hex bolt M6*10	1
2	Paint hose	1	35	Nylon cable tie	1	68	Copper washer	1
3	Food pad	4	36	Inlet spring holder	1	69	Piston	1
4	Base frame	1	37	Input spring	1	70	Lock sleeve	1
5	Hex Bolt M6*25	2	38	Steel ball 12.7	1	71	White seal	1
6	Pump cover	1	39	Input seal	1	72	Sealing washer	1
7	Output Gear bushing	2	40	Input washer	1	73	Pressure control pin	1
8	Pin 5*12	2	41	O-ring 17*1.8	1	74	O-ring 8.8*1.9	1
10	Rolling bearing	2	42	Paint Input adaptor	1	75	O-ring 27*2.4	1
11	Output pole	1	43	Pressure relief plug	1	76	Bolt M3*10	2
12	Gear	1	44	Small clamp	1	77	Pressure seal cover	1
		1	45	Large clamp	2	78	Micro switch	1
13	Output gear	1	46	Priming tube	1	79	Micro switch cover	1
14	Screw	1	47	Suction tube	1	80	Pressure control switch	1
15	Paint outlet	1	48	Clip	3	81	Switch cover	1
16	O-ring 10*8	1	49	Filtrate seat assembly	1	82	Pressure adjusting spring	1
17	Output spring	1	50	Power cord	1	83	Spring pusher	1
18	Mandrel	1	51	Locking ring	2	84	Pressure knob	1
19	Steel ball 6.4	1	52	Screw M4*8	2	85	Pressure control bolt	1
20	Seal seat	1	53	Wire Fastening seat	1	86	PCB supporter	1
21	Output washer	1	54	Housing	1	87	Bolt M4*10	1
22	Pump	1	55	Power switch	1	88	Wire connector	1
23	Plastic washer	1	56	Shutter exhaust cover	1	89	Nylon Cable tie	1
24	Screw seat insert	1	57	Bolt 2X16	1	90	PCB Assembly	1
25	Pressure relief valve seat	1	58	Motor assembly	1	91	Tapping screw	2
26	O-ring 5*1.8	1	59	Pin 3*12	2	92	Power cord fixer	1
27	Ring	1	60	Hex bolt M5*14	4	93	Bolt M4*20	2
28	Pressure relief valve pole	1	61	Spring 5	4	94	Screw 4.8X16	4
29	Spring	1	62	White seal	2	95	Pole stopper	1
30	Spring seat	1	63	O-ring 22.5*1.8	1	96	Cup	1
31	Pin 3*8	1	64	Joint stopper	1	97	Spring washer 4	2
32	Switch seat	1	65	Position washer	1	98	Flat washer 4	2
33	Switch knob	1	66	Black seal	1			


Note:

1. All components apply a little oil before assembled.
2. Even if a sealing ring is damaged, must be replaced the whole repair parts.

220-240Vac Airless Sprayer Electrical Installation Drawing

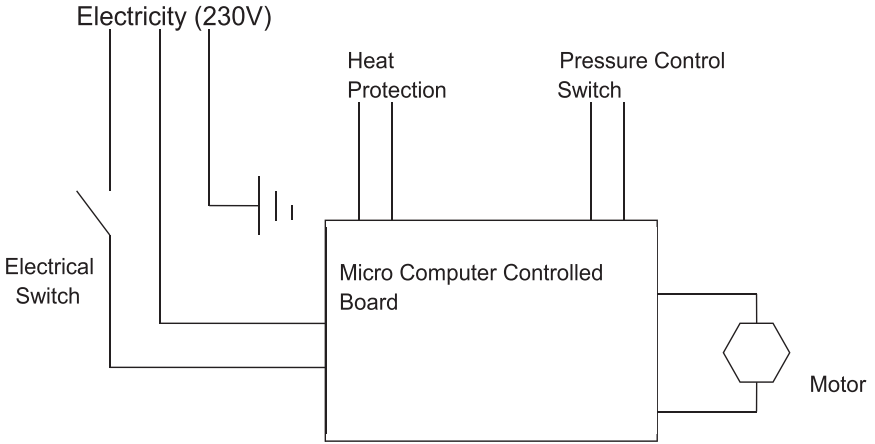

100-120Vac Airless Sprayer Electrical Installation Drawing

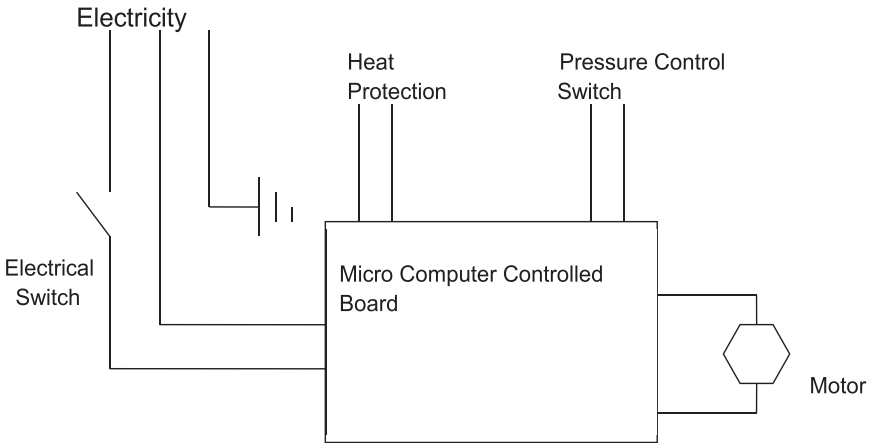

7. DECLARATION DE CONFORMITE CE

BUILDER

32, rue Aristide Bergès –Z1 31270 Cugnaux - France

Tel: +33 (0)5.34.508.508 Fax : +33 (0)5.34.508.509

Déclare que la machine désignée ci-dessous :

Pompe peinture Haute Pression

Modèle: HSP650

Numéro de série : De 20190309444–20190309943

**Est conforme aux dispositions de la directive « machine » 2006/42/CE et aux
réglementations nationales la transposant ;**

Est également conforme aux dispositions des directives européennes suivantes :

A la Directive CEM 2014/30/UE

A la Directive ROHS 2011/65/EU

**Est également conforme aux normes européennes, aux normes nationales et aux
dispositions techniques suivantes :**

EN 12621:2006+A1:2010

EN 60204:2006+A1:2009

EN 55014-1:2006+A1:2009+A2:2011

EN 55014-2:2015

EN61000-3-2 :2014

EN61000-3-3:2013



Philippe MARIE / PDG

Cugnaux:Le 25/8/2018

32, rue Aristide Bergès –Z1 31270 Cugnaux - France

HYUNDAI

POWER PRODUCTS

For Inquiries, Please Contact:

BUILDER SAS

32, rue Aristide Bergès Z1 31270 Cugnaux, France

Tel. +33 (0) 5.34.502.502 Fax: +33 (0) 5.34.502.503

<http://www.hyundaipower-fr.com/>

Made in PRC