


HYUNDAI
POWER PRODUCTS

ELECTRIC MOWER

HTDE1800-1



ORIGINAL INSTRUCTIONS

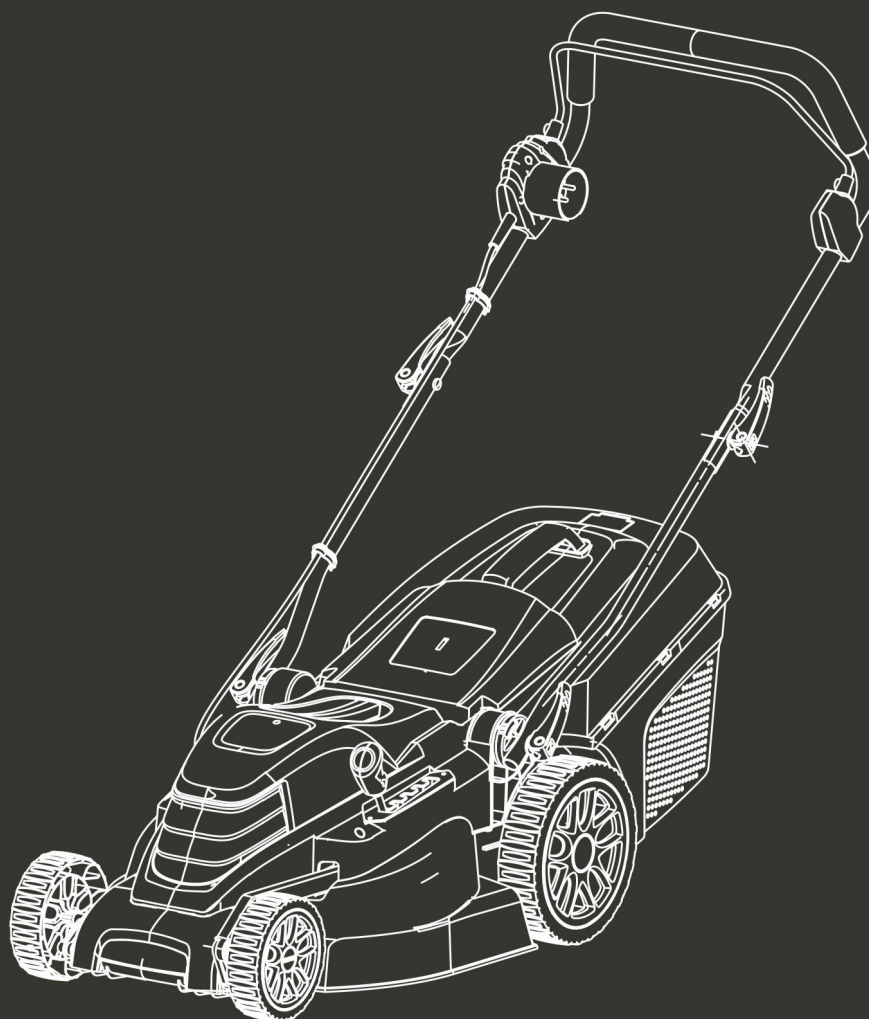

WARNING: Read thoroughly the instruction manual before use.

CONTENTS

1. GENERAL SAFETY INSTRUCTIONS.....	3
2. YOUR PRODUCT.....	8
3. ASSEMBLY.....	9
4. OPERATION.....	13
5. MAINTENANCE AND STORAGE.....	14
6. TROUBLESHOOTING.....	16
7. DISPOSAL.....	16
8. DECLARATION OF CONFORMITY.....	17
9. WARRANTY.....	18
10. PRODUCT FAILURE.....	19
11. WARRANTY EXCLUSIONS.....	20

1. GENERAL SAFETY INSTRUCTIONS

General power tool safety warnings



WARNING! Read all safety warnings, instructions, illustrations and specifications provided with this power tool. *Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.*

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1) Work area safety

- a) **Keep work area clean and well lit.** *Cluttered or dark areas invite accidents.*
- b) **Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.** *Power tools create sparks which may ignite the dust or fumes.*
- c) **Keep children and bystanders away while operating a power tool.** *Distractions can cause you to lose control.*

2) Electrical safety

- a) **Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools.** *Unmodified plugs and matching outlets will reduce risk of electric shock.*
- b) **Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators.** *There is an increased risk of electric shock if your body is earthed or grounded.*
- c) **Do not expose power tools to rain or wet conditions.** *Water entering a power tool will increase the risk of electric shock.*
- d) **Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts.** *Damaged or entangled cords increase the risk of electric shock.*
- e) **When operating a power tool outdoors, use an extension cord suitable for outdoor use.** *Use of a cord suitable for outdoor use reduces the risk of electric shock.*
- f) **If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.** *Use of an RCD reduces the risk of electric shock.*

3) Personal safety

- a) **Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.** *A moment of inattention while operating power tools may result in serious personal injury.*
- b) **Use personal protective equipment. Always wear eye protection.** *Protective equipment such as a dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.*
- c) **Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool.** *Carrying power tools with your finger on the switch or energizing power tools that have the switch on invites accidents.*

- d) **Remove any adjusting key or wrench before turning the power tool on.** *A wrench or a key left attached to a rotating part of the power tool may result in personal injury.*
- e) **Do not overreach. Keep proper footing and balance at all times.** *This enables better control of the power tool in unexpected situations.*
- f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving part.** *Loose clothes, jewellery or long hair can be caught in moving parts.*
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** *Use of dust collection can reduce dust-related hazards.*
- h) **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** *A careless action can cause severe injury within a fraction of a second.*

4) Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.** *The correct power tool will do the job better and safer at the rate for which it was designed.*
- b) **Do not use the power tool if the switch does not turn it on and off.** *Any power tool that cannot be controlled with the switch is dangerous and must be repaired.*
- c) **Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** *Such preventive safety measures reduce the risk of starting the power tool accidentally.*
- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** *Power tools are dangerous in the hands of untrained users.*
- e) **Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** *Many accidents are caused by poorly maintained power tools.*
- f) **Keep cutting tools sharp and clean.** *Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.*
- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** *Use of the power tool for operations different from those intended could result in a hazardous situation.*
- h) **Keep handles and grasping surfaces dry, clean and free from oil and grease.** *Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.*

5) Service

- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** *This will ensure that the safety of the power tool is maintained.*

LAWNMOWER SAFETY WARNINGS

- a) **Do not use the lawnmower in bad weather conditions, especially when there is a risk of lightning.** *This decreases the risk of being struck by lightning.*
- b) **Thoroughly inspect the area for wildlife where the lawnmower is to be used.** *Wildlife may*

be injured by the lawnmower during operation.

- c) **Thoroughly inspect the area where the lawnmower is to be used and remove all stones, sticks, wires, bones, and other foreign objects.** *Thrown objects can cause personal injury.*
- d) **Before using the lawnmower, always visually inspect to see that the blade and the blade assembly are not worn or damaged.** *Worn or damaged parts increase the risk of injury.*
- e) **Before use, check the supply cord and any extension cord for signs of damage or aging. Do not use the lawnmower if the cord is damaged or worn. If the cord is damaged or worn during use, switch off the lawnmower and do not touch the cord before disconnecting it from the supply. A damaged supply cord or extension cord may result in electric shock, fire and/or serious injury.**
- f) **Check the grass catcher frequently for wear or deterioration.** *A worn or damaged grass catcher may increase the risk of personal injury.*
- g) **Keep guards in place, guards must be in working order and be properly mounted.** *A guard that is loose, damaged, or is not functioning correctly may result in personal injury.*
- h) **Keep all cooling air inlets clear of debris.** *Blocked air inlets and debris may result in overheating or risk of fire.*
- i) **While operating the lawnmower, always wear non-slip and protective footwear. Do not operate the lawnmower when barefoot or wearing open sandals.** *This reduces the chance of injury to the feet from contact with the moving blade.*
- j) **While operating the lawnmower, always wear long trousers.** *Exposed skin increases the likelihood of injury from thrown objects.*
- k) **Do not operate the lawnmower in wet grass, Walk, never run.** *This reduces the risk of slipping and falling which may result in personal injury.*
- l) **Do not operate the lawnmower on excessively steep slopes.** *This reduces the risk of loss of control, slipping and falling which may result in personal injury.*
- m) **When working on slopes, always be sure of your footing, always work across the face of slopes, never up or down and exercise extreme caution when changing direction.** *This reduces the risk of loss of control, slipping and falling which may result in personal injury.*
- n) **Use extreme caution when reversing or pulling the lawnmower towards you. Always be aware of your surroundings.** *This reduces the risk of tripping during operation.*
- o) **Keep the supply cord away from the cutting blades.** *A damaged supply cord may result in electric shock, fire and/or serious injury.*
- p) **Switch off and remove plug from mains if the cord is entangled or damaged.** *Entangled or damaged cords can increase the risk of electric shock.*
- q) **Do not touch blades and other hazardous moving parts while they are still in motion.** *This reduces the risk of injury from moving parts.*
- r) **When clearing jammed material or cleaning the lawnmower, make sure all power switches are off and the power cord is disconnected.** *Unexpected operation of the lawnmower may result in serious personal injury.*

Operate the product only in daylight or in good artificial light. Avoid operating the product in wet grass, where feasible.

Stop the cutting means if the machine has to be tilted for transportation when crossing surfaces other than grass and when transporting the machine to and from the area to be used.

Not to tilt the machine when switching on the motor, except if the machine has to be tilted for

starting. In this case, not to tilt it more than absolutely necessary and to lift only the part which is away from the operator.

Stop the machine, and remove plug from the socket, and to make sure that all moving parts have come to a complete stop

- after striking a foreign object, and to inspect the machine for damage and make repairs before restarting and operating the machine;
- if the machine starts to vibrate abnormally, and then to immediately inspect for damage, replace or repair any damaged parts and to check for and tighten any loose parts.

Be careful during adjustment of the machine to prevent entrapment of the fingers between moving cutting means and fixed parts of the machine.

Improper maintenance, the use of non-conforming replacement components, or the removal or modification of safety components can cause serious injury.

Replace worn or damaged components in sets to preserve balance.

When servicing the cutting means to be aware that, even though the power source is switched off, the cutting means can still be moved.

Always allow the machine to cool down before storing.

Empty the grass catcher before storage.

Cleaning and maintenance before storage.

Symbols

	Waste from electrical products should not be disposed of with household waste. Please recycle them in the dedicated facilities. Check with your local authority or retailer for information on recycling.
	Use eye protection. Use hearing protection.
	Complies with all regulatory standards in force in the EU country where the product is bought
	Wear sturdy, non-slip shoes.
	Risk of personal injury, death, or damage to the device in case of non-compliance. Read the instructions for use.
	Use of protective gloves.
	Do not expose to rain.
	WARNING – Beware of thrown objects – keep bystanders away.

	The blade will continue to rotate for a short time after the engine has stopped. Never grab or carry the mower until the knives have stopped rotating.
	This product is doubly electrically insulated.
	Unplug the device from the mains before servicing. Keep the electrical wire away from sharp blades and other sharp objects.
	Immediately disconnect from the mains if the power cord is damaged.
	WARNING – Keep hands and feet away from the blades. WARNING – Remove plug from mains before maintenance or if cord is damaged.
	WARNING – Keep the supply cord away from the blades.

Intended use

The lawn mower is intended for private use i.e. for use in home and gardening environments. Private use of the lawn mower refers an annual operating time generally not exceeding that of 50 hours, during which time the equipment is primarily used to maintain small-scale, residential lawns and home/hobby gardens. Public facilities, sporting halls, and agricultural/forestry applications are excluded.

Residual risk

Due to the high risk of bodily injury to the user, the lawn mower may not be used to trim bushes, hedges or shrubs, to cut scaling vegetation, planted roofs, or balcony-grown grass, to clean (suck up) dirt and debris off walkways, or to chop up tree or hedge clippings. Moreover, the lawn mower may not be used as a power cultivator to level out high areas such as molehills.

For safety reasons, the lawn mower may not be used as a drive unit for other work tools or tool kits of any kind, unless they have been expressly permitted by the manufacturer.

The equipment is to be used only for its prescribed purpose. Any other use is deemed to be a case of misuse. The user/operator and not the manufacturer will be liable for any damage or injuries of any kind caused as a result of this.

Please note that our equipment has not been designed for use in commercial, trade or industrial applications. Our warranty will be voided if the machine is used in commercial, trade or industrial businesses or for equivalent purposes.

2. YOUR PRODUCT

Description



- | | |
|-----------------|---------------------------------|
| 1. Upper handle | 4. Grass collection compartment |
| 2. Lower handle | 5. Wheels |
| 3. Switch box | 6. Motor protection |

Technical data

Model	HTDE1800-1
Voltage	230-240V~ 50Hz
Power index	1800W
No-load speed	3450min ⁻¹
Cutting height	25-80mm, 5 Positions
Cutting width	420mm
Protection class	II
Degree protection	IPX4
Net weight	12.5 kg
Sound pressure level LpA	81.1 dB(A), K=3dB(A)
Sound power level LwA	94.0 dB(A), K=2.06dB(A)
Guaranteed sound power level LwA	96 dB (A)
Vibration value	Max. 2.75 m/s ² , K=1.5 m/s ²

Information:

- The declared vibration total value has been measured in accordance with a standard test method and may be used for comparing one machine with another;
- The declared vibration total value may also be used in a preliminary assessment of exposure.



Warning:

- The vibration emission during actual use of the machine can differ from the declared total value depending on the ways in which the machine is used; and
- The need to identify safety measures to protect the operator that are based on an estimation of exposure in the actual conditions of use (taking account of all parts of the operating cycle such as the times when the machine is switched off and when it is running idle in addition to the trigger time).
- It is necessary to wear hearing protection.

3. ASSEMBLY

Preparation

- 1) Connect lower handles (4) and the housing (7) with supplied clip(1) and fixed parts(2,3,5,6,8) (Fig.1)

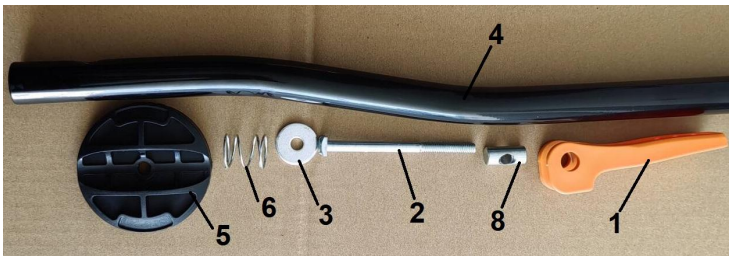


Fig. 1

- 2) Put the cable hook(1) on upper handle(2) (Fig.2)



Fig. 2

- 3) Connect upper handle (2) and lower handle (1) with supplied screws(3) , washers (4) and clips(5) (Fig.3)



Fig. 3

4) Fix the cable holders (**Fig.4**)



Fig.4

5) Fit each wheels(2,3,4) over the axles(1) and press the wheel covers (5) into place (**Fig.5**)



Fig. 5

6) Grass collection box assembly. Assemble two halves (1 and 2) and fix them together with upper cover (3), then fix grass catcher handle(4) on upper cover (Fig.6)



Fig.6

7) Lift the flap(1) and place the grass box(3) over the lugs(3) (Fig.7)



Fig.7

8) Finish assemble (**Fig.8**)



Fig.8

CUTTING HEIGHT ADJUSTMENT

In order to achieve the desired cutting height, the front and rear axles should be repositioned under the mower frame.

Caution! Disconnect the mower from the area and make sure the blade has stopped rotating before adjusting the height.

Note: Make sure that the right and left rear wheels are adjusted at the same position corresponding to the cutting height.

Cutting height positions (Fig.2c)

- 1) 25mm (lowest cutting height)
- 2) 38mm
- 3) 50mm
- 4) 63mm
- 5) 80mm (highest cutting height)




4. OPERATION

⚠ Caution! Before connecting to the mains, always check that the switch is off. Connect the device to an electrical outlet (under RCD network)

Connecting to power supply


Insert the corresponding plug according to the socket type.

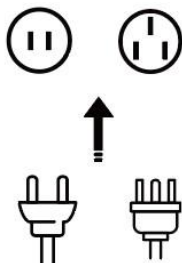

Start

On/off switch (Fig. 3C)


Caution! Do not start the mower if the grass on which it is placed is too high. Press the safety button (A) on the switch and pull the safety lever (B) against the bar. Hold the switch lever while you release the safety button. To stop the mower, release the switch lever, which automatically returns to the off position.

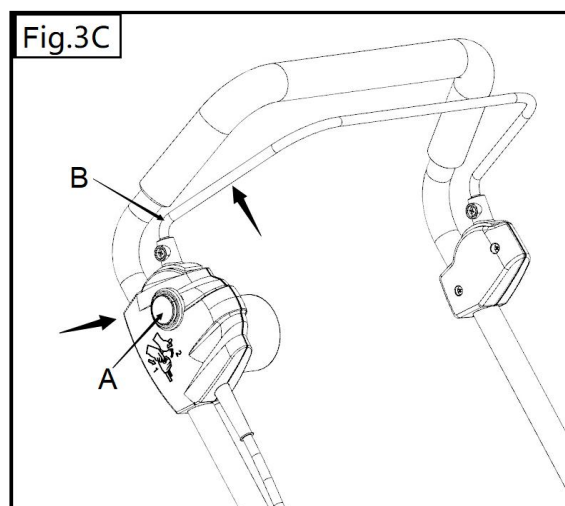

Mowing

We recommend using your lawnmower as described in this section to achieve optimal results and reduce the risk of cutting power cables (Fig. 4C).

- Place the main wiring close to the starting point A.
- Turn on the mower as described above.
- Proceed as described in figure 4 below.
- Change from position A to position B
- Turn right and change to position C.
- Turn left and change to position D.
- Repeat the above processes if needed.

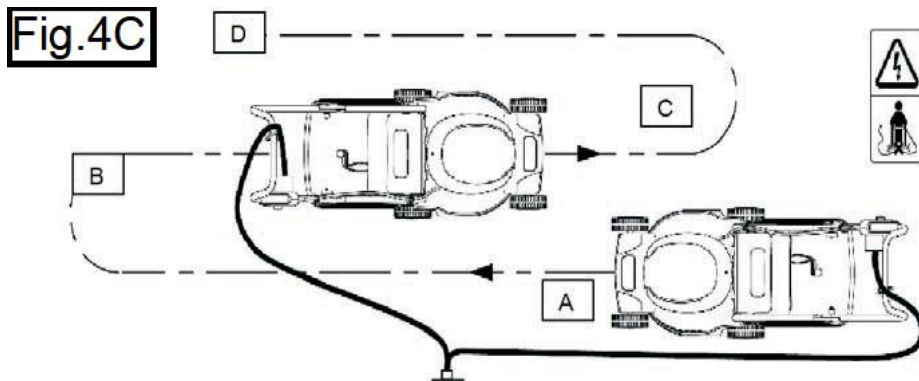

Avoid Hazards while performing:

1. If the product starts to vibrate abnormally (check immediately)
 - inspect for damage,
 - replace or repair any damaged parts,
 - check for and tighten any loose parts.
2. Switch the product off immediately if you are disturbed while working by other people entering the working area. Always let the product come to complete stop before putting it down.
3. Do not overwork yourself. Take regular breaks to ensure you can concentrate on the work and have full control over the product.
4. Empty the grass collection box frequently during use. Do not wait until it is completely full. We recommend emptying it when it is half full.
5. Make sure that the lawn is clear of stones, sticks, wire or other objects that could damage the product or its product.

Instructions for the grass catcher

Putting the grass catcher in place: Lift the deflector and place the grass catcher on the tabs.

Emptying the grass catcher: Before working on the grass catcher, switch off the engine and wait for the blade to fully stop.

When you see the grass scattering underneath the mowers, empty the grass catcher. However, never use the device without the grass catcher.

If you need to tighten the cutting blade, first make sure that your mower is not connected to a power supply, then as shown in the diagrams below, use a screwdriver to lock the pin, then use a wrench to tighten the blade.

Caution! Avoid working towards the cable.

5. MAINTENANCE AND STORAGE

1. Keep all nuts, bolts and screws firmly tightened to ensure that the mower can operate safely.
2. Check the mower deck and grass catcher frequently and make sure they are not worn or damaged.
3. Replace worn or damaged parts for your safety.
4. Be sure to use only the replacement blade, its nut and wrench specific for this product.
5. Be careful when adjusting the mower to prevent your fingers from getting caught between the moving blade and fixed parts of the machine.
6. Lubricate the wheel axles.
7. Store the mower in a dry place.

8. Do not wash the mower with plenty of water, wipe it with a dry cloth. Do not spray water or liquid on the engine and electrical components (switch, extension cord, plugs, etc.).

Blade maintenance


1. Remove grass and dirt from the blade regularly.
2. At the beginning of the gardening season, carefully examine the condition of the blade.
3. If the blade is very blunt, sharpen or replace it.
4. If the blade is damaged or worn, replace it.

Caution! Observe the following precautions:

5. Disconnect the mower from the area and wait until the blade has stopped rotating before proceeding.
6. Be careful not to cut yourself. Use strong work gloves or a cloth to grasp the blade.
7. Make sure to use only the specified replacement blade (Series 40Mn, cutting width 420mm).

Replacing the blade

1. Put the machine on its side.
2. Place the ring on the engine shaft.
3. Place the blade, screw and spring washer.
4. Position the blade on the centring devices.

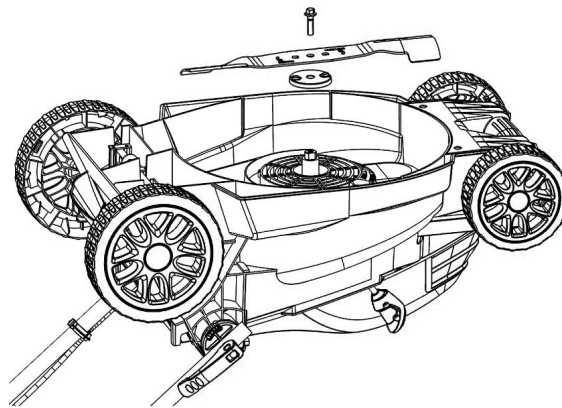

Transporting

Allow the motor to cool.

Remove the grass collection bag. Loosen the quick release and fold down the top section of the handles.

To avoid scratching the mower, insert corrugated cardboard or similar padding between the upper and lower handlebars and the motor.

Due to the mower's weight, use ramps or seek assistance when lifting or loading the mower.

Storage



Keep the machine stored in a dry, level area away from damp, moisture and rain fall. Allow the machine to cool down before storing.

1. Make sure the machine is clean and dry before storing.
2. Make sure the machine is stored away from direct sunlight. Store indoors or in a safe, locked protected area during severe weather and winter months.
3. Ensure the machine is stored in a position, where any persons cannot step on to attempt to reach items up high, due to risk of movement.

4. DO NOT store the machine near an ignition source, such as a wood stove, gas or electric heater, or an appliance or heater with a pilot light.
5. Store the machine out of reach of children or anyone who is not familiar with operation.
6. DO NOT stack other items on top of the machine when in storage.

6. TROUBLESHOOTING

NOTE: All corrective actions should be carried out by suitably qualified person.

Problem	Possible Cause	Possible Solution
Machine will not start	Fuse in mains plug blown/faulty	Check fuse in mains plug and replace if necessary.
	Internal wiring fault.	Contact your service dealer.
Machine functions intermittently.	Internal wiring fault.	Contact your service dealer.
Motor stops	Blockage by foreign object	Remove the foreign object
Result unsatisfactory	Cut height too low	Set a higher cut height
	Blade blunt	Have the blade sharpened or replace it
	Blade area blocked	Clean the equipment
	Blade assembled incorrectly	Install the blade correctly
Blade fails to turn	Blade blocked by grass	Remove the grass
	Blade screw loose	Tighten the blade screw
Strange noises, rattling or vibrations	Blade screw loose	Tighten the blade screw
	Blade damaged	Replace the blade

7. DISPOSAL



Electrical products should not be discarded with household products. According to the European Directive 2012/19/EC on waste electrical and electronic equipment and its implementation into national law, electrical products used must be collected separately and disposed of at collection points provided for this purpose. Talk with your local authorities or dealer for advice on recycling.

8. DECLARATION OF CONFORMITY



Genpower Ltd

Isaac Way London Road Pembroke Dock Pembrokeshire SA72 4RW United Kingdom

Declares that the machinery designated below:

ELECTRIC MOWER

HTDE1800-1

Serial number: 20260803521-20260803760

Complies with the provisions of the Directive "machinery" 2006/42/EC and regulations

National transposing it;

Also complies with the following European directives:

EMC Directive 2014/30/EU

Noise Directive: 2000/14 / EC + Annex VI & 2005/88 / EC

Guaranteed sound power level: 96 dB(A)

Sound power level: 94 dB(A) K=2.06 dB(A)

RoHS Directive (EU)2015/863 amending 2011/65/EU

Also complies with European standards, national standards and provisions following techniques:

EN 62841-1: 2015/A11:2022

EN IEC 62841-4-3: 2021/A11:2021

EN IEC 55014-1 :2021

EN IEC 55014-2 :2021

EN IEC 61000-3-2 :2019/A1:2021

EN 61000-3-3:2013/A2:2021

**Certified body of the noise directive: TÜV SÜD Industrie Service GmbH, Westendstraße 199
80686 MÜNCHEN (Germany) Noise test code: 0036**

Done at Pembrokeshire: 10/07/2026

Name of QC manager: Roland Llewellyn

9. WARRANTY

The manufacturer guarantees the product against defects in material and workmanship for a period of 2 years from the date of the original purchase. It can be extended by one year if the user subscribes to website of myswap. The warranty only applies if the product is for household use. The warranty does not cover breakdowns due to normal wear and tear.

The manufacturer agrees to replace parts identified as defective by the designated distributor. The manufacturer does not accept responsibility for the replacement of the machine, in whole or in part, and/or ensuing damage.

The warranty does not cover breakdowns due to:

- insufficient maintenance.
- abnormal assembly, adjustment or operations of the product.
- parts subject to normal wear and tear.

The warranty does not extend to:

- shipping and packaging costs.
- using the tool for a purpose other than that for which it was designed.
- the use and maintenance of the machine done in a manner not described in the user manual.

Due to our policy of continuous product improvement, we reserve the right to alter or change specifications without notice. Consequently, the product may be different from the information contained therein, but a modification will be undertaken without notice if it is recognized as an improvement of the preceding characteristic.

READ THE MANUAL CAREFULLY BEFORE USING THE MACHINE.

When ordering spare parts, please indicate the part number or code, you can find this in the spare parts list in this manual. Keep the purchase receipt; without it, the warranty is invalid. To help you with your product, we invite you to contact us by phone or via our website:

+33 (0)9.70.75.30.30

<https://services.swap-europe.com/contact>

You must create a "ticket" via the web platform.

- Register or create your account.
- Indicate the reference of the tool.
- Choose the subject of your request.
- Describe your problem.

Attach these files: invoice or sales receipt, photo of the identification plate (serial number), photo of the part you need (for example: pins on the transformer plug which are broken).



10. PRODUCT FAILURE

WHAT TO DO IF MY MACHINE BREAKS DOWN?

If you bought your product in a store:

- Make sure that your machine is complete with all accessories supplied, and clean! If this is not the case, the repairer will refuse the machine.
- Go to the store with the complete machine and with the receipt or invoice.

If you bought your product on a website:

- Make sure that your machine is complete with all accessories supplied, and clean! If this is not the case, the repairer will refuse the machine.
- Create a SWAP-Europe service ticket on the site: <https://services.swap-europe.com> When making the request on SWAP-Europe, you must attach the invoice and the photo of the nameplate (serial number).

Contact the repair station to make sure it is available before dropping off the machine.

Go to the repair station with the complete machine packed, accompanied by the purchase invoice and the station support sheet downloadable after the service request is completed on the SWAP-Europe site

Please keep your original packaging to allow for after-sales service returns or pack your machine with a similar cardboard box of the same dimensions.

For any question concerning our after-sales service you can make a request on our website <https://services.swap-europe.com>

Our hotline remains available at +33 (9) 70 75 30 30.



11. WARRANTY EXCLUSIONS

THE WARRANTY DOES NOT COVER:

- Start-up and setting up of the product.
- Damage resulting from normal wear and tear of the product.
- Damage resulting from improper use of the product.
- Damage resulting from assembly or start-up not in accordance with the user manual.
- Periodic and standard maintenance events.
- Actions of modification and dismantling that directly void the warranty.
- Products whose original authentication marking (brand, serial number) has been degraded, altered or withdrawn.
- Replacement of consumables.
- The use of non-original parts.
- Breakage of parts following impacts or projections.
- Accessories breakdowns.
- Defects and their consequences linked to any external cause.
- Loss of components and loss due to insufficient screwing.
- Cutting components and any damage related to the loosening of parts.
- Overload or overheating.
- Poor power supply quality: faulty voltage, voltage error, etc.
- Damages resulting from the deprivation of enjoyment of the product during the time necessary for repairs and more generally the costs related to the immobilization of the product.
- The costs of a second opinion established by a third party following an estimate by a SWAP-Europe repair station
- The use of a product which would show a defect or a breakage which was not the subject of an immediate report and/or repair with the services of SWAP-Europe.
- Deterioration linked to transport and storage*.

* In accordance with transport legislation, damage related to transport must be declared to carriers within 48 hours maximum after observation by registered letter with acknowledgement of receipt. This document is a supplement to your notice, a non-exhaustive list.

Attention: all orders must be checked in the presence of the delivery person. In case of refusal by the delivery person, it you must simply refuse the delivery and notify your refusal.

Reminder: the reserves do not exclude the notification by registered letter with acknowledgement within 72 hours.

Information:

Thermal devices must be wintered each season (service available on the SWAP-Europe site). Batteries must be charged before being stored.

HYUNDAI

POWER PRODUCTS



For inquiries, please contact:

Genpower Ltd

Isaac Way London Road Pembroke Dock Pembrokeshire SA72 4RW United Kingdom

T. +44 (0)1646 687880 | F. +44 (0)1646 686198

www.hyundaipowerequipment.co.uk

Fabriqu  en R publique Populaire de Chine(PRC)

Importer by Genpower Ltd

Licensed by Hyundai Corporation Holdings,Korea