


HYUNDAI
POWER PRODUCTS

PETROL LONG-REACH HEDGE TRIMMER

HTHTP52

ORIGINAL INSTRUCTIONS

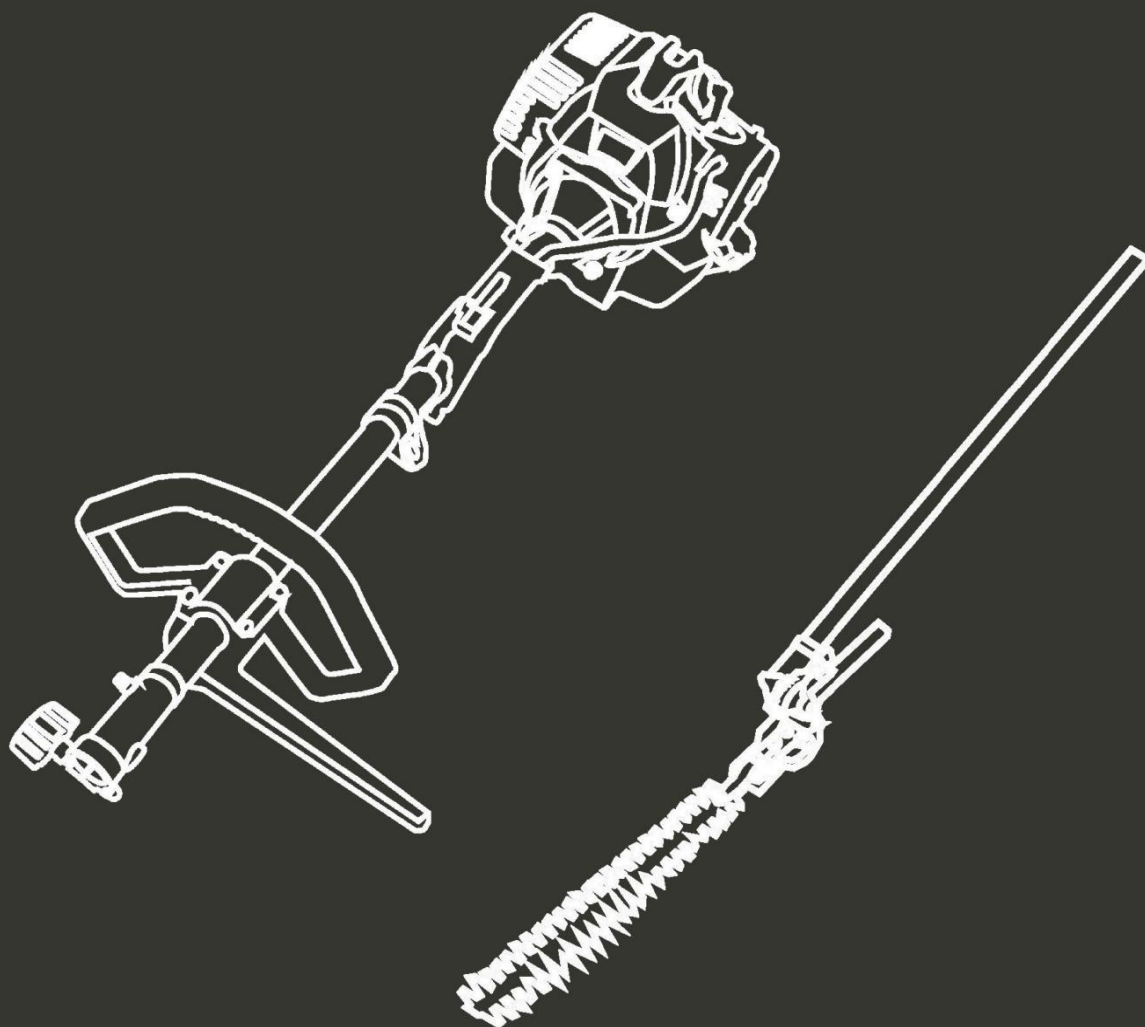

WARNING: Read thoroughly the instruction manual before use

CONTENTS

1. SAFETY INSTRUCTIONS	3
2. INTENDED USE	6
3. SYMBOLS ON MACHINE	7
4. KNOW YOUR TOOL	8
5. ASSEMBLY	9
6. FILLING THE FUEL TANK	10
7. OPERATION	11
8. CARE AND MAINTENANCE	12
9. TECHNICAL DATA	14
10. TROUBLESHOOTING	15
11. EC DECLARATION OF CONFORMITY	16
12. WARRANTY	17
13. PRODUCT FAILURE	18
14. WARRANTY EXCLUSIONS	19

1. SAFETY INSTRUCTIONS

IMPORTANT! Read carefully before use Keep for future reference.

Safe operating practices

Training

Become familiar with the owner's manual before attempting to operate the equipment.

Preparation

- a) THIS HEDGE TRIMMER CAN CAUSE SERIOUS INJURIES. Read the instructions carefully for the correct handling, preparation, maintenance, starting and stopping of the hedge trimmer. Become familiar with all controls and the proper use of the hedge trimmer.
- b) Never allow children to use the hedge trimmer.
- c) Beware of overhead power lines.
- d) Avoid operating while people, especially children, are nearby.
- e) Dress properly! Do not wear loose clothing or jewellery, which can be caught in moving parts. Use of sturdy gloves, non-skid footwear and safety glasses is recommended.
- f) Use extra care when handling fuels. They are flammable and the vapors are explosive. The following points should be observed:
 - Use only an approved container.
 - Never remove the fuel cap or add fuel with the power source running. Allow engine and exhaust components to cool down before refuelling.
 - Do not smoke.
 - Never refuel indoors.
 - Never store the hedge trimmer or fuel container inside where there is an open flame, such as near a water heater.
 - If fuel is spilled, do not attempt to start the power source, but move the hedge trimmer away from the spillage before starting.
 - Always replace and securely tighten the fuel cap after refuelling.
 - If the fuel tank is drained, this should be done outdoors.
- g) If the cutting mechanism strikes any foreign object or the hedge trimmer starts making any unusual noise or vibration, shut off the power source and allow the hedge trimmer to stop. Disconnect the spark plug and take the following steps:
 - inspect for damage;
 - check for, and tighten, any loose parts;
 - have any damaged parts replaced or repaired with parts having equivalent specifications
- h) Wear ear protection.
- i) Wear eye protection.
- j) In case of emergency, stop the hedge trimmer; release the trigger, switch off the tool with the ON/OFF button. Let it completely stop and be cool before any intervention.

Operation

Use the tool for the intended purpose and follow these provided instructions for use and maintenance

- a) Stop the engine before:
 - cleaning or when clearing a blockage,
 - checking, carrying out maintenance or working on the hedge trimmer,
 - adjusting the working position of the cutting device,
 - Leaving the hedge trimmer unattended.
- b) Ensure that the hedge trimmer is correctly located in a designated working position before starting the engine.
- c) While operating the hedge trimmer, always ensure that the operating position is safe and secure, especially when using steps or a ladder.
- d) Do not operate the hedge trimmer with a damaged or excessively worn cutting device.
- e) To reduce fire hazards, keep the engine and silencer free of debris, leaves and excessive lubricant.
- f) Always ensure that all handles and guards are fitted when using the hedge trimmer. Never attempt to use an incomplete hedge trimmer or one fitted with an unauthorized modification.
- g) Always use two hands to operate a hedge trimmer fitted with two handles.

Maintenance and storage

- a) When the hedge trimmer is stopped for servicing, inspection or storage, shut off the power source, disconnect the spark plug wire from the spark plug and make sure all moving parts have come to a stop. Allow the hedge trimmer to cool before making any inspections, adjustments, etc.
- b) Store the hedge trimmer where the fuel vapour will not reach an open flame or spark. Always allow the hedge trimmer to cool down before storing.
- c) When transporting or storing the hedge trimmer, always fit the cutting device transport guard.

Additional instructions

- Never allow children to use the hedge trimmer.
- Work only during in the day or with a sufficient artificial light.
- Before starting to work, check the condition of the tool.
- Ensure that all the parts of the machine are well fixed and tightened.
- Control regularly that the blade of cut is in good state.
- Always hold firmly the hedge trimmer with the two hands.
- Never take or hold the hedge trimmer by the blade.
- Maintain clothing out of reach blade as well with the stop as under operation.
- Keep the device distant from all shapes of sparks, flames and flammable materials.
- Control that the working areas are free from all shapes of obstacles.

- Work with precaution, be not distracted.
- Do not use the tool when you are under the influence of alcohol, meds or drugs, and where you are sick.
- Dry all possible gasoline traces by using a dry rag.
- In case of accident, immediately stop using the machine. Check the problem. Do not use the machine while the machine is damaged.
- Operate the machine only at reasonable hours – not early in the morning or late at night when people might be disturbed;
- When blockage occurs, immediately turn off the engine with the ON/OFF button. Let the tool cool down. Check and correct the blockage before starting again to work. Use gloves when clearing a blockage. Restart the machine securely when the machine is totally unblocked.
- When a danger or a non-intended situation arise, stop to work immediately and switch off the tool. Restart to work when there is no danger and you are able to work safely.
- Cut before the large branches with a hand shears to avoid the blocking of the blade.
- Pay attention not to cut iron wire or others.
- Do not use non-recommended accessories with this tool. To replace any piece of this tool, please contact the retailer, service agent or manufacturer.
- Use only the mixture recommended by the manufacturer.
- Store the mixture in a specific container for the gasoline.
- Keep the device in a quite dry place and out of reach of children.
- Store the mixture only on free air or in a well-ventilated place. Handle the fuel with precaution, it is highly flammable.
- Do not smoke or use telephone when you handle gasoline.
- Use a funnel and fill the tank only when the engine is cold.
- Do not open the tank if the engine is hot or under operation.
- Keep [people and yourself far away from the exhaust to avoid the risks of burns.
- Maintain the people and the animals far away from the working area.
- Always remind that this machine can cause very serious incidents.
- Do not work under the rain and/or in places wet and/or slipping.
- Do not expose to the rain.
- Do not use the tool during bad weather conditions and where a risk of lighting is possible.
- Use complete personal protective equipment during the use of the tool: gloves, antiskid footwear, helmet, eyes protection, protection clothes, and mask of protection.
- Do not use the machine when you are tired, under the influence of alcohol or drugs or sick.

- The machinery must not be used in a way where experience has shown that danger and/or risks might occur.
- The ignition and the carburettor must not be set by the user. This procedure shall be done by our service agent.
- Never use hedge trimmer inside a building. Your hedge trimmer produces toxic exhaust fumes as soon as the engine is started. The use of this product can generate dust, vapors and smoke containing chemicals known for their harmful effects on health. So be careful during the use of your machine and protect yourself correctly. Also avoid voluntarily breathing exhaust fumes; always hold the machine correctly when you use it.














Residual risks

- Even if you use this product in compliance with all safety requirements, the potential risks of injury and damage remain. The following hazards may arise in the structure and design of this product. Always be vigilant when using this product, so you can recognize and manage the risks rather. Rapid intervention can prevent serious injury and property damage.
- There are harmful health consequences resulting from the emission of vibrations if the product is used for long periods of time or not properly managed and properly maintained.
- There is risk of injury and property damage due to attachments or broken the sudden impact of hidden objects.
- Risk of injury to persons and property caused by flying objects.
- Prolonged use of this product exposes the operator to vibration and can produce so-called “white finger” disease. To reduce the risk, wear gloves and keep your hands warm. If any of the symptoms of “white finger syndrome” occur, seek immediate medical attention. Symptoms of the “white finger” include numbness, loss of sensitivity, tingling, tingling, and pain, loss of strength, colour changes or skin condition. These symptoms usually appear on the fingers, hands or wrists. Risk increases at low temperatures
- Inhalation of particles
- Inhalation of exhaust gases
- Unattended projections
- Contact with foreign objects
- Contact with the tool in operation
- Hearing loss in the absence of correct hearing protection


2. INTENDED USE

Your hedge trimmer is a device used by a person to trim hedges and shrubs by working with one or more blades arranged linearly and back and forth. A potential hazard exists if the device is used for other purposes. Improper handling of the hedge trimmer increases the risk of injury from blades. Only the use of spare parts and accessories approved by the manufacturer is permitted

3. SYMBOLS ON MACHINE

	<p>Wear an equipment of protection including a helmet, protective glasses, hearing protection.</p>
	<p>Wear protective gloves.</p>
	<p>Wear protective and non-skid shoes.</p>
	<p>Read the instruction manual.</p>
	<p>Warning – Risk of electric shock. Always beware of the danger from overhead electric-power line, keep a safe distance at least 10m from the power line.</p>
	<p>Guarantee noise level.</p>
	<p>Warning! Cutting element.</p>
	<p>Exhausting gas is dangerous. Do not inhale them.</p>
	<p>Do not smoke.</p>
	<p>Caution: the accessible surface maybe hot when using the tool.</p>
	<p>GASOLINE+OIL mixed 40:1 - Position: FUEL TANK CAP.</p>
	<p>Choke lever - Position: AIR CLEANER COVER.</p>
	<p>Fuel pump.</p>

4. KNOW YOUR TOOL

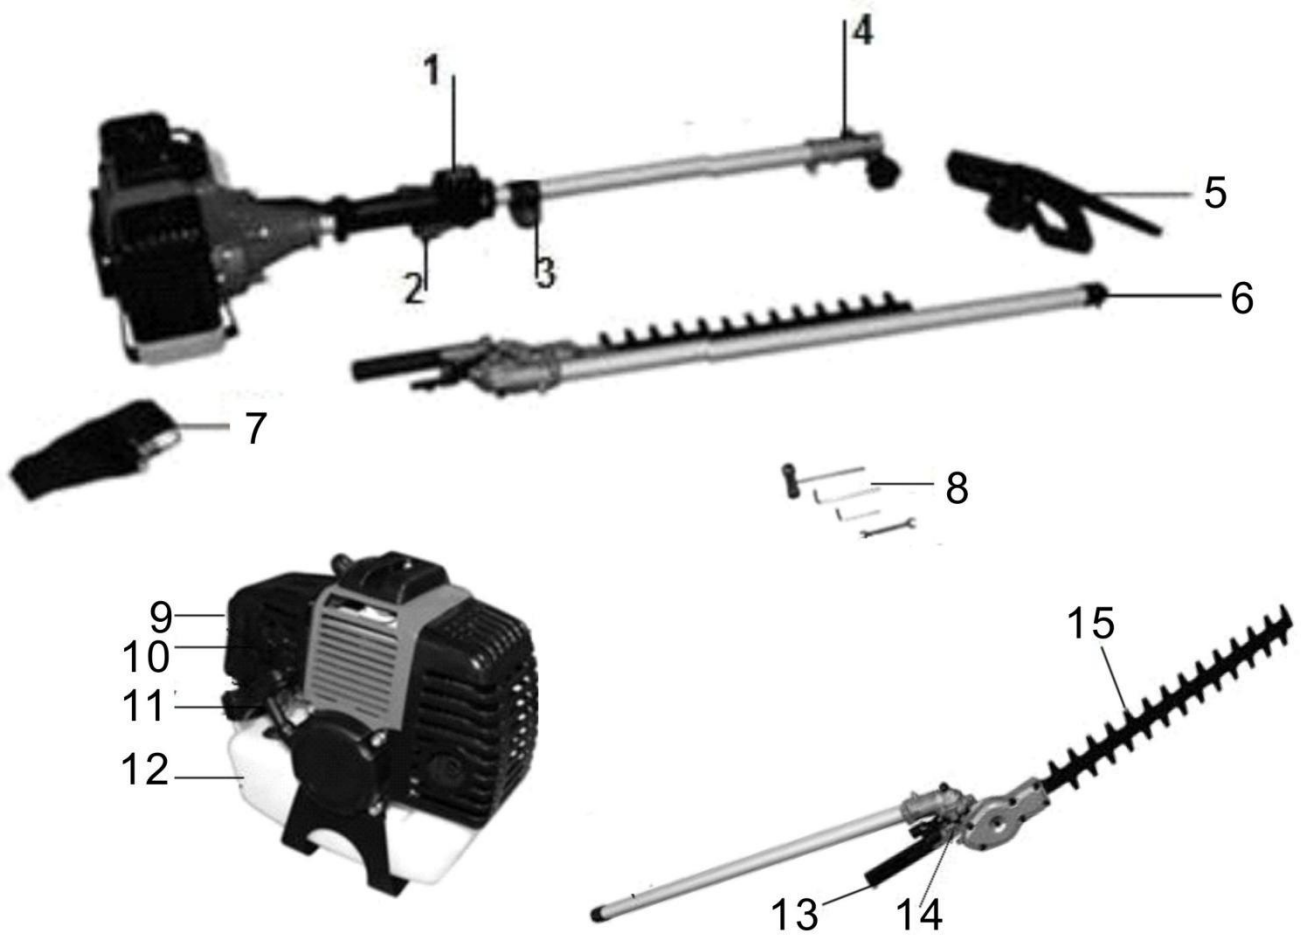


1. ON/OFF switch
2. Throttle lever
3. Hanger
4. Mounting tube
5. Handle
6. Hedge trimmer rod
7. Shoulder strap
8. Tool set

9. Air filter
10. Choke lever
11. Starter
12. Fuel tank
13. Adjustment lever
14. Notching of adjustment 135° from cutting unit
15. Blade

5. ASSEMBLY


Handle

- Unscrew the handle.
- On the main unit, locate the two holes; Install the rubber tap by aligning the holes (the tap is inside the handle).
- Install first bottom of the handle, the pin must be inserted in the hole.
- Install then the last part of the handle and screw it with the four screws.
- Be sure that the handle is well oriented.

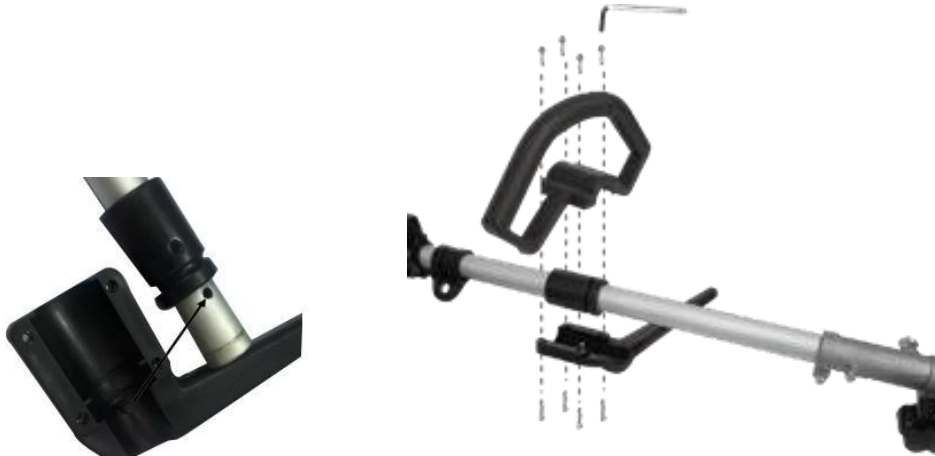

Tube on the main unit

- Remove the rubber which is on the end of the tube.
- On main unit, loosen the knob bolt if necessary. Pull out the pin and install the tube on the tool. Make sure that the pin is well inserted in the hole of the tube.
- Screw the knob bolt securely.

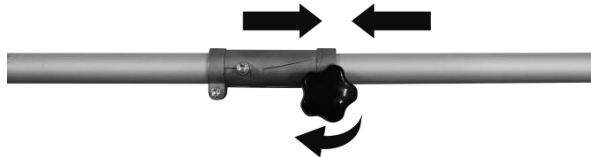


Hedge trimmer

- There is no installation for the hedge trimmer; its tube can be directly installed on the main unit.

Adjusting of the working angle

NOTE: Always fit the blade cover

- Pull both locking ratchet and the locking pin to disengage them from their respective notches.
- Adjust the cutting head to desired working angle.
- Lock the ratchet and the locking pin.
- Ensure that they both firmly into position in their notches.

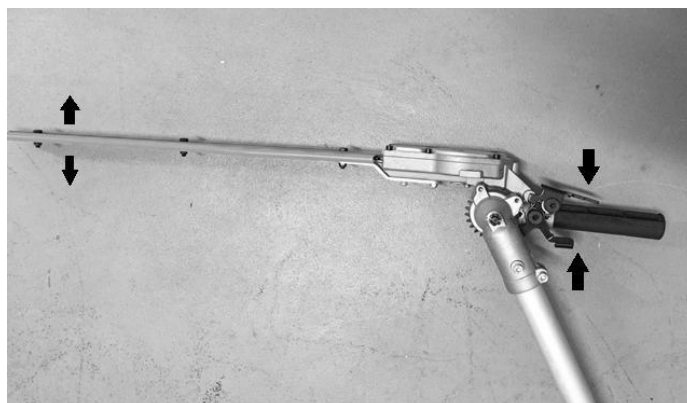

Installation of the harness

- Put on the harness.
- If necessary, adjust the bands of the harness to have the blade parallel to the ground when standing in your normal working position to provide you most effectiveness and comfort on operating the machine.
- Install the hook on the main unit to attach the harness.

Quick release mechanism

Pull the strip to release the machine from you in the case of emergency



6. FILLING THE FUEL TANK

WARNING: When filling the tank:

- **The tool must always be stopped and cooled.**
- **Never smoke during refueling. It must not have flames or sparks near the fuel.**
- **Before refueling, allow the chainsaw to cool completely. Do not attempt to refuel when the engine is hot.**
- **If fuel has been spilled, immediately stop refueling and do not start the engine. Clean up the spill and fill the machine in another location**
- **Never fill the fuel tank to the flange; there is a risk of overflow. Do not refuel in a closed and unventilated area.**

The fuel used for this tool is a mixture of unleaded gasoline and registered engine lubricant. When mixing gasoline with oil, use only gasoline that does not contain ethanol or methanol.

Unleaded gasoline is a quality gasoline type. This will help to avoid damaging the fuel lines of the engine and other engine parts

Always use gasoline with a minimum octane rating of 90RON. Using gasoline with a lower octane rating may cause an increase in engine temperature, causing problems with the engine, including seizure.

The engine requires oil specially adapted for two-stroke engines with an air cooling system. Use quality oil enriched with corrosion-inhibiting products explicitly provided for two-stroke engines with an air cooling system (JASO FC or ISOEGC).

Do not use BIA or TCW OIL (suitable for 2-stroke engines equipped with a water cooling system)

The recommended mixing ratio is 40:1 (make sure the mixing ratio is correct before filling the product.

Mixing

- Mix in a clean, empty container.
- Pour the oil into the container.
- Pour the fuel into the tank. Mix the mixture long enough (more than one minute) to get a good combination

Filling the fuel tank

- Unscrew the fuel tank cap and remove it.
- Fill the tank slowly with the mixture. Do not exceed the maximum capacity (fill to 80% of its capacity preferably).
- Replace the cap on the fuel tank and tighten it.
- Wipe any spillage around the unit if necessary

Note: To avoid damage and accidents, DO NOT USE OTHER MIXTURES AND OTHER TYPES OF OIL / PETROL

Storage of fuel

- The fuel must be kept in a clean and safe container and always closed.
- If you are not using the product for a long time, remove the fuel mixture and add it to a container.
- Do not leave the fuel for a long time in the product. The fuel may clog the carburetor and the engine will not operate properly.


Disposal of fuel


- When the fuel is no longer used or worn, please dispose of it in an authorized location. Check local laws regarding disposal of fuels

7. OPERATION

Starting the operation

■ Cold starting


- Switch on the tool by putting the Start/stop button on the position I (ON).
- Push the primer bulb 7-10 times, until fuel comes into the primer bulb.
- Pull the choke lever to the close position. 
- Pull the starter cord until the engine starts.

- Pull the choke lever to the open position. 
- Allow engine to warm up for a few minutes before using.
- Push the safety switch then the throttle trigger to start the operation

■ Warm starting

The warm starting can be done when the tool was switched off but still hot

- Switch on the tool by putting the Start/stop button on the position I (ON).
- Push the primer bulb 7-10 times, until fuel comes into the primer bulb.

- The choke lever must be kept in the open position.  . If it is not the case, restart the machine by performing a cold starting.
- Pull the starter cord until the engine starts.
- Allow engine to warm up for a few minutes before using.
- Push the safety switch then the throttle trigger to start the operation

■ Stopping the operation

- Release the throttle trigger.
- Let the tool to run a few minutes.
- Switch off the tool by putting the Start/stop switch on the position O (OFF)

Hedge trimmer operation

Warning! Never place the cutting head on the ground while the machine is running.

When using the machine on lawns, hold the scythe at an angle of 30°C and perform semicircular movements by sweeping the ground from left to right.

The best results are obtained when the grass is 15 cm high. When the grass is higher, we recommend repeating the mowing several times.

It is recommended to cut the trapezoidal hedges to prevent the lower branches from being stripped. This corresponds to the natural growth of plants and hedges can be potentially prosperous. The cut makes the new annual shoots reduced, so a dense branching and a good protection of the sight must be considered.

- First, cut the edges of a hedge. Move the hedge trimmer to cut the part that grows greatly from bottom to top. If you cut from top to bottom, the thinner branches move outward; Narrow places or holes may form.
- Cut the top of the hedge, just like a roof or a round shape.
- Cut the seedlings into the desired shape. The main stem must be intact and remain until the hedge reaches the proposed elevation. All other shoots should be cut to half.

8. CARE AND MAINTENANCE

Before any maintenance work, the machine must be switched off and completely cooled.

Maintenance shall be provided regularly and must be done according to the instructions provided in this instruction manual. A clean, well-maintained machine increases its lifetime and efficiency. Improper maintenance can cause damage, accidents and render the tool inoperable in the short term.

Any other maintenance, modification or repair must be carried out by a qualified professional.

Do not immerse the tool in water or any other liquid.

Maintenance

1) Air filter

Check the air filter as often as necessary to maintain in a clean condition. Light surface dust can readily be removed by tapping the filter. Heavy deposits should be washed out in suitable solvent. To clean the filter, remove filter cover by loosening air filter cover knob.



2) Adjusting the carburetor

Do not adjust carburetor unless necessary. If you have trouble with the carburetor, see your dealer. Improper adjustment may cause engine damage and void warranty.

3) Fuel filter

Fuel tank is fitted with a filter. Filter is situated at the free end of fuel pipe. It can be picked with a hook or similar device. Check the fuel filter periodically. Do not allow dust to enter into fuel tank. Clogged filter will cause difficulty in starting engine or abnormalities in starting engine or abnormalities in engine performance.

When filter is dirty, replace the filter. When the inside of the fuel tank is dirty, it can be cleaned by rinsing the tank with gasoline.

4) Spark plug

The tool must be completely cold before manipulating the spark plug.

- Unscrew the cover then remove the spark plug cap
- Clean or replace the spark plug in case of ozone contamination.
- Replace the spark plug if the end of the center electrode is worn.



5) Lubrication

Regularly lubricate the blade. Use a recommended grease to do it. Ask advice to your dealer about the recommended grease to use.

Storage

- Inspect and clean the tool as explained in this manual.
- Empty fuel tank (it can be done by switching on the tool and let it consume all remaining fuel).
- Disassemble the accessories.
- Store the main unit and the accessories in a clean area, out of reach of children. It is recommended to place the tool and accessories in the original package.

9. TECHNICAL DATA

Engine information	
Type of engine	RY1E44-5, 2-stroke engine
Volume of the fuel tank	1200 cm ³
Max engine speed	Max. 10000 min ⁻¹
Engine idling speed	3200±300 min ⁻¹
Clutch engagement speed	Min. 4500 min ⁻¹
Engine displacement	52 cm ³
Maximal power	1,4 kW
Carburettor	MZ15A/Stable, MR15A2-43A/HLIC, 12S21/Huayi, WYK445/Walbro
Spark plug	BOSCH L8RTF, NHSP LD L8RTF, TORCH L7RTC, NGK BP MR7A
Guarantee sound power level	117 dB(A)

Hedge trimmer	
Unit without cutting attachment, empty tank	7.9 kg
Cutting length	390mm (PN410/RoyalGarden), 425mm (YK-58/YINKE)
Type of the hedge trimmer blade	PN410/Royal Garden, YK-58/YINKE
Engine speed with hedge trimmer attachment	10000 min ⁻¹
Gear ratio	28:7(PN410), 43:7(YK-58)
Vibration ahv (front handle) Vibration ahv (rear handle)	10m/s ² ,K=1.5m/s ²
Noise Emission	Sound pressure: LpA, av=95dB(A), K=3dB(A) Sound power: LwA, av = 113dB(A) ,K=3dB(A)

10. TROUBLESHOOTING

Problems	Causes	Resolutions
The tool cannot be started	The starting process is not followed	Follow the instructions use of this manual
	Spark plug dirty or moist	Clean the spark plug or replace it by a new one
	Incorrect carburetor adjustment	Contact your dealer or contact SWAP
The tool starts but no in a full power	Non correct setting of starter	Open the starter
	Air filter is dirty	Clean the air filter
	Incorrect carburetor adjustment	Contact your dealer or contact SWAP
The engine cannot reach its maximal power	Non correct gap between the electrode and the spark plug	Clean the spark plug and adjust the gap between the electrodes or replace them
	Incorrect carburetor adjustment	Contact your dealer or contact SWAP
The engine generate of lot of smoke	Incorrect mix of the tank	Do a correct mix of the fuel(see the corresponding chapter)
	Incorrect carburetor adjustment	Contact your dealer or contact SWAP

11. DECLARATION OF CONFORMITY EC



BUILDER SAS

ZI, 32 rue Aristide Bergès – 31270 Cugnaux - France

Declare that the tool:

HEDGE TRIMMER:

HTHTP52

Serial number: 20210663102-20210663401

Is in conformity with the Directive Machine 2006/42/EC and the national regulation transposing it

Also in conformity with the following European regulation:

EMC Directive 2014/30/EU

Emission Directive 2016/1628/EU

Directive 1907/2006/EU (REACH)

Noise Directive 2000/14/EC Annex V + 2005/88/EC

Sound power: LwA, av = 113dB(A) ,K=3dB(A)

Guarantee sound power level: 117 dB(A)

Is also in conformity with the following standards:

EN ISO 15017:2019

EN ISO 14982:2009

Responsible of the technical file: Mr. Olivier Patriarca

Cugnaux,29/04/2021

Philippe MARIE

12. WARRANTY

HYUNDAI

WARRANTY

The manufacturer guarantees the product against defects in material and workmanship for a period of 2 years from the date of the original purchase. The warranty only applies if the product is for household use. The warranty does not cover breakdowns due to normal wear and tear.

The manufacturer agrees to replace parts identified as defective by the designated distributor. The manufacturer does not accept responsibility for the replacement of the machine, in whole or in part, and/or ensuing damage.

The warranty does not cover breakdowns due to:

- insufficient maintenance.
- abnormal assembly, adjustment or operations of the product.
- parts subject to normal wear and tear.

The warranty does not extend to:

- shipping and packaging costs.
- using the tool for a purpose other than that for which it was designed.
- the use and maintenance of the machine done in a manner not described in the user manual.

Due to our policy of continuous product improvement, we reserve the right to alter or change specifications without notice. Consequently, the product may be different from the information contained therein, but a modification will be undertaken without notice if it is recognized as an improvement of the preceding characteristic.

READ THE MANUAL CAREFULLY BEFORE USING THE MACHINE.

When ordering spare parts, please indicate the part number or code, you can find this in the spare parts list in this manual. Keep the purchase receipt; without it, the warranty is invalid. To help you with your product, we invite you to contact us by phone or via our website:

- **+33 (0)9.70.75.30.30**
- **<https://services.swap-europe.com/contact>**

You must create a "ticket" via the web platform.

- Register or create your account.
- Indicate the reference of the tool.
- Choose the subject of your request.
- Describe your problem.
- Attach these files: invoice or sales receipt, photo of the identification plate (serial number), photo of the part you need (for example: pins on the transformer plug which are broken).



13. PRODUCT FAILURE

WHAT TO DO IF MY MACHINE BREAKS DOWN?

If you bought your product in a store:

- a) Empty the fuel tank if your product has one.
- b) Make sure that your machine is complete with all accessories supplied, and clean! If this is not the case, the repairer will refuse the machine.

Go to the store with the complete machine and with the receipt or invoice.

If you bought your product on a website:

- a) Empty the fuel tank if your product has one..
- b) Make sure that your machine is complete with all accessories supplied, and clean! If this is not the case, the repairer will refuse the machine.
- c) Create a SWAP-Europe service ticket on the site: <https://services.swap-europe.com> When making the request on SWAP-Europe, you must attach the invoice and the photo of the nameplate (serial number).
- d) Contact the repair station to make sure it is available before dropping off the machine.

Go to the repair station with the complete machine packed, accompanied by the purchase invoice and the station support sheet downloadable after the service request is completed on the SWAP-Europe site

For machines with engine failure from manufacturers BRIGGS & STRATTON, HONDA and RATO, please refer to the following instructions.

Repairs will be done by approved engine manufacturers of these manufacturers, see their site:

- <http://www.briggsandstratton.com/eu/fr>
- <http://www.honda-engines-eu.com/fr/service-network-page;jsessionid=5EE8456CF39CD572AA2AEEDFD290CDAE>
- <https://www.rato-europe.com/it/service-network>

Please keep your original packaging to allow for after-sales service returns or pack your machine with a similar cardboard box of the same dimensions.

For any question concerning our after-sales service you can make a request on our website <https://services.swap-europe.com>

Our hotline remains available at +33 (9) 70 75 30 30.



14. WARRANTY EXCLUSIONS

THE WARRANTY DOES NOT COVER:

- Start-up and setting up of the product.
- Damage resulting from normal wear and tear of the product.
- Damage resulting from improper use of the product.
- Damage resulting from assembly or start-up not in accordance with the user manual.
- Breakdowns related to carburetion beyond 90 days and fouling of carburetors.
- Periodic and standard maintenance events.
- Actions of modification and dismantling that directly void the warranty.
- Products whose original authentication marking (brand, serial number) has been degraded, altered or withdrawn.
- Replacement of consumables.
- The use of non-original parts.
- Breakage of parts following impacts or projections.
- Accessories breakdowns.
- Defects and their consequences linked to any external cause.
- Loss of components and loss due to insufficient screwing.
- Cutting components and any damage related to the loosening of parts.
- Overload or overheating.
- Poor power supply quality: faulty voltage, voltage error, etc.
- Damages resulting from the deprivation of enjoyment of the product during the time necessary for repairs and more generally the costs related to the immobilization of the product.
- The costs of a second opinion established by a third party following an estimate by a SWAP-Europe repair station
- The use of a product which would show a defect or a breakage which was not the subject of an immediate report and/or repair with the services of SWAP-Europe.
- Deterioration linked to transport and storage*.
- Launchers beyond 90 days.
- Oil, petrol, grease.
- Damages related to the use of non-compliant fuels or lubricants.

* In accordance with transport legislation, damage related to transport must be declared to carriers within 48 hours maximum after observation by registered letter with acknowledgement of receipt.

This document is a supplement to your notice, a non-exhaustive list.

Attention: all orders must be checked in the presence of the delivery person. In case of refusal by the delivery person, it you must simply refuse the delivery and notify your refusal.

Reminder: the reserves do not exclude the notification by registered letter with acknowledgement within 72 hours.

Information:

Thermal devices must be wintered each season (service available on the SWAP-Europe site). Batteries must be charged before being stored.

HYUNDAI

POWER PRODUCTS

For Inquiries, please contact:

BUILDER SAS

32, Rue Aristide Bergès Z1 31270 Cugnaux, France

Tél.: +33(0)5.34.502.502 Fax : +33(0)5.34.502.503

<http://www.hyundaipower-fr.com/>

Fabriqué en République Populaire de Chine(PRC)