


WET AND DRY VACUUM

HWDV60

ORIGINAL INSTRUCTIONS

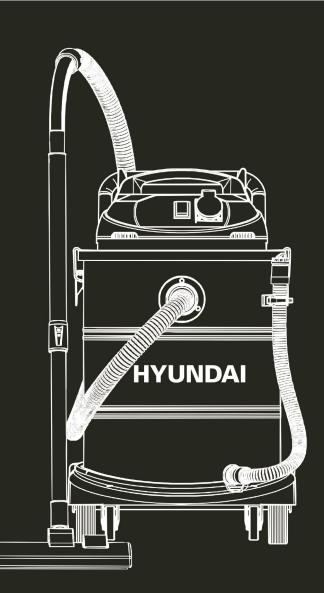



WARNING: Read thoroughly the instruction manual before using.

CONTENTS

1.	SAFETY INSTRUCTIONS	3
2.	PRODUCT DESCRIPTION	5
3.	INTENDED USE	6
4.	TECHNICAL DATA	7
5.	ASSEMBLY	7
6.	OPERATION	8
7.	CLEANING AND MAINTENANCE	10
8.	DISPOSAL AND RECYCLING	10
9.	DECLARATION OF CONFORMITY	11
10	. WARRANTY	12
11	. PRODUCT FAILURE	13
12	WARRANTY EXCLUSIONS	14

1. SAFETY INSTRUCTIONS

When using the appliance, a few safety precautions must be observed to avoid injuries and damage. Please read the complete operating instructions with due care. Keep this manual in a safe place, so that the information is available at all times. If you give the appliance to any other person, hand over these operating instructions as well.

We cannot accept any liability for damage or accidents which arise due to a failure to follow these instructions and the safety instructions.

Read all safety regulations and instructions. Any failures made in following the safety regulations and instructions may result in an electric shock, fire and/or serious injury.

Keep all safety regulations and instructions in a safe place for future use.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.


• IMPORTANT: Read the operating instructions before

assembling and using the appliance for the first time.

- Check that the mains voltage is the same as the mains voltage specified on the rating plate.
- Only connect the appliance to a properly fitted 230V~ 50 /60Hz shock-proof socket.
- Pull out the power plug in the following circumstances: Whenever the appliance is not in use, before opening the appliance and before all cleaning and maintenance work.
- Never clean the appliance with solvents.
- Never pull the plug out of the socket by pulling the cable.
- Never leave the appliance unattended when operational.
- Keep away from children.
- Take care to ensure that the power cable does not get damaged by being run over, crushed, pulled or suchlike.
- Do not use the machine if the power cable is in a less than perfect condition.
- If the power cable has to be replaced, the replacement must comply with the design specifications of the manufacturer. Power cable: H05 VV - F 2 x 0,75 mm²
- Never vacuum the following: Burning matches, smoldering ash and cigarette butts, combustible, caustic, inflammable or explosive substances, vapour or liquids.
- This appliance is not suitable for vacuuming dust which can be harmful to health.
- Store the appliance in a dry indoor location.

- Never use the appliance if it is damaged.
- Only allow the appliance to be serviced by an authorized customer service center.
- Only use the appliance to carry out work for which has been designed.
- Take extra care when cleaning steps.
- Use only genuine accessories and spare parts.
- The guidelines in the operating instructions must be observed. The safety and accident-prevention regulations from the lawgiver are also to be observed.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.


2. PRODUCT DESCRIPTION

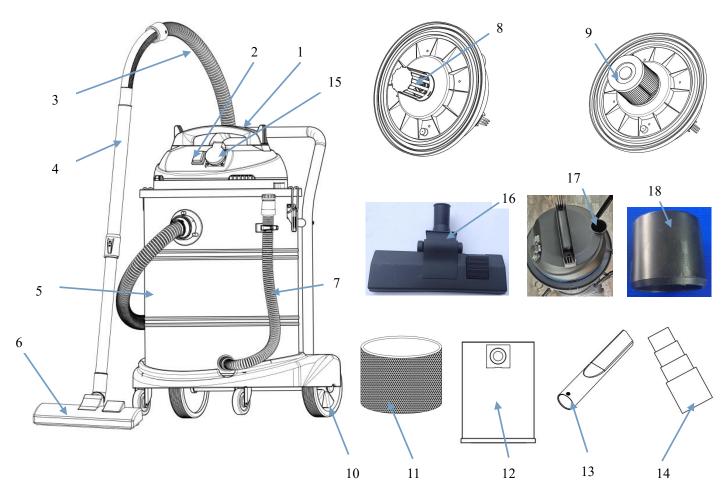

05

1.	Handle	10.	Wheels
2.	ON/OFF switch	11.	Haipa filter
3.	Suction hose	12.	Dirt bag
4.	Metal tube	13.	Crevice nozzle
5.	Tank	14.	Adapter
6.	Floor brush	15.	Socket outlet
7.	Water drain hose	16.	Large vacuum nozzle
8.	Botton bascket	17.	Blow connector
9.	Filter	18.	Floating safety valve

Overview of nozzles

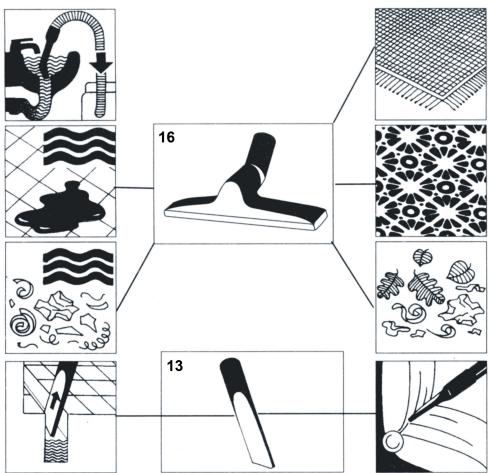

3. INTENDED USE

The wet and dry vacuum cleaner is designed for wet and dry vacuuming using the appropriate filter. The appliance is not suitable for the vacuuming of combustible, explosive or harmful substances. The machine is to be used only for its prescribed purpose. Any other use is deemed to be a case of misuse. The user / operator and not the manufacturer will be liable for any damage or injuries of any kind caused as a result of this.

Please note that our equipment has not been designed for use in commercial, trade or industrial applications. Our warranty will be voided if the machine is used in commercial, trade or industrial businesses or for equivalent purposes.

4. TECHNICAL DATA

Model	HWDV60					
Mains voltage	230V~ 50/60Hz					
Motor power	1600W					
Rated power	3600W(Max. load of socket-outlet:2000W)					
Insulation class	Class I					
Tank volume	60L					
Suction	22Kpa					
Hose length	4m					
Hose diameter	32mm					
Power cable	4m					
Weight	13.5kg					

5. ASSEMBLY

5a	5b	5c
Warning: Unplug before assembly	Release the buckles on both sides	Open the upper cover
5d	5e	5f
Put on the foam filter for wet vacuum-cleaning	Use the haipa filter and install dust bag for dry vacuum -cleaning	Close the upper cover
5g	5h	5i
Install two steering wheels, and two Directional wheels	Fix flexible hose onto connect hole	Connect the metal tube
5j	5k	5L
Connect large vacuum nozzle	Connect the water drain hose and tighten the clamp	Finished assembly

NOTE:

Figure 5d: Use the supplied foam filter for wet vacuum-cleaning. Figure 5e: Use the supplied dust bag for dry vacuum-cleaning.

6. OPERATION

Limportant!

Switch off the equipment if liquid or foam is emitted with the exhaust air when wet vacuum cleaning.

6.1 On/Off switchSwitch position 0: OffSwitch position I: OnSwitch position II: Automatic mode


When push the switch to the "I" position, the vacuum cleaner will work alone; when push the switch to the "O" position, vacuum cleaner will not work; when push the switch to the "II" position, while the tool which is connected with the socket working, the vacuum cleaner also work 3-5 seconds later, while the tool stop working, the vacuum cleaner also stop working.

The outer facility for the socket's power is below 2000W.

6.2 Dry vacuuming

Use the dirt bag (12) for dry vacuuming. Always ensure that the filters are perfectly secure.

Dry vacuum-cleaning

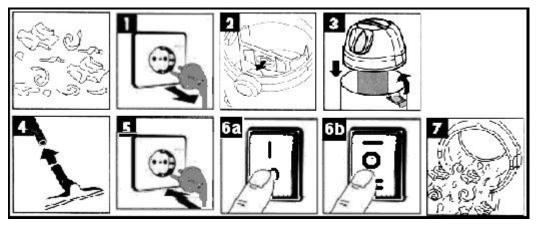

Unplug before change filter (Figure 1), then take out the bag and empty the dust or replace the bag. Slip the dust bag onto the socket(figure 2) for dry vacuum-cleaning.


Insert the plug and turn on the switch, then appliance starts to work (Figure 5 & 6a or 6b) NOTE: The dust bag is suitable only for dry vacuum-cleaning!

6.3 Wet vacuuming

For wet-vacuuming, use the foam filter (11).

Check that the filter is securely fitted at all times.

Wet vacuum - cleaning

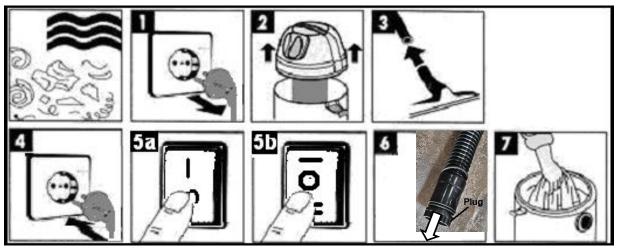

Unplug before change filter (Figure 1)

Pull the supplied foamed plastic filter over the filter basket (Figure 2) for wet vacuum-cleaning. Insert the plug and turn on the switch, then appliance starts to work (Figure 4 & 5a or 5b) Pull out the plug of the drainage hose to drain(Figure 6) and use cleaning cloth to clean the tank(Figure 7).

NOTE: The dust bag included upon delivery is not suitable for wet vacuum-cleaning!

Important!

When wet vacuuming, the floating safety valve (18) closes when the maximum tank level is reached. In doing so, the suction noise of the equipment will change and become louder. You must then switch off the equipment and empty the tank using the drain hose.

Important!

The wet and dry vacuum cleaner is not suitable for the vacuuming of combustible liquids. For wet vacuuming, use only the supplied foam filter.


6.4 Blowing

Insert the suction hose (3) into the blow connector (17), and clockwise rotation to tighten.



7. CLEANING AND MAINTENANCE

Maintenance – cleaning

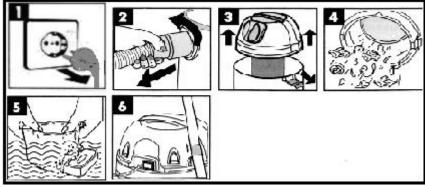

Unplug before maintenance (Figure 1)

Take off the foamed plastic filter (Figure 3), and wash by water (Figure 5)

IMPORTANT: Do not use detergents to clean the filter. The filter must be thoroughly dry before the machine is used.

8. DISPOSAL AND RECYCLING



The appliance is supplied in packaging to prevent its being damaged in transit. This packaging is raw material and can therefore be reused or can be returned to the raw material system. The appliance and its accessories are made of various types of material, such as metal and plastic. Defective components must be disposed of as special waste.

Ask your dealer or your local council.

9. DECLARATION OF CONFORMITY

BUILDER SAS

32 rue Aristide Bergès - Z.I. du Casque - 31270 Cugnaux - France Tel : +33 (0)5.34.502.502 Fax : +33 (0)5.34.502.503

> States that the designated below machine : WET AND DRY VACUUM Model: HWDV60

> > S/N: 20231200001-20231202055

Is in conformity with the essential requirements and other relevant provisions of the applicable European Directives, based on the application of European harmonized standards. Any unauthorized modification of the apparatus voids this declaration.

> Satisfies the requirement of the Council Directives: EC- Low Voltage Directive 2014/35/EU EC Directive of Electromagnetic Compatibility 2014/30/EU Rohs Directive 2011/65/EU & (EU) 2015/863

> > and conforms with the norms:

EN 60335-1:2012+A11:2014+A13:2017+A1:2019+A2:2019+A14:2019+A15:2021 EN 60335-2-2:2010+A11:2012+A1:2013 EN 62233 : 2008 EN IEC55014-1:2021 EN IEC55014-2:2021 EN IEC61000-3-2:2019+A1:2021 EN 61000-3-3:2013+A1:2019+A2:2021

Done at Cugnaux : 09/08/2023

Philippe MARIE/PDG

10. WARRANTY

HYUNDAI

WARRANTY

The manufacturer guarantees the product against defects in material and workmanship for a period of 2 years from the date of the original purchase. The warranty only applies if the product is for household use. The warranty does not cover breakdowns due to normal wear and tear.

The manufacturer agrees to replace parts identified as defective by the designated distributor. The manufacturer does not accept responsibility for the replacement of the machine, in whole or in part, and/or ensuing damage.

The warranty does not cover breakdowns due to:

- insufficient maintenance.
- abnormal assembly, adjustment or operations of the product.
- parts subject to normal wear and tear.

The warranty does not extend to:

- shipping and packaging costs.
- using the tool for a purpose other than that for which it was designed.
- the use and maintenance of the machine done in a manner not described in the user manual.

Due to our policy of continuous product improvement, we reserve the right to alter or change specifications without notice. Consequently, the product may be different from the information contained therein, but a modification will be undertaken without notice if it is recognized as an improvement of the preceding characteristic.

READ THE MANUAL CAREFULLY BEFORE USING THE MACHINE.

When ordering spare parts, please indicate the part number or code, you can find this in the spare parts list in this manual. Keep the purchase receipt; without it, the warranty is invalid. To help you with your product, we invite you to contact us by phone or via our website:

• +33 (0)9.70.75.30.30

https://services.swap-europe.com/contact

You must create a "ticket" via the web platform.

- Register or create your account.
- Indicate the reference of the tool.
- Choose the subject of your request.
- Describe your problem.
- Attach these files: invoice or sales receipt, photo of the identification plate (serial number), photo of the part you need (for example: pins on the transformer plug which are broken).



11. PRODUCT FAILURE

WHAT TO DO IF MY MACHINE BREAKS DOWN?

If you bought your product in a store:

- a) Empty the fuel tank if your product has one.
- b) Make sure that your machine is complete with all accessories supplied, and clean! If this is not the case, the repairer will refuse the machine.

Go to the store with the complete machine and with the receipt or invoice.

If you bought your product on a website:

- a) Empty the fuel tank if your product has one..
- b) Make sure that your machine is complete with all accessories supplied, and clean! If this is not the case, the repairer will refuse the machine.
- c) Create a SWAP-Europe service ticket on the site: https://services.swap-europe.com When making the request on SWAP-Europe, you must attach the invoice and the photo of the nameplate (serial number).
- d) Contact the repair station to make sure it is available before dropping off the machine.

Go to the repair station with the complete machine packed, accompanied by the purchase invoice and the station support sheet downloadable after the service request is completed on the SWAP-Europe site

For machines with engine failure from manufacturers BRIGGS & STRATTON, HONDA and RATO, please refer to the following instructions.

Repairs will be done by approved engine manufacturers of these manufacturers, see their site:

- http://www.briggsandstratton.com/eu/fr
- http://www.honda-engines-eu.com/fr/service-network-page;jsessionid=5EE8456CF39CD572AA2AEEDFD 290CDAE
- https://www.rato-europe.com/it/service-network

Please keep your original packaging to allow for after-sales service returns or pack your machine with a similar cardboard box of the same dimensions.

For any question concerning our after-sales service you can make a request on our website https:// services.swap-europe.com

Our hotline remains available at +33 (9) 70 75 30 30.



12. WARRANTY EXCLUSIONS

THE WARRANTY DOES NOT COVER:

- Start-up and setting up of the product.
- Damage resulting from normal wear and tear of the product.
- Damage resulting from improper use of the product.
- Damage resulting from assembly or start-up not in accordance with the user manual.
- Breakdowns related to carburetion beyond 90 days and fouling of carburetors.
- Periodic and standard maintenance events.
- Actions of modification and dismantling that directly void the warranty.
- Products whose original authentication marking (brand, serial number) has been degraded, altered or withdrawn.
- Replacement of consumables.
- The use of non-original parts.
- Breakage of parts following impacts or projections.
- Accessories breakdowns.
- Defects and their consequences linked to any external cause.
- · Loss of components and loss due to insufficient screwing.
- Cutting components and any damage related to the loosening of parts.
- Overload or overheating.
- Poor power supply quality: faulty voltage, voltage error, etc.
- Damages resulting from the deprivation of enjoyment of the product during the time necessary for repairs and more generally the costs related to the immobilization of the product.
- The costs of a second opinion established by a third party following an estimate by a SWAP-Europe repair station
- The use of a product which would show a defect or a breakage which was not the subject of an immediate report and/or repair with the services of SWAP-Europe.
- Deterioration linked to transport and storage*.
- Launchers beyond 90 days.
- Oil, petrol, grease.
- Damages related to the use of non-compliant fuels or lubricants.

* In accordance with transport legislation, damage related to transport must be declared to carriers within 48 hours maximum after observation by registered letter with acknowledgement of receipt.

This document is a supplement to your notice, a non-exhaustive list.

Attention: all orders must be checked in the presence of the delivery person. In case of refusal by the delivery person, it you must simply refuse the delivery and notify your refusal.

Reminder: the reserves do not exclude the notification by registered letter with acknowledgement within 72 hours.

Information: Thermal devices must be wintered each season (service available on the SWAP-Europe site). Batteries must be charged before being stored.





For inquiries, please contact:

BUILDER SAS 32 rue Aristide Bergès - Z.I. du Casque - 31270 Cugnaux - France Tél.: +33(0)5.34.502.502 Fax.: +33(0)5.34.502.503 http://www.hyundaipower-fr.com/ Fabriqué en République Populaire de Chine(PRC)

Importée par BUILDER SAS, France