

Staple here your receipt



Product	Ref	EAN
Cordless Wet and dry vacuum	DY94289	3616474461963



EN

For any comments or suggestions

Carrefour Consumer service
- CMI
TSA 91431
91343 MASSY Cedex
France
www.carrefour.fr

 **09 69 39 70 00**

APPEL NON SURTAXE

More information on
www.mycarrefourdocs.com

EN




Instruction manual

Cordless Wet and dry vacuum

CCVWD20V2A (DY94289)



ORIGINAL INSTRUCTIONS

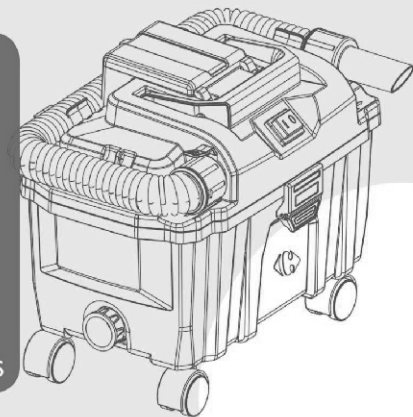

V01_21




Congratulation on your purchase.

The quality team at CARREFOUR cares for its products to meet conformity and performances.

Paying close attention to your satisfaction, our experts work all day on the improvement of our products.



For assembly and/or maintenance and/or use of your product, you can use:

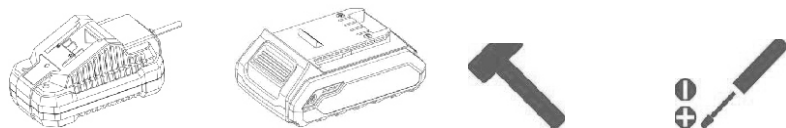

These products are available in CARREFOUR stores.



Read this manual carefully

For a better use of your new device, we recommend you to read carefully this Instruction Manual and keep it for record.

Keep it carefully for future reference.

Please also find information about the scraping of the product in this Instruction Manual.



Safety instructions

Before installing or using this product, please read carefully the safety measures after the table of contents.

WARRANTY EXCLUSIONS

THE WARRANTY DOES NOT COVER:

- Start-up and setting up of the product.
- Damage resulting from normal wear and tear of the product.
- Damage resulting from improper use of the product.
- Damage resulting from assembly or start-up not in accordance with the user manual.
- Breakdowns related to carburetion beyond 90 days and fouling of carburetors.
- Periodic and standard maintenance events.
- Actions of modification and dismantling that directly void the warranty.
- Products whose original authentication marking (brand, serial number) has been degraded, altered or withdrawn.
- Replacement of consumables.
- The use of non-original parts.
- Breakage of parts following impacts or projections.
- Accessories breakdowns.
- Defects and their consequences linked to any external cause.
- Loss of components and loss due to insufficient screwing.
- Cutting components and any damage related to the loosening of parts.
- Overload or overheating.
- Poor power supply quality: faulty voltage, voltage error, etc.
- Damages resulting from the deprivation of enjoyment of the product during the time necessary for repairs and more generally the costs related to the immobilization of the product.
- The costs of a second opinion established by a third party following an estimate by a SWAP-Europe repair station
 - The use of a product which would show a defect or a breakage which was not the subject of an immediate report and/or repair with the services of SWAP-Europe.
 - Deterioration linked to transport and storage*.
 - Launchers beyond 90 days.
 - Oil, petrol, grease.
 - Damages related to the use of non-compliant fuels or lubricants.

* In accordance with transport legislation, damage related to transport must be declared to carriers within 48 hours maximum after observation by registered letter with acknowledgement of receipt.

This document is a supplement to your notice, a non-exhaustive list.

Attention: all orders must be checked in the presence of the delivery person. In case of refusal by the delivery person, it you must simply refuse the delivery and notify your refusal.

Reminder: the reserves do not exclude the notification by registered letter with acknowledgement within 72 hours.

Information:

Thermal devices must be wintered each season (service available on the SWAP-Europe site). Batteries must be charged before being stored.

PRODUCT FAILURE

WHAT TO DO IF MY MACHINE BREAKS DOWN?

If you bought your product in a store:

- Make sure that your machine is complete with all accessories supplied, and clean! If this is not the case, the repairer will refuse the machine.
- Go to the store with the complete machine and with the receipt or invoice.

If you bought your product on a website:

- Make sure that your machine is complete with all accessories supplied, and clean! If this is not the case, the repairer will refuse the machine.

- Create a SWAP-Europe service ticket on the site: <https://services.swap-europe.com> When making the request on SWAP-Europe, you must attach the invoice and the photo of the nameplate (serial number).

Contact the repair station to make sure it is available before dropping off the machine.

Go to the repair station with the complete machine packed, accompanied by the purchase invoice and the station support sheet downloadable after the service request is completed on the SWAP-Europe site

Please keep your original packaging to allow for after-sales service returns or pack your machine with a similar cardboard box of the same dimensions.

For any question concerning our after-sales service you can make a request on our website <https://services.swap-europe.com>

Our hotline remains available at +33 (9) 70 75 30 30.



Pictograms used

	Warning symbols with information on damage and injury prevention.
	Read and understand all instructions before operating the product. Follow all warnings and safety instructions.
	Electrical products must not be disposed of with the domestic waste.
	Protect the rechargeable battery from sunlight and heat (max.50°C) .
	Protect the rechargeable battery from water and moisture.
	Protect the rechargeable battery from fire.
	The charger is for indoor use only.
	Miniature fuse
	Protection class II (double insulation)

CONTENTS

SAFETY INSTRUCTIONS	5
DESCRIPTION OF PRODUCT AND ITEMS SUPPLIED	11
INTENDED USE.....	13
TECHNICAL DATA	13
BEFORE USE.....	13
OPERATION	14
MAINTENANCE AND CLEANING.....	15
STORAGE	16
TROUBLESHOOTING.....	16
DISPOSAL	16
WARRANTY	17
PRODUCT FAILURE	18
WARRANTY EXCLUSIONS.....	19

WARRANTY

The manufacturer guarantees the product against defects in material and workmanship for a period of 2 years from the date of the original purchase. The warranty only applies if the product is for household use. The warranty does not cover breakdowns due to normal wear and tear.

The manufacturer agrees to replace parts identified as defective by the designated distributor. The manufacturer does not accept responsibility for the replacement of the machine, in whole or in part, and/or ensuing damage.

The warranty does not cover breakdowns due to:

- insufficient maintenance.
- abnormal assembly, adjustment or operations of the product.
- parts subject to normal wear and tear.

The warranty does not extend to:

- shipping and packaging costs.
- using the tool for a purpose other than that for which it was designed.
- the use and maintenance of the machine done in a manner not described in the user manual.

Due to our policy of continuous product improvement, we reserve the right to alter or change specifications without notice. Consequently, the product may be different from the information contained therein, but a modification will be undertaken without notice if it is recognized as an improvement of the preceding characteristic.

READ THE MANUAL CAREFULLY BEFORE USING THE MACHINE.

When ordering spare parts, please indicate the part number or code, you can find this in the spare parts list in this manual. Keep the purchase receipt; without it, the warranty is invalid. To help you with your product, we invite you to contact us by phone or via our website:

+33 (0)9.70.75.30.30

<https://services.swap-europe.com/contact>

You must create a "ticket" via the web platform.

- Register or create your account.
- Indicate the reference of the tool.
- Choose the subject of your request.
- Describe your problem.

Attach these files: invoice or sales receipt, photo of the identification plate (serial number), photo of the part you need (for example: pins on the transformer plug which are broken).



STORAGE

Store the equipment and accessories in a dark and dry place at above freezing temperature. The ideal storage temperature is between 5 and 30°C. Store the electric tool in its original packaging.

TROUBLESHOOTING

If the vacuum vibrates abnormally, stop motor immediately. Abnormal vibration usually indicates a mechanical problem, continued operation could lead to injury or damage.

Note: The distributor will not be responsible for any damage or injuries caused by the repair of the vacuum by an unauthorized person or by mishandling of the vacuum. This tool is designed for DIY use - use in commercial or industrial environments will void the warranty.

Symptom	Possible Causes	Corrective Action
Vacuum is not starting	Battery is low in charge	Charge battery
	Battery is not inserted properly	Insert battery pack correctly
	Possible clogging	Empty the debris tank and clean the filter
Vacuum is not operating at full capacity	Debris tank is full	Empty the debris tank
	Filter is clogged	Clean/replace the filter
	Nozzle/ hose is blocked	Check, and clean the nozzle/hose
	Battery is low in charge	Charge battery
Motor stops while vacuuming	Battery has no power	Charge the battery
The battery pack fails to charge	No good contact at the charging contacts.	Repeat the charging action: Insert the power plug of the charger into the socket outlet, Insert the battery pack into the battery charger
	The battery pack is warm or not, The battery protection system will not allow the battery to be charged if the battery temperature is over 40°C after use.	Allow the battery pack to cool to room temperature before commencing with the charging.

DISPOSAL



To help the environment, please dispose of the product properly when it has reached the end of its useful life and not in the household waste. Information on collection points and their opening hours can be obtained from your local authority

Environmental damage through incorrect disposal of the batteries / rechargeable batteries.



Remove the battery pack from the product before disposal. Batteries /rechargeable batteries may not be disposed of with the usual domestic waste. They may contain toxic heavy metals and are subject to hazardous waste treatment rules and regulations. Please dispose of batteries according to the relevant local requirements.

SAFETY INSTRUCTIONS

1. GENERAL POWER TOOL SAFETY WARNINGS

⚠ Danger! When using the equipment, a few safety precautions must be observed to avoid injuries and damage. Please read the complete operating instructions and safety regulations with due care. Keep this manual in a safe place, so that the information is available at all times. If you give the equipment to any other person, hand over these operating instructions and safety regulations as well. We cannot accept any liability for damage or accidents which arise due to a failure to follow these instructions and the safety instructions.



Danger! Read all safety regulations and instructions.

Any errors made in following the safety regulations and instructions may result in an electric shock, fire and/or serious injury.


Keep all safety regulations and instructions in a safe place for future use.

- 1) Important: read the operating instructions before assembling and using the appliance for the first time.
- 2) Never clean the appliance with solvents.
- 3) Never leave the appliance unattended when

operational.

- 4) Keep away from children.
- 5) Never vacuum the following: burning matches, smoldering ash and cigarette butts, combustible, caustic, inflammable or explosive substances, vapor or liquids.
- 6) This appliance is not suitable for vacuuming dust which can be harmful to health.
- 7) Store the appliance in a dry indoor location.
- 8) Never use the appliance if it is damaged.
- 9) Only allow the appliance to be serviced by an authorized after sales service outlet.
- 10) Only use the appliance to carry out work for which has been designed.
- 11) Take extra care when cleaning steps.
- 12) Use only genuine accessories and spare parts.

2. WET & DRY VACUUM SAFETY WARNINGS

 **WARNING!** When using the equipment, a few safety precautions must be observed to avoid injuries and damage. Please read the complete operating manual with due care. Keep this manual in a safe place so that the information is available at all times. If you give the equipment to any other person, give them these

4. TURNING ON/OFF THE DEVICE

- 1) Slide the charged battery into the guide until the handle latch engages. The device is ready for operation.
- 2) Turn the device on using the switch (Fig. A, 3).
- 3) Turn off the device to stop the operation.

MAINTENANCE AND CLEANING

Regularly clean the entire device, paying particular attention to cleaning the ventilation openings of the device. After each use, empty the vacuum cleaner tank, clean it and dry it thoroughly (if used for wet operation). Remove the HEPA filter and clean it. To do this, use a delicate, soft brush, which you need to pre-clean the HEPA filter. Then wash it under running, cold water (rinse, do not use detergents, solvents, etc.).

1. WASHING THE FILTER

Undo the buckles (fig. A, 1) and remove the upper cover of the vacuum cleaner. Turn the filter locking knobs (fig. B, 11) a quarter turn counterclockwise. Remove the filter (fig. B, 10) and rinse it under running cold water. Do not use detergents, solvents, etc. Allow the filter to dry easily at room temperature before reinstalling the filter. Do not use heat guns, hair dryers, heaters, etc. for drying. Reinsert the dried filter and turn the lock knobs a quarter of a turn clockwise.



WARNING: The storage area of the device should be inaccessible to children. If it is necessary to send the device to the service center for repair, protect it against accidental mechanical damage and remove the batteries from the charger socket.



WARNING: Never carry out maintenance work on the device while it is connected to a power source. Before performing any maintenance, remove the battery from the device socket. Maintenance of the device consists in keeping all its elements necessary for normal operation in proper cleanliness. Do not use any solvents for cleaning as this may cause irreversible damage to the housing and other elements made of plastic.

2. BATTERY MAINTENANCE

Avoid charging the battery immediately after heavy use. Due to the characteristics of the battery, it should not be stored completely discharged, as then it may discharge below the critical level and be permanently damaged.

The battery must not be cleaned with water as it may cause an internal short circuit leading to permanent damage.

Therefore, the unused battery should be stored partially charged (up to approx. 40%). Recharge the battery before it is completely discharged. Store batteries between 10-30°C. Stored at low temperatures, it loses capacity faster.

Charging the battery is described in the manual for the battery and charger.

OPERATION

1. CHARGING THE BATTERY PACK (FIG. C)

Note:

- 1) The battery can be damaged in case of improper charging.
- 2) Remove the charger's mains plug before inserting or removing the battery.

The battery is partially charged upon delivery to avoid damage to the battery caused by a deep discharge. Prior to initial start-up and when the battery is low, the battery should be charged. To do so, please proceed as follows (Fig. C):

- 1) Slide the battery pack onto the charger upside down till it locks in place.
- 2) Insert the mains plug of the charger into a properly fused mains socket. The RED charge control LED is illuminated; and charging requires approx. 60min.
- 3) Wait until the RED charge control LED goes out and green charge control LED is illuminated, the battery is fully charged.
- 4) Hold onto the mains plug while pulling the power cable of the charger out of the mains socket. The battery pack and the charger may have become warm during charging, allow the battery to cool down to room temperature.
- 5) Take the battery out of the charger by pressing and holding the battery release button and pulling the battery pack out of the charger.

2. REMOVING /INSERTING THE BATTERY

- 1) Insert the battery pack, place it on a guide track and push it back into the battery holder. It will audibly snap in.
- 2) Detach the battery pack from the tool, press the battery release button on the battery pack and pull the battery out.

3. CHECKING THE BATTERY CHARGING LEVEL

The battery comes with an integrated battery level indication.

The battery status is displayed as follows by the three LEDs of the battery level indication (LED)

LED color	Meaning
Green-Orange-Red	Maximum charge/power
Orange-Red	Medium charge / power
Red	Weak charge – Recharge the battery

Press on the battery charge level button on the battery pack. You can read the battery status from the battery level indication (LED).

operating instructions as well. We cannot accept any liability for damage or accidents which arise due to a failure to follow these instructions and the safety information.

- 1) This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 2) Do not leave appliance unattended when connected to the power supply. Remove battery when not in use and before servicing and cleaning.
- 3) To avoid electric shock, do not expose to rain. Store indoors.
- 4) Never use in the presence of explosive liquids, vapors or explosive dust – such as coal.
- 5) Use only manufacturer's recommended attachments and consumables.
- 6) Never modify the cleaner in any way - this is dangerous and will invalidate the warranty.

- 7) Do not use cleaner without the filter in place.
- 8) If motor sound becomes higher pitched always check for the following:
 - a) Blocked hose or accessory.
 - b) Blocked filter.
 - c) Full container.
- 9) When lifting the unit, always lift it with the handle or under rim of tank. Beware of excess weight.
- 10) Children should be supervised to ensure that they do not play with the appliance.
- 11) The wet and dry vacuum cleaner is designed for wet and dry vacuuming using the appropriate filter. The appliance is not suitable for the vacuuming of combustible, explosive or harmful substances.
- 12) Do not aim the hose at other persons or animals.
- 13) Never pick up asbestos or asbestos dust.
- 14) Wood dust and shavings in a confined area can give rise to fire or an explosion.
- 15) Guard against possible ignition sources.
- 16) Do not pick up any material that is burning or smoldering such as metal grinding dust, cigarette ends, matches etc.
- 17) Always switch the unit off before changing attachments, filters and emptying the tank.

INTENDED USE

The cordless wet and dry vacuum cleaner is designed for wet and dry vacuuming using the appropriate filter. The equipment is not suitable for the vacuuming of combustible, explosive or harmful substances.

1. The equipment is to be used only for its prescribed purpose. Any other use is deemed to be a case of misuse. The user / operator and not the manufacturer will be liable for any damage or injuries of any kind caused as a result of this.
2. Please note that our equipment has not been designed for use in commercial, trade or industrial applications. Our warranty will be voided if the equipment is used in commercial, trade or industrial businesses or for equivalent purposes.

TECHNICAL DATA

Voltage supply to motor: 20V d.c.

Tank volume: 10L

Protection class: IP24

Weight (without battery): 3.2kg

Lithium-ion battery CBA20V2A

Voltage: 20V d.c.

Capacity: 2.0Ah

Charger: CCH20V

Input voltage: 220-240 V~ 50Hz, 65W

Output voltage: 21.5V d.c.

Output current: 2.4A

Charging time: Approx. 60min.

BEFORE USE



WARNING: The preparatory steps described below should be performed with the power source disconnected.

Before using for the first time:

1. Undo the safety buckles (Fig. A, 1) and remove all parts from the tank.
2. Check that the HEPA filter (Fig. B 10) is correctly positioned and the locking knobs (Fig. B, 11) are tightened. Check that the protection against too high water level in the tank (Fig.B,12) is not dirty with anything, clogged, etc.
3. Install the four wheels under the tank by insert them in the dedicated four holes.
4. To the suction opening (Fig. A, 3) connect a flexible hose (Fig. A 8) so that the latch hose fits into the suction opening (it should point upwards).
5. There are tip compartments underneath the tank (Fig. A, 6, 7).
6. Select the appropriate attachment for the job and put it on the flexible hose.
7. Place the battery in the slot (Fig. A, 2).
8. The device is ready for operation.

- 1) Buckle
- 2) Battery socket
- 3) Switch
- 4) Suction opening
- 5) Exhaust opening
- 6) Wide nozzle
- 7) Crevice nozzle
- 8) Flexible hose
- 9) Hose holder
- 10) Washable HEPA filter
- 11) Filter lock knobs
- 12) Protection against too high water level
- 13) Battery pack
- 14) Battery charge level button
- 15) Battery level indication (LED)
- 16) GREEN charge control LED
- 17) RED Charge control LED
- 18) charger

2. ITEMS SUPPLIED

Please check that the article is complete as specified in the scope of delivery. If parts are missing, please contact the seller where you made your purchase at the latest within 5 work days after purchasing the article and upon presentation of a valid bill of purchase.

- Open the packaging and take out the equipment with care.
- Remove the packaging material and any packaging and/or transportation braces (if available).
- Check to see if all items are supplied.
- Inspect the equipment and accessories for transport damage.
- If possible, please keep the packaging until the end of the guarantee period.



Danger! The equipment and packaging material are not toys. Do not let children play with plastic

bags, foils or small parts. There is a danger of swallowing or suffocating!

- Flexible suction hose
- 4x wheels
- Dirt bag
- Foam filter
- Crevice nozzle
- Combination nozzle
- Charger
- Battery pack
- Original operating instructions

18) Always check that the filter is clear and not blocked. Keep all openings clear of any blockages.

19) The equipment is to be used only for its prescribed purpose. Any other use is deemed to be a case of misuse. The user / operator and not the manufacturer will be liable for any damage or injuries of any kind caused as a result of this.

20) Appliance is only to be used with the power supply unit provided with the appliance.

21) The battery must be removed from the appliance before cleaning or maintaining the appliance

3. SAFETY INSTRUCTIONS FOR CHARGER

1) This charger can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the charger in the safe way and understand the hazards involved. Children shall not play with the charger. Cleaning and user maintenance of the charger shall not be made by children without adult supervision.

2) If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

3) Only use this charger CCH20V to charge the battery pack CBA20V2A.

4) To charge the battery, use only the charger supplied

5) Never charge non-rechargeable batteries.

6) During charging the batteries must be placed in a well ventilated area.

4. SPECIAL SAFETY INSTRUCTIONS FOR BATTERY-OPERATED TOOLS

- 1) Ensure that the tool is switched off before inserting the battery. Inserting a battery into a tool that is switched on may result in accidents.
- 2) Recharge the batteries indoors only because the battery charger is designed for indoor use only. Risk of electric shock.
- 3) To reduce the electric shock hazard, unplug the battery charger from the mains before cleaning the charger.
- 4) Do not subject the battery to strong sunlight over long periods and do not leave it on a heater. Heat damages the battery and this is risk of explosion.
- 5) Allow a hot battery to cool before charging.
- 6) Do not open up the battery and avoid mechanical damage to the battery. Risk of short circuit and fumes may be emitted that irritate the respiratory tract. Ensure fresh air and seek medical assistance in the event of discomfort.
- 7) Do not use non-rechargeable battery. This could damage the appliance.
- 8) The recommended ambient temperature range for the charging system during charging is from 4°C to 40 °C.
- 9) The recommended ambient temperature range for tool and battery storage is from 0°C to 50 °C.
- 10) The recommended ambient temperature range for tool and battery use is from -5°C to 50 °C.
- 11) Remove the battery from the device before storage.
- 12) Electrolyte leaking from the cells can cause damage to the skin, clothes or any other items exposed to it. If the electrolyte contacts the skin or clothes, wash thoroughly with clean water. If the electrolyte enters into the eyes, do not rub the eyes but flush them immediately with copious amounts of clean water such as tap water, and immediately consult a doctor.
- 13) Do not disassemble or modify the battery, which can cause short-circuiting between cells or between the cell and its wiring, and disables the battery's safety protection system. These can lead to electrolyte leakage, overheating or a cell or battery, bursting and fire.
- 14) Avoid casual or inadvertent shorting of a battery with metallic objects such as: wire, tools, neckless or hairpins, which can cause short-circuiting, which cause excess current flow, electrolyte leakage, heating of cells or batteries, bursting and fire.
- 15) Keep battery away from a fire or heat. The insulation materials will melt and the gas release vent and protection system will be damaged, causing electrolyte leakage, bursting and possibly fire.
- 16) Not allow the battery to contact with water or gets wet, it may short-circuit, overheat, rust or lose its functions.
- 17) Do not expose the battery to mechanical shock, for example, by dropping, throwing or crushing, causing electrolyte leakage, cell and battery heating, bursting and fire.

- 18) Avoid the battery to directly connect to electric source such as a car lighter socket, or car battery, which may cause excess current to flow at high voltage and can cause electrolyte leakage, overheating of a cell or battery, bursting and fire.

DESCRIPTION OF PRODUCT AND ITEMS SUPPLIED

1. DESCRIPTION OF PRODUCT

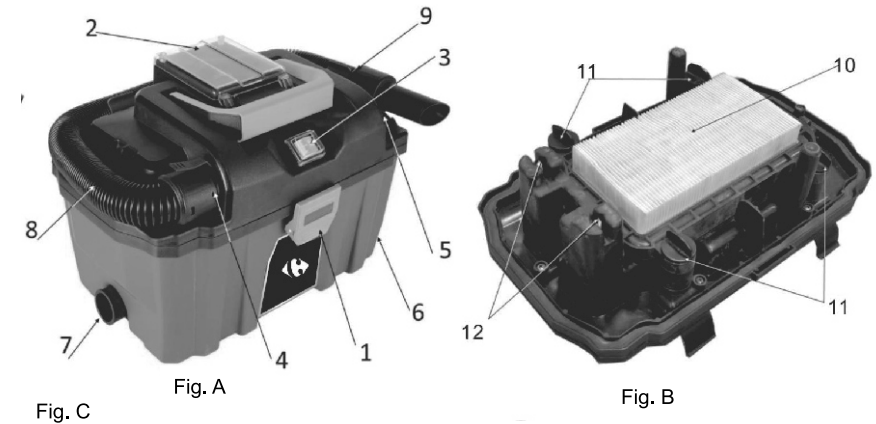


Fig. C

