

 
Instruction manual

# Cordless Screwdriver

CSD4IN1 (DY94269)



ORIGINAL INSTRUCTIONS

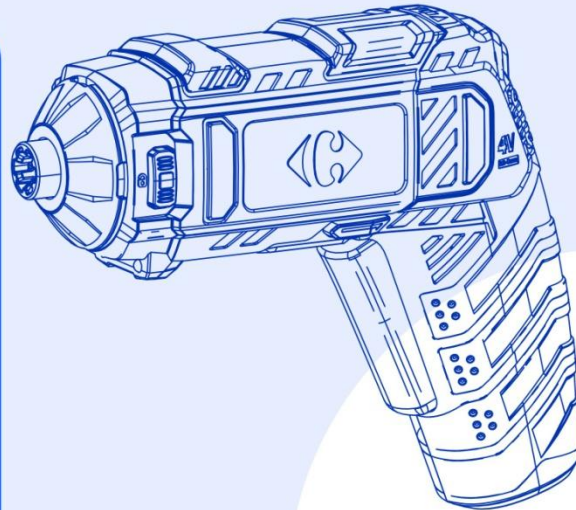



**Congratulation on your purchase.**

**The quality team at CARREFOUR cares for its products to meet conformity and performances.**

**Paying close attention to your satisfaction, our experts work all day on the improvement of our products.**



For assembly and/or maintenance and/or use of your product, you can use:



These products are available in CARREFOUR stores



## **Read this manual carefully**

For a better use of your new device, we recommend you to read carefully this Instruction Manual and keep it for record.

Keep it carefully for future reference.







Please also find information about the scraping of the product in this Instruction Manual.



## **Safety instructions**

Before installing or using the product, please read carefully the safety measures after the summary.

## Pictograms used

	Warning symbols with information on damage and injury prevention.
	Read the operation instructions carefully.
	Read and understand all instructions before operating the product. Follow all warnings and safety instructions.
	The charger is for indoor use only.
	Protection class II (double insulation).
	Electrical products must not be disposed of with the domestic waste.

# CONTENTS

---

<b>SAFETY INSTRUCTIONS .....</b>	<b>5</b>
<b>PRODUCT DESCRIPTION.....</b>	<b>10</b>
<b>INTENDED USE.....</b>	<b>13</b>
<b>BEFORE USE.....</b>	<b>13</b>
<b>OPERATION .....</b>	<b>15</b>
<b>CLEANING &amp; MAINTENANCE .....</b>	<b>16</b>
<b>STORAGE AND TRANSPORTATION .....</b>	<b>16</b>
<b>REPLACEMENT PARTS /ACCESSORIES .....</b>	<b>16</b>
<b>TROUBLESHOOTING .....</b>	<b>17</b>
<b>DISPOSAL .....</b>	<b>17</b>
<b>DECLARATION OF CONFORMITY .....</b>	<b>18</b>
<b>WARRANTY .....</b>	<b>19</b>
<b>PRODUCT FAILURE.....</b>	<b>20</b>
<b>WARRANTY EXCLUSIONS .....</b>	<b>21</b>

# SAFETY INSTRUCTIONS

---

## GENERAL POWER TOOL SAFETY WARNINGS

**WARNING** Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term "power tool" in the warnings refers to your mains-operated (corded) power tool or battery-operated(cordless) power tool.

### 1. Work area safety

- a) Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- b) Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- c) Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

### 2. Electrical safety

- a) Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- b) Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- c) Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
- d) Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- e) When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
- f) If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. Use of an RCD reduces the risk of electric shock.

### 3. Personal safety

- a) Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
- b) Use personal protective equipment. Always wear eye protection. Protective equipment such as a dust mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce personal injuries.
- c) Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- d) Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- e) Do not overreach. Keep proper footing and balance at all times. This enables better control of the

*power tool in unexpected situations.*

**f) Dress properly. Do not wear loose clothing or jewellery. Keep your hair and clothing away from moving parts.** *Loose clothes, jewellery or long hair can be caught in moving parts.*

**g) If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** *Use of dust collection can reduce dust-related hazards.*

**h) Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** *A careless action can cause severe injury within a fraction of a second.*

#### **4. Power tool use and care**

**a) Do not force the power tool. Use the correct power tool for your application.** *The correct power tool will do the job better and safer at the rate for which it was designed.*

**b) Do not use the power tool if the switch does not turn it on and off.** *Any power tool that cannot be controlled with the switch is dangerous and must be repaired.*

**c) Disconnect the plug from the power source and/or remove the battery pack, if detachable, from the power tool before making any adjustments, changing accessories, or storing power tools.** *Such preventive safety measures reduce the risk of starting the power tool accidentally.*

**d) Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** *Power tools are dangerous in the hands of untrained users.*

**e) Maintain power tools and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** *Many accidents are caused by poorly maintained power tools.*

**f) Keep cutting tools sharp and clean.** *Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.*

**g) Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** *Use of the power tool for operations different from those intended could result in a hazardous situation.*

**h) Keep handles and grasping surfaces dry, clean and free from oil and grease.** *Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.*

#### **5. Battery tool use and care**

**a) Recharge only with the charger specified by the manufacturer.** *A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.*

**b) Use power tools only with specifically designated battery packs.** *Use of any other battery packs may create a risk of injury and fire.*

**c) When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** *Shorting the battery terminals together may cause burns or a fire.*

**d) Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.** *Liquid ejected from the battery may cause irritation or burns.*

**e) Do not use a battery pack or tool that is damaged or modified.** *Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.*

**f) Do not expose a battery pack or tool to fire or excessive temperature.** *Exposure to fire or temperature above 130 °C may cause explosion.*

**g) Follow all charging instructions and do not charge the battery pack or tool outside the**

**temperature range specified in the instructions.** *Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.*

## **6. Service**

**a) Have your power tool serviced by a qualified repair person using only identical replacement parts.**

*This will ensure that the safety of the power tool is maintained.*

**b) Never service damaged battery packs.** *Service of battery packs should only be performed by the manufacturer or authorized service providers.*

## **SPECIFIC SAFETY WARNINGS FOR THE SCREWDRIVERS**

**Hold the power tool by insulated gripping surfaces, when performing an operation where the fastener may contact hidden wiring.** *Fasteners contacting a "live" wire may make exposed metal parts of the power tool "live" and could give the operator an electric shock.*

## **ADDITIONAL SAFETY WARNINGS FOR SCREWDRIVERS**

1. Hold the power tool firmly when tightening or loosening screws.
2. Immediately switch off the power tool if the insertion tool blocks.
3. For any work on the device, as well as during transport or storage, set the switch for the clockwise / counter-clockwise rotation to center position (lock). This prevents unintentional starting of the power tool.
4. Wait until the power tool has come to a standstill before putting it down.

## **SAFETY INSTRUCTIONS FOR THE CUTTING ATTACHMENT**

1. Keep your hands clear of the cutting area and the cutting blade.
2. Before carrying out any work on the appliance, ensure that the rotation direction switch is in the middle. This prevents unintentional switching on.
3. Do not cut unless the blade guard is fully functional. Defective blade guards will not protect you against unintentional contact with the cutting blade.
4. Before each use, check whether the blade guard is perfect condition and that the cutting blade is firmly fitted.
5. Always use cutting blades of the correct size and with an appropriate central fixing bore.

## **SPECIAL SAFETY INSTRUCTIONS FOR BATTERY-OPERATED TOOLS**

1. Recharge the batteries indoors only because the battery charger is designed for indoor use only. Risk of electric shock.
2. To reduce the electric shock hazard, unplug the battery charger from the mains before cleaning the charger.
3. Do not subject the battery tool to strong sunlight over long periods and do not leave it on a heater. Heat damages the battery and this is risk of explosion.
4. Allow a hot battery tool to cool before charging.
5. Do not use non-rechargeable battery. This could damage the appliance.
6. The recommended ambient temperature range for the charging system during charging is from 4°C to 40 °C.
7. The recommended ambient temperature range for tool and battery storage is from 0°C to 50 °C.

8. The recommended ambient temperature range for tool and battery use is from -5°C to 50 °C.
9. Electrolyte leaking from the cells can cause damage to the skin, clothes or any other items exposed to it. If the electrolyte contacts the skin or clothes, wash thoroughly with clean water. If the electrolyte enters into the eyes, do not rub the eyes but flush them immediately with copious amounts of clean water such as tap water, and immediately consult a doctor.
10. Do not disassemble or modify the battery tool, which can cause short-circuiting between cells or between the cell and its wiring, and disables the battery's safety protection system. These can lead to electrolyte leakage, overheating or a cell or battery, bursting and fire.
11. Keep battery tool away from a fire or heat. The insulation materials will melt and the gas release vent and protection system will be damaged, causing electrolyte leakage, bursting and possibly fire.
12. Not allow the battery tool to contact with water or gets wet, it may short-circuit, overheat, rust or lose its functions.
13. Do not expose the battery tool to mechanical shock, for example, by dropping, throwing or crushing, causing electrolyte leakage, cell and battery heating, bursting and fire.
14. Avoid the battery tool to directly connect to electric source such as a car lighter socket, or car battery, which may cause excess current to flow at high voltage and can cause electrolyte leakage, overheating of a cell or battery, bursting and fire.

## **SAFETY INSTRUCTIONS FOR CHARGER**

1. This charger can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the charger in the safe way and understand the hazards involved. Children shall not play with the charger. Cleaning and user maintenance of the charger shall not be made by children without adult supervision.
2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
3. Only use the provided charger JLH100501700G1 to charge the appliance.
4. Never charge non-rechargeable batteries.
5. During charging the batteries must be placed in a well-ventilated area.
6. The appliance must only be powered by a very low



safety voltage corresponding to the marking on the appliance.

7. Remove the mains plug when the battery is fully charged and disconnect the charger from the device.
8. The charger must only be used for recharging battery.

 
 
### **RESIDUAL RISK**

 
 
 
 
 
 
Even if properly operating and handling this appliance in accordance with all the safety requirements, potential risks of injury and damage remain. Due to its construction and build, this tool may present the following hazards:

- a) There is risk of a short-circuit due to liquids penetrating the housing. Do not immerse the appliance and charger in water. Make sure that no water or other liquids can enter the housing.
- b) Ear damage if working without ear protection
- c) The inserting tool might still be hot after the application. Burn hazard when touching the inserting tool. Do not touch the inserting tool barehanded. Wear protective gloves!
- d) The harmful /toxic dusts produced during operation pose the risk to the health of the operator and persons in the vicinity. Wear eye protection and a dust mask.
- e) Keep a sufficient distance from heat sources.
- f) The device is not a toy and does not belong in the hands of children.

# PRODUCT DESCRIPTION

(Fig. A)

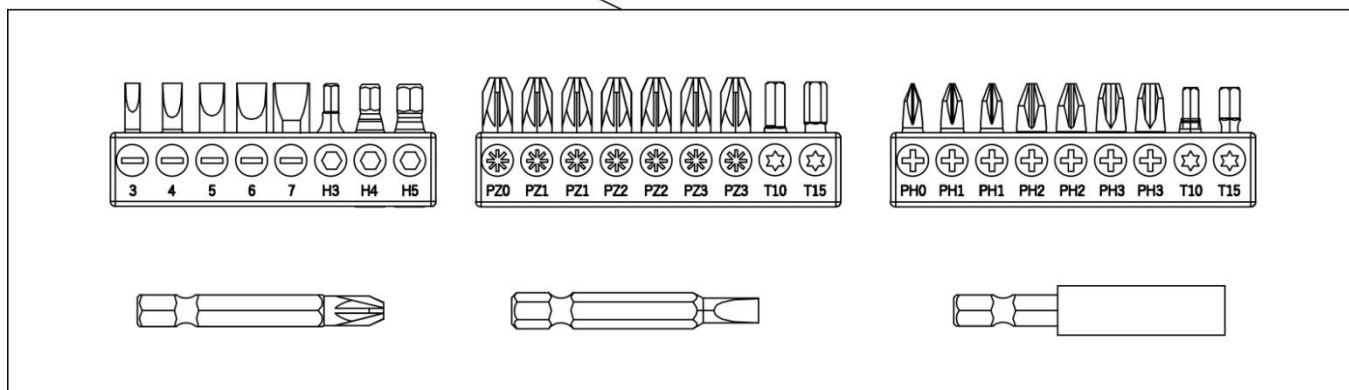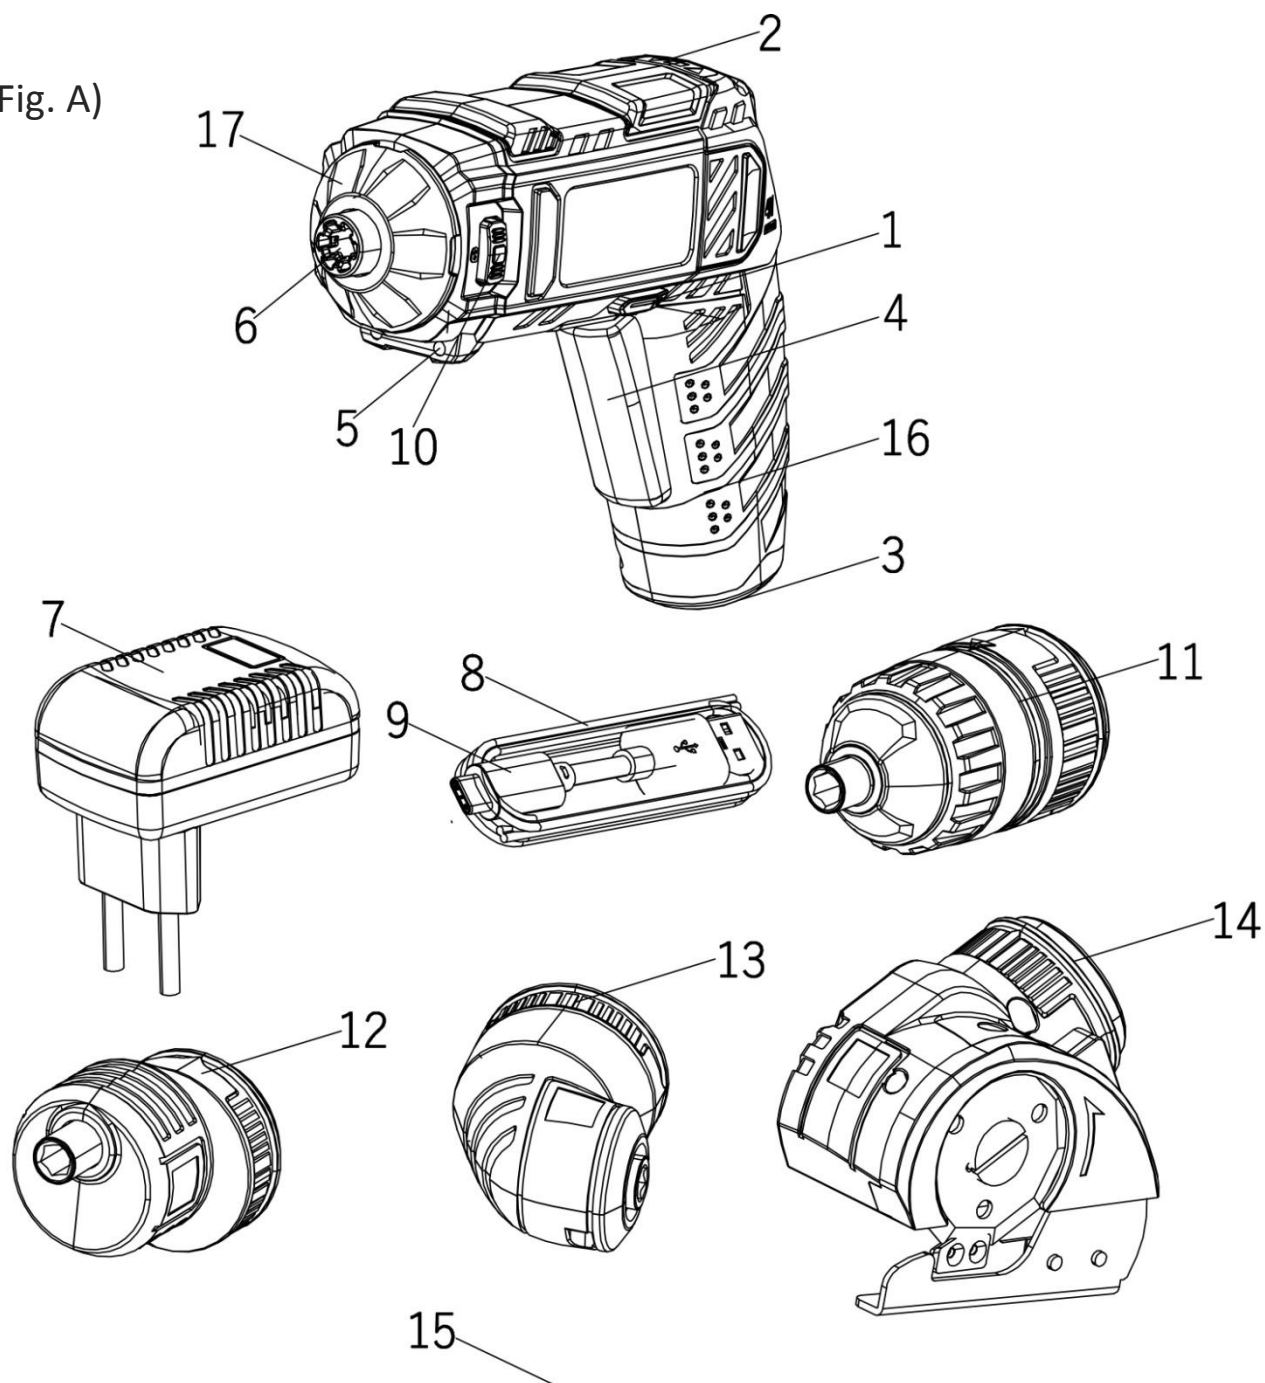

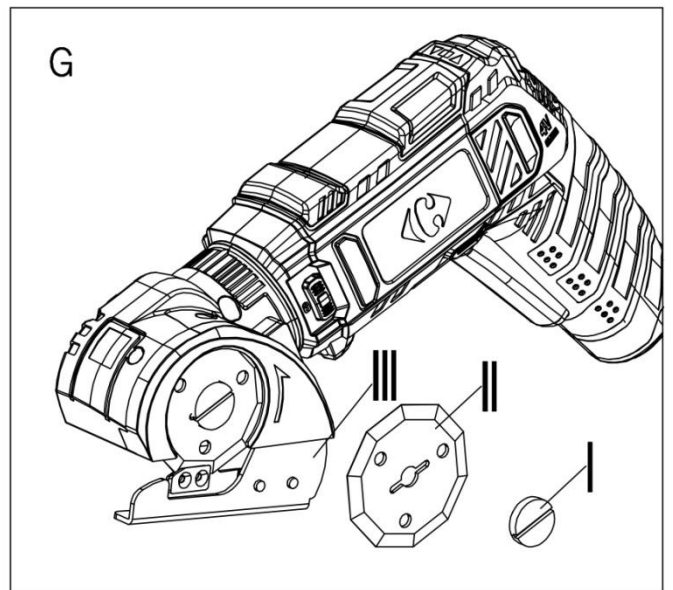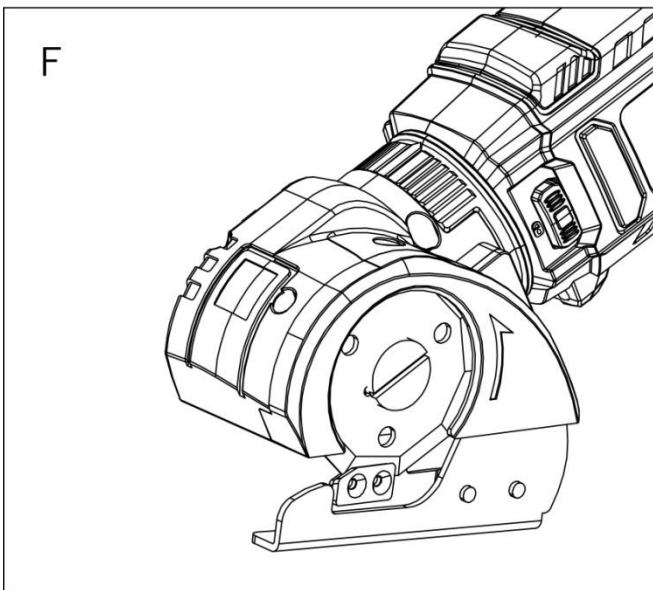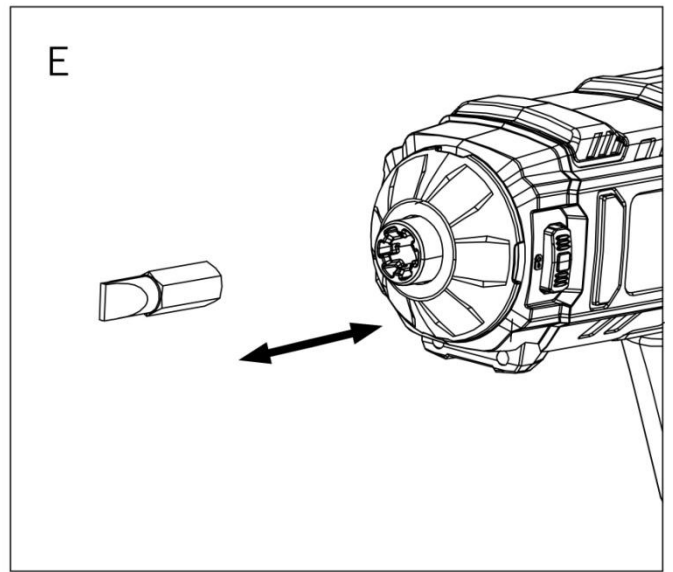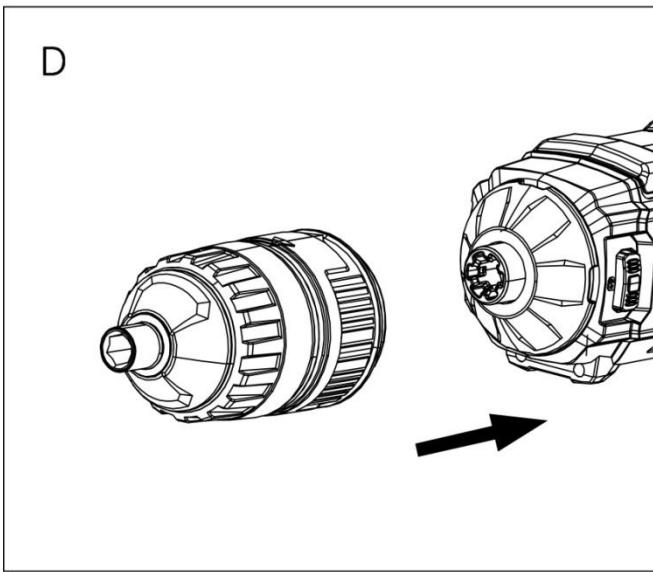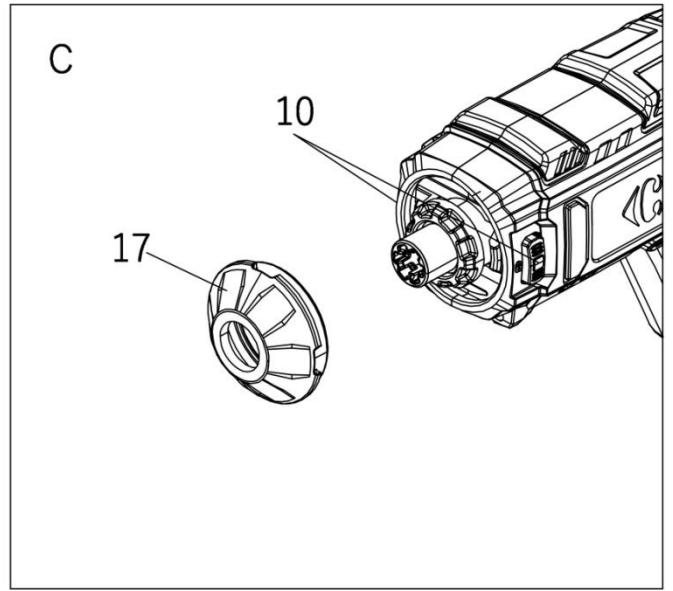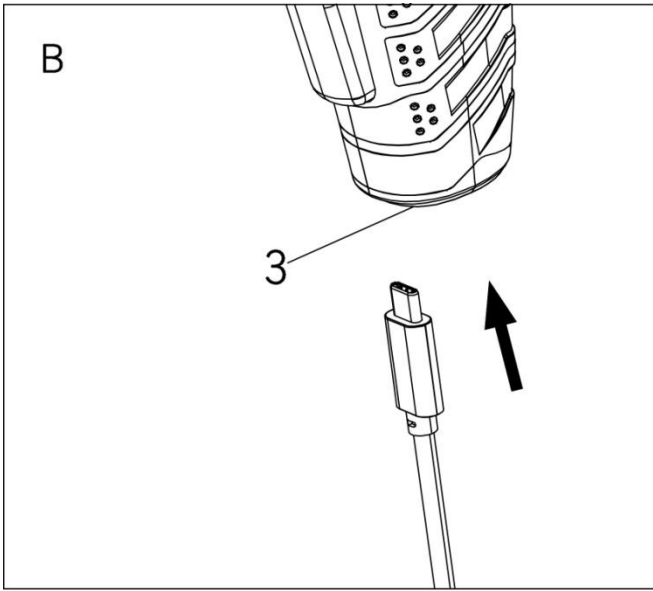

## OVERVIEW (Fig. A)

- |   |                                  |
|---|----------------------------------|
| 1. Rotation direction switch /safety lock-out | 10. Lock buttons for attachments |
| 2. Battery charge level indicator             | 11. Torque attachment            |
| 3. Charging Socket (Micro USB connection)     | 12. Eccentric attachment         |
| 4. On/off switch                              | 13. Angle attachment             |
| 5. LED Lamps                                  | 14. Cutting attachment           |
| 6. Tool holder                                | 15. Bits and bit extension       |
| 7. Charger                                    | 16. Handle                       |
| 8. USB charging cable                         | 17. Rubber cap                   |
| 9. Micro USB plug of the charging cable       |                                  |

## INTRODUCTION

The operating instructions contain important information on safety, use and disposal. It is essential that you read the instructions before assembling, operation and maintaining the product. Use the product only as described and for the applications specified. Keep this manual safely and in the event that the product is passed on, hand over all documents to the third party or the future owner.

## TECHNICAL DATA

Rated voltage	4V d.c.
Rated no-load speed $n_0$	200/min
Torque	Max. 5 Nm
Tool holder	6.35mm (1/4")
Weight (without charger)	0.39kg
<b>Battery (Li-Ion)</b>	<b>INR18650E 1500mAh</b>
Rated voltage	4V d.c.
Capacity	1500mAh
Charging time	Approx. 1h
<b>Charger</b>	<b>JLH100501700G1</b>
Rated input	100-240V, 50-60Hz, 16W
Rated output	5V d.c.
Rated output current	1700mA
Protection class	II
<b>Noise emission value</b>	
Noise measurement value determined in accordance with EN 62841-2-2	
$L_{PA}$	55dB(A)
Uncertainty K	3dB
$L_{WA}$	66dB(A)
Uncertainty K	3dB
<b>Vibration emission value</b>	
Vibration value determined in accordance with EN 62841-2-2	
$a_h$	< 2.5m/s <sup>2</sup>
Uncertainty K	1.5 m/s <sup>2</sup>

- The declared vibration total values and the declared noise emission values have been measured in accordance with a standard test method and may be used for comparing one tool with another.
- The declared vibration total values and the declared noise emission values may also be used in a preliminary assessment of exposure.

### **WARNING**

- The vibration and noise emissions during actual use of the power tool can differ from the declared values depending on the ways in which the tool is used especially what kind of workpiece is processed;
- It is necessary to identify safety measures to protect the operator that are based on an estimation of exposure in the actual conditions of use (taking account of all parts of the operating cycle such as the times when the tool is switched off and when it is running idle in addition to the trigger time)

## **INTENDED USE**

---

This appliance is designed for screwing into wood, plastic and metal. The cutting attachment is designed exclusively for cutting soft materials, such as card and similar materials up to a thickness of 6 mm. Use this product only as described and for the areas of applications specified. The appliance is not intended for commercial use. Any other usage or modification of the appliance is deemed to be improper and carries a significant risk of accidents. The manufacturer accepts no responsibility for damage(s) attributable to misuse.

## **BEFORE USE**

---

### **UNPACKING**

1. Unpack all parts and lay them on a flat stable surface
2. Make sure the delivery contents are complete and free of damage. If you find that parts are missing or show damage, do not use the product but contact your dealer/service centre. Do not use the product unless missing parts have been delivered in addition or defective parts have been replaced. Using an incomplete or damaged product represents a hazard to people and property.
3. Ensure that you have all the accessories and tools needed for assembly and operation.

### **SCOPE OF THE DELIVERY**

Carefully unpack the cordless drill and check that it is complete:

- |  |                            |
|--|----------------------------|
| - 1x Cordless Screwdriver                | - 1 x angle attachment     |
| - 1x Charger with the USB charging cable | - 1 x eccentric attachment |
| - 26 x bits x 25mm                       | - 1 x cutting attachment   |
| - 2 bits x 50mm                          | - 1 x carrying case        |
| - 1 x bit extension                      | - 1x Instruction manual    |
| - 1 x torque attachment                  |                            |

### **CHARGING THE BATTERY PACK (FIG. B)**




**Do not expose the battery to extreme conditions such as heat and shocks. There is a risk of injury caused and by leaking electrolyte solution! In the case of contact, rinse with water or neutralizer.**

Seek medical advice if the solution has come into contact with the eyes etc. The battery must only be charged up in dry areas.

 Never charge the appliance when the temperature is below 4°C or above 40°C.

 Only indoor use!

 Never operate the charger with a damaged power cord or power plug. Damaged cord or plug can result in danger to life due to electric shock.

 The device cannot be used while it is being charged.


1. Connect the Micro USB plug of the charging cable (9) to the charging socket (3) on the appliance, and connect the USB charging cable (8) to the charger (7).
2. Insert the mains plug of the charger into a socket. The battery charge level indicator (2) lights up and the appliance battery is being charged up.
3. The recommended charging time is 3 hours.  
**NOTE:** If the battery charge level indicator (2) is red and flashing, means there is problem on the battery. Stop charging and send it to Service Centre to get repaired.
4. After charging, first remove the mains plug of the charger from the socket. Then disconnect the Micro USB plug of the charging cable (9) from the appliance.

## **CHECKING THE BATTERY CHARGING LEVEL**

The battery status is displayed as follows by the LED of the battery charge level indicator (2).

LED color	Meaning
Green	Charge/power >20%
Red	Charge/power ≤20% Weak charge – need recharge the battery

## **ASSEMBLE /DISMANTLE THE ATTACHMENTS (FIG. C & D)**

 **WARNING!** Risk of injury. Always switch the device off and put the rotation direction switch in the middle before carrying out any work on the appliance to prevent unintentional switching on.

1. Start by removing the rubber cap (17) from the tool holder (6).
2. Press the two lock buttons (10) simultaneously on the both sides of the front part of the screwdriver and fit the desired attachment onto the appliance.
3. Release the two lock buttons (10) and make sure the attachment in the place properly
4. To dismantle the attachment, press the two lock buttons (10) and pull the attachment off forward.
5. Afterwards, replace the rubber cap (17) on the tool holder (6).


## **USAGE OF THE ATTACHMENTS**

1. **Torque attachment (11):** You can set the torque using the torque attachment. Screwing stops as soon

as the screw is tight. Set the required torque from one of the 10 levels. The selected torque level is indicated by the arrow marking. Select the low level for small screws or soft materials, a high level for large screws or hard materials or removing the screws.


2. **Eccentric attachment (12):** allow you to screw even in locations that are close to the wall.
3. **Angle attachment (13):** allow you to screw at right angles.
4. **Cutting attachment (14):** allow you to cut soft materials such as card and similar materials up to a thickness of 6mm.

## **CHANGING BITS/SCREWDRIVER BITS (FIG. E)**

 **WARNING! Risk of injury. Always switch the device off and put the rotation direction switch in the middle before carrying out any work on the appliance to prevent unintentional switching on.**

1. Inserting: Insert the bit into the tool holder (6).
2. Removing: Pull the bit out of the tool holder (6).

## **REPLACING THE CUTTING BLADE (FIG. E &G)**

 **WARNING! Risk of injury. Always switch the device off and put the rotation direction switch in the middle before carrying out any work on the appliance to prevent unintentional switching on.**

1. Start by connecting the cutting attachment (14) to the appliance. This blocks the motor spindle and allows the screw to be removed.
2. Unscrew the screw (I).
3. Remove the cutting blade (II) by pulling it downwards.
4. Push in a new cutting blade (II) from below ensuring that the ground edge of the blade faces you.
5. Turn around the cutting blade (II) until it fits onto the tool fitting (III).
6. Tighten the screw (I).
7. The attachment can now be used again.

**NOTE:** there is an arrow on the cutting blade guard of the cutting attachment. This shows you the running direction of the cutting blade.

## **OPERATION**

---

### **SWITCHING ON / OFF**

1. **Switching ON:** Press on/off switch (4) and keep it pressed in, and the LED lamps (5) will light on.
2. **Switching OFF:** Release on/off switch (4) to switch off the appliance, and the LED lamps (5) will light off.

### **CHANGING THE DIRECTION OF ROTATION**


1. **Clockwise:** Push the rotation direction switch (1) to the left, and the LED indicator ▲ is lighting on.

2. **Anti-clockwise:** Push the rotation direction switch (1) to the right, and the LED indicator ▼ is lighting on.
3. **Safety lock-out:** Push the rotation direction switch (1) into middle position. The on/off switch (4) is blocked.

## **TIPS AND TRICKS**

Screw bits are labelled according to their dimensions and their shape. If you are unsure, always try the particular screw bit out to see whether it sits in the screw head without any free play.

## **CLEANING & MAINTENANCE**

 **WARNING!** Risk of injury. Always switch the device off and put the rotation direction switch in the middle before carrying out any work on the appliance.

1. The screwdriver should be cleaned before and after each use.
2. Clean the appliance with a soft, damp and lint-free cloth. Ensure that no moisture enters the housing. Never use the petrol, solvents or cleansers which can damage plastic.
3. Never allow liquids to get into the appliance.

## **STORAGE AND TRANSPORTATION**

### **STORAGE**

Before storing the device, observe the following:

1. Switch off the appliance and set the rotation direction switch to middle position (lock).
2. Allow the appliance to cool down.
3. Remove the bit from the tool holder.
4. Clean the appliance as described in the maintenance part.
5. For storing the device, use the transport case included in the scope of the delivery in order to protect the appliance from external influences.

### **TRANSPORT**

For transport the appliance, use the transport case included in the scope of the delivery in order to protect the device from external influences.

1. Switch off the appliance and set the rotation direction switch to middle position (lock).
2. Allow the appliance to cool down.
3. Remove the bit from the tool holder

## **REPLACEMENT PARTS /ACCESSORIES**

### **AVAILABLE ACCESSORIES**

 **WARNING!** Only use accessories and additional equipment specified in the operating manual.



Using insertion tools or accessories other than those specific in the operating manual may cause a risk of injury. Only get the accessories from the Service Centre.

## TROUBLESHOOTING

**⚠ WARNING!** Only perform the steps described within these instructions. All further inspection, maintenance and repair work must be performed by an authorized service center or a similarly qualified specialist.

Problem	Possible cause	Corrective action
The tool won't start	Battery discharged	Recharge battery
	USB charging cable or charger faulty	Repair by Service Centre
	On/off switch defective	Send in to Service Centre for repair
On/off switch cannot be pressed	The rotation direction switch is in the center position	Set the desired rotational direction to unlock the tool
	On/off switch defective	Send it to Service Centre for repair

**Note:** if your device does not operate correctly after these check, please contact the Service Center.

## DISPOSAL



To help the environment, please dispose of the product properly when it has reached the end of its useful life and not in the household waste. Information on collection points and their opening hours can be obtained from your local authority



**Li-ion**

**Environmental damage through incorrect disposal of the batteries / rechargeable batteries.**

Remove the battery pack from the product before disposal. Batteries /rechargeable batteries may not be disposed of with the usual domestic waste. They may contain toxic heavy metals and are subject to hazardous waste treatment rules and regulations. Please dispose of batteries according to the relevant local requirements

N° : 4086-2021-SM-CE- -DY94269



**DÉCLARATION CE / UE DE CONFORMITÉ  
EC / EU DECLARATION OF CONFORMITY  
EG / EU VERKLARING VAN OVEREENSTEMMING  
DECLARACIÓN CE / UE DE CONFORMIDAD**

Nom et adresse du fabricant (1) / nom et adresse de la personne autorisée à constituer le dossier technique (2)  
Name and address of the manufacturer (1) / name and address of the person authorised to compile the technical file (2)  
Firmaanaam en adres van de fabrikant (1) / Naam en adres van degene die gemachtigd is het technisch dossier samen te stellen (2)  
Nombre y dirección del fabricante (1) / Nombre y dirección de la persona facultada para reunir el expediente técnico (2)

**Carrefour Marchandises Internationales / CMI – Christophe Legraverend**  
93 avenue de Paris  
91300 Massy – France

Identification du produit:  
Identification of the product:  
Identificatie van de machine  
Identificación del producto:

**DY94269**

**Description et identification de la machine (3) :**  
**Description and identification of the machinery (3):**  
**Beschrijving en identificatie van de machine (3) :**  
**Descripción e identificación de la máquina (3):**

**Carrefour, Tournevis sans fil, DY94269 / CSD4IN1**

**Numéro de série / Serial number / Het serienummer/ Número de serie : 20210703689-20210706913**

**L'objet de la déclaration décrit ci-dessus satisfait à l'ensemble des dispositions pertinentes du code du travail Français et de l'arrêté royal Belge du 12 AOUT 2008 (4). Het hierboven beschreven voorwerp voldoet aan alle toepasselijke bepalingen van Koninklijk besluit van 12 Augustus 2008 (4)**

**The object of the declaration described above fulfils all the relevant provisions of Directive 2006/42/CE (4)**

**El objeto de la declaración descrita anteriormente cumple todas las disposiciones aplicables de la Directiva 2006/42/CE (4)**

Références des normes harmonisées pertinentes appliquées ou des spécifications par rapport auxquelles la conformité est déclarée(7,8) :

References to the relevant harmonised standards used or references to the specifications in relation to which conformity is declared (7,8):

Vermelding van de toegepaste relevante geharmoniseerde normen of van de specificaties waarop de conformiteitsverklaring betrekking heft (7,8):

Referencias a las normas armonizadas pertinentes utilizadas, o referencias a las especificaciones respecto a las cuales se declara la conformidad (7,8):

**EN ISO 12100: 2010**

**ISO 13849-1:2015**

**EN 62841-2-2:2014**

L'objet de la déclaration décrit ci-dessus est conforme à la législation d'harmonisation de l'union applicable:

The object of the declaration described above is in conformity with the relevant Union harmonization legislation:

Het hierboven beschreven voorwerp is conform de desbetreffende harmonisatiewetgeving van de Unie:

El objeto de la declaración descrita anteriormente es conforme a la legislación de armonización pertinente de la Unión:

Références des normes harmonisées pertinentes appliquées ou des spécifications par rapport auxquelles la conformité est déclarée:

References to the relevant harmonised standards used or references to the specifications in relation to which conformity is declared:

Vermelding van de toegepaste relevante geharmoniseerde normen of van de specificaties waarop de conformiteitsverklaring betrekking heeft:

Referencias a las normas armonizadas pertinentes utilizadas, o referencias a las especificaciones respecto a las cuales se declara la conformidad:

**DIRECTIVE 2014/30/EU (EMC)**

**EN 55014-1:2017+A11:2020**

**EN 55014-2:2015**

**EN IEC 61000-3-2:2019;**

**EN 61000-3-3:2013+A1:2019;**

**DIRECTIVE 2014/35/EU (LVD)**

**EN 60335-2-29: 2004 + A2: 2010 + A11:2018**

**EN 60335-1:2012 + A11:2014 + A13:2017 + A1:2019 + A2:2019 + A14:2019**

**EN 62233: 2008**

**DIRECTIVE 2011/65/EU (ROHS)**

**-**

Signé par et au nom de:

**Christophe LEGRAVEREND**

Signed for and on behalf of:

Non-Food Quality Director

Ondertekend voor en namens:

Carrefour Marchandises Internationales/CMI

Firmado por y en nombre de:

Date et lieu d'établissement: Massy, 18/08/2021

Place and date of issue:

Datum van afgifte en plaats:

Lugar y fecha de expedición:

## WARRANTY

---

The manufacturer guarantees the product against defects in material and workmanship for a period of 2 years from the date of the original purchase. The warranty only applies if the product is for household use. The warranty does not cover breakdowns due to normal wear and tear.

The manufacturer agrees to replace parts identified as defective by the designated distributor. The manufacturer does not accept responsibility for the replacement of the machine, in whole or in part, and/or ensuing damage.

### **The warranty does not cover breakdowns due to:**

- insufficient maintenance.
- abnormal assembly, adjustment or operations of the product.
- parts subject to normal wear and tear.

### **The warranty does not extend to:**

- shipping and packaging costs.
- using the tool for a purpose other than that for which it was designed.
- the use and maintenance of the machine done in a manner not described in the user manual.

Due to our policy of continuous product improvement, we reserve the right to alter or change specifications without notice. Consequently, the product may be different from the information contained therein, but a modification will be undertaken without notice if it is recognized as an improvement of the preceding characteristic.

### **READ THE MANUAL CAREFULLY BEFORE USING THE MACHINE.**

When ordering spare parts, please indicate the part number or code, you can find this in the spare parts list in this manual. Keep the purchase receipt; without it, the warranty is invalid. To help you with your product, we invite you to contact us by phone or via our website:

**+33 (0)9.70.75.30.30**

**<https://services.swap-europe.com/contact>**

You must create a "ticket" via the web platform.

- Register or create your account.
- Indicate the reference of the tool.
- Choose the subject of your request.
- Describe your problem.

Attach these files: invoice or sales receipt, photo of the identification plate (serial number), photo of the part you need (for example: pins on the transformer plug which are broken).



# PRODUCT FAILURE

---

## WHAT TO DO IF MY MACHINE BREAKS DOWN?

### **If you bought your product in a store:**

- Make sure that your machine is complete with all accessories supplied, and clean! If this is not the case, the repairer will refuse the machine.
- Go to the store with the complete machine and with the receipt or invoice.

### **If you bought your product on a website:**

- Make sure that your machine is complete with all accessories supplied, and clean! If this is not the case, the repairer will refuse the machine.
- Create a SWAP-Europe service ticket on the site: <https://services.swap-europe.com> When making the request on SWAP-Europe, you must attach the invoice and the photo of the nameplate (serial number).

Contact the repair station to make sure it is available before dropping off the machine.

Go to the repair station with the complete machine packed, accompanied by the purchase invoice and the station support sheet downloadable after the service request is completed on the SWAP-Europe site

**Please keep your original packaging to allow for after-sales service returns or pack your machine with a similar cardboard box of the same dimensions.**

**For any question concerning our after-sales service you can make a request on our website <https://services.swap-europe.com>**

**Our hotline remains available at +33 (9) 70 75 30 30.**



# WARRANTY EXCLUSIONS

---

## THE WARRANTY DOES NOT COVER:

- Start-up and setting up of the product.
- Damage resulting from normal wear and tear of the product.
- Damage resulting from improper use of the product.
- Damage resulting from assembly or start-up not in accordance with the user manual.
- Breakdowns related to carburetion beyond 90 days and fouling of carburetors.
- Periodic and standard maintenance events.
- Actions of modification and dismantling that directly void the warranty.
- Products whose original authentication marking (brand, serial number) has been degraded, altered or withdrawn.
- Replacement of consumables.
- The use of non-original parts.
- Breakage of parts following impacts or projections.
- Accessories breakdowns.
- Defects and their consequences linked to any external cause.
- Loss of components and loss due to insufficient screwing.
- Cutting components and any damage related to the loosening of parts.
- Overload or overheating.
- Poor power supply quality: faulty voltage, voltage error, etc.
- Damages resulting from the deprivation of enjoyment of the product during the time necessary for repairs and more generally the costs related to the immobilization of the product.
- The costs of a second opinion established by a third party following an estimate by a SWAP-Europe repair station
- The use of a product which would show a defect or a breakage which was not the subject of an immediate report and/or repair with the services of SWAP-Europe.
- Deterioration linked to transport and storage\*.
- Launchers beyond 90 days.
- Oil, petrol, grease.
- Damages related to the use of non-compliant fuels or lubricants.

\* In accordance with transport legislation, damage related to transport must be declared to carriers within 48 hours maximum after observation by registered letter with acknowledgement of receipt.

This document is a supplement to your notice, a non-exhaustive list.

 
**Attention:** all orders must be checked in the presence of the delivery person. In case of refusal by the delivery person, it you must simply refuse the delivery and notify your refusal.

**Reminder:** the reserves do not exclude the notification by registered letter with acknowledgement within 72 hours.

### **Information:**

Thermal devices must be wintered each season (service available on the SWAP-Europe site). Batteries must be charged before being stored.

Staple here your receipt

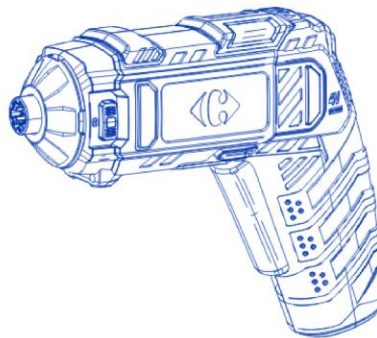

Product	Ref	EAN
CORDLESS SCREWDRIVER	DY94269	3616474461864



EN

## For any comments or suggestions

Carrefour Consumer service  
– CMI  
TSA 91431  
91343 MASSY Cedex  
France  
[www.carrefour.fr](http://www.carrefour.fr)

 **N°Cristal** 09 69 39 70 00

APPEL NON SURTAXE

More information on  
[www.mycarrefourdocs.com](http://www.mycarrefourdocs.com)