





# HMTC100-A QUICK ASSEMBLY GUIDE

EN


1. Assemble the walking rubber wheel: 1.1 Install the wheel shafts on the 4.0-8 rubber wheel (note that the valve of the rubber wheel faces outward) and tighten them with bolts; 1.2 Install the assembled rubber wheels on the output shafts of the transmission box with a pin and connected with pin shafts and R pins.

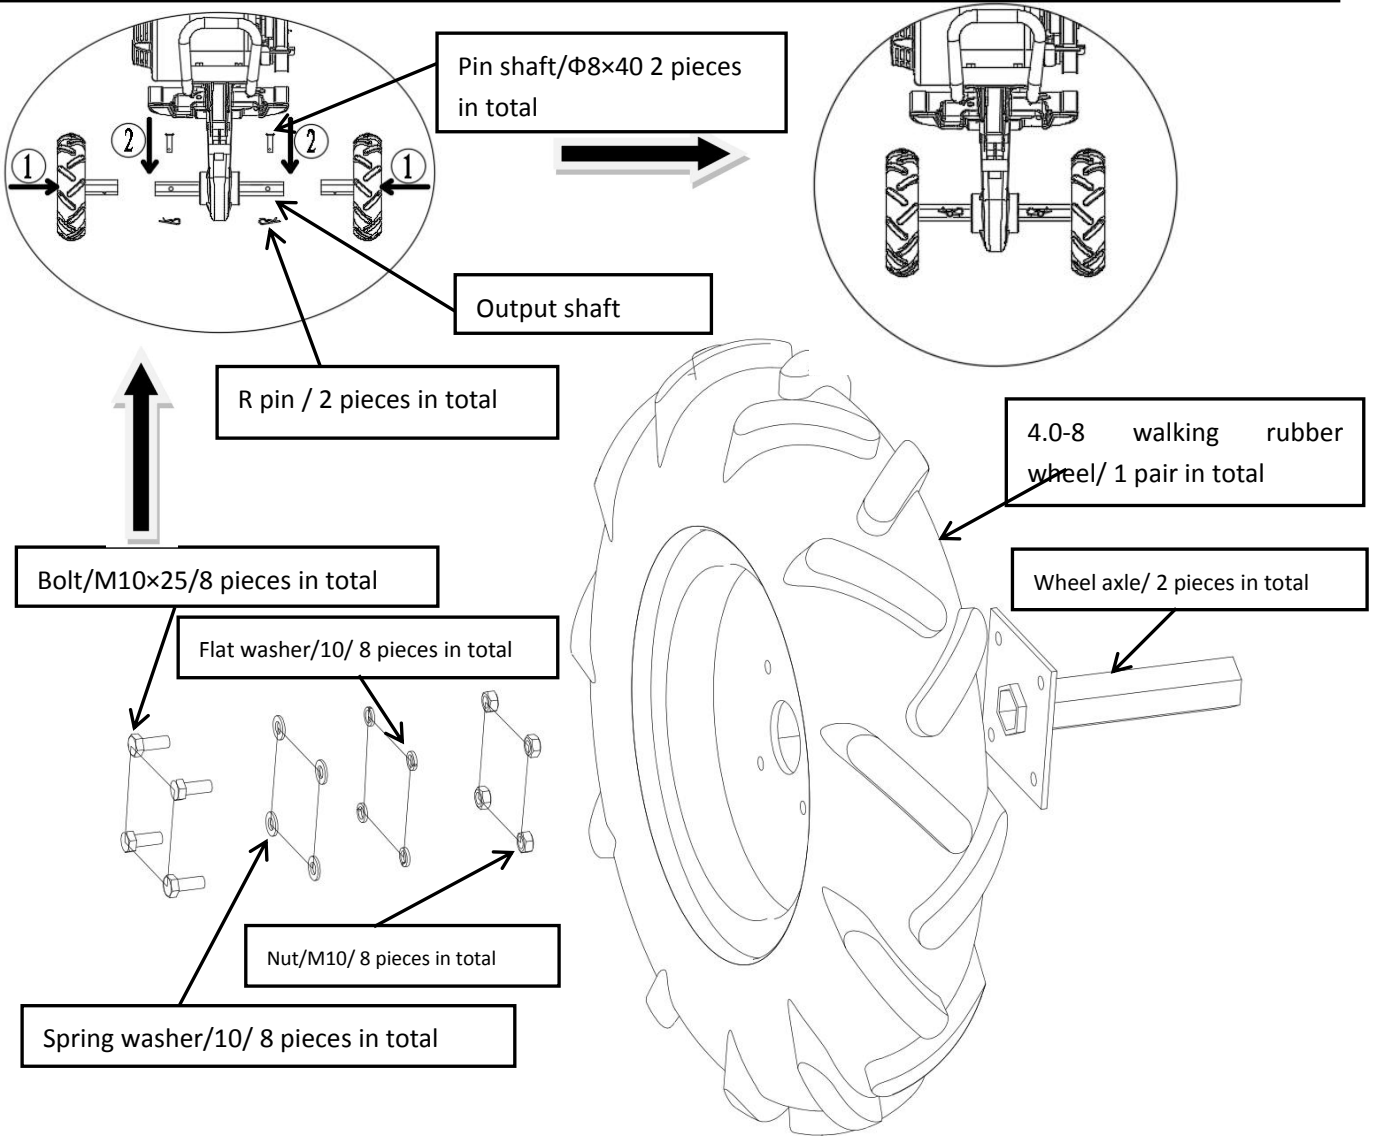


2. Assemble the resistance tillage knife: 2.1 Install the connecting frame on the trailer body; 2.2 Use the trailer body bolt to connect the trailer body and the connecting frame; 2.3 Install the resistance tiller on the connecting frame; 2.4 Fix the resistance tiller on the connecting frame with the pin shaft and R pin.

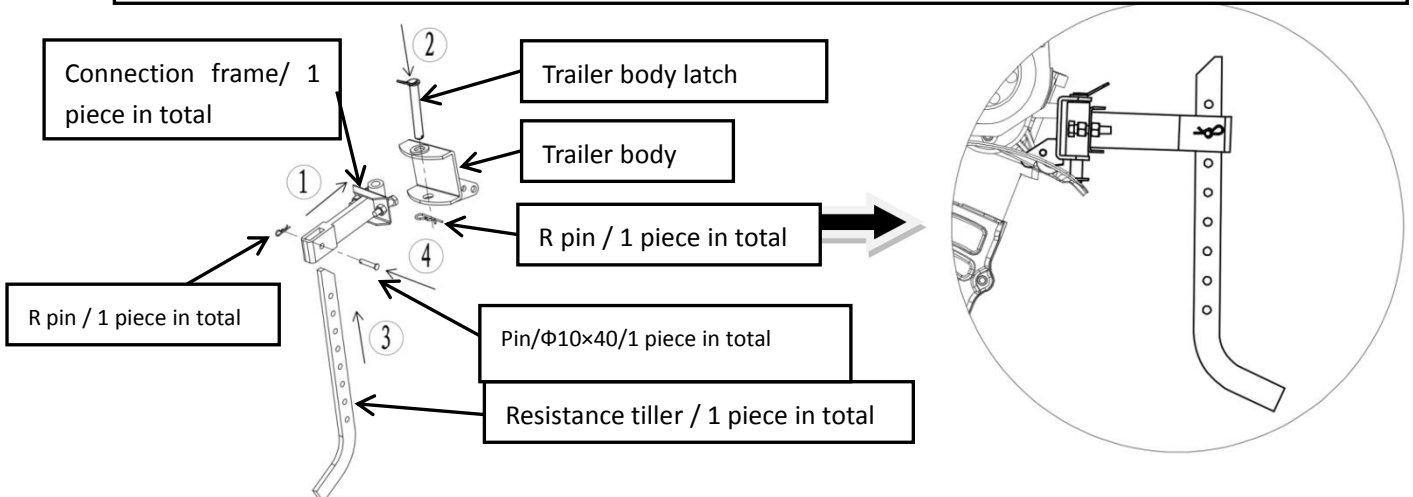


3. Assemble the front wheel assembly: 3.1 Remove the pin and bolt from the walking wheel assembly; 3.2 Install the walking wheel assembly on the power support, and connect with the pin and bolt.

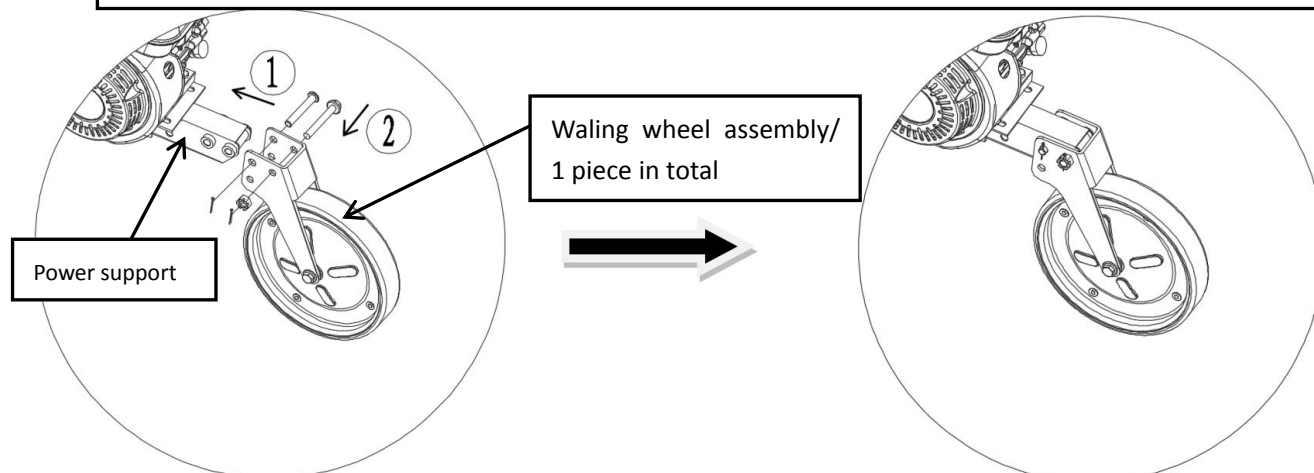

4. Assemble the armrest frame: 4.1 as shown in the figure, place the limit block on the armrest seat; 4.2 put the chainring plate on the armrest seat, then place the armrest frame on the chainring plate, and finally use the lifting handle to lock the armrest frame.

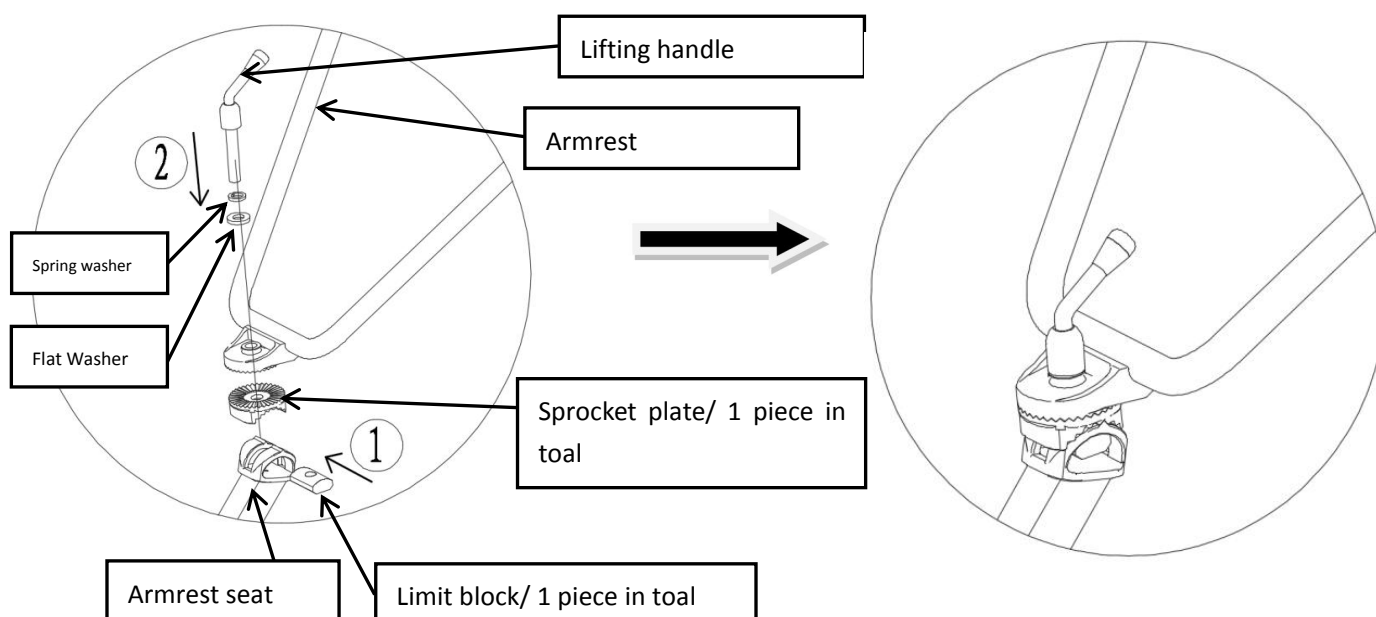


5. Assemble the decorative cover of the armrest frame: Install the decorative cover on the armrest frame and fasten it with screws.

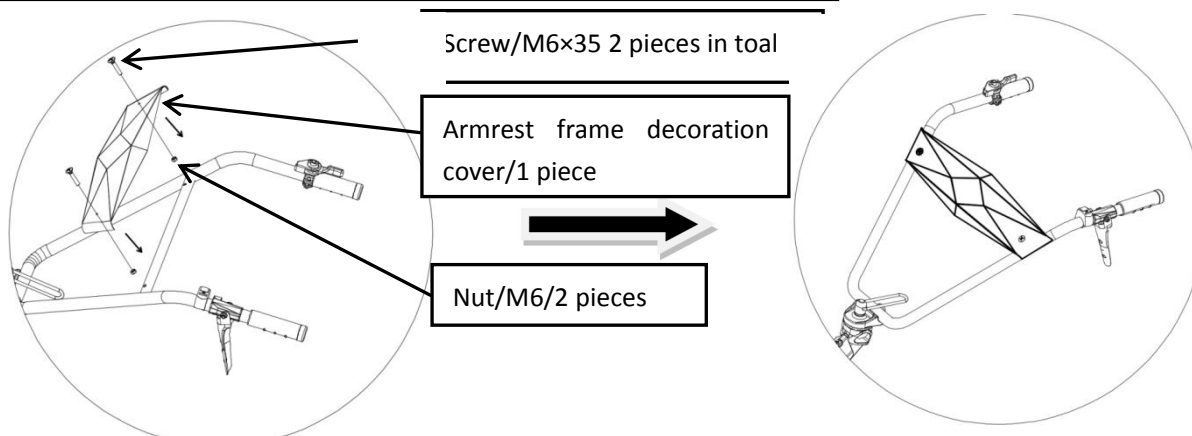


6.

Assemble the mudguard: 6.1 As shown in the figure, install the mudguard rubber plugs on the left and right mudguards, and then install the mudguard bushings in the mudguard rubber plugs; 6.2 install the left and right mudguards inside, fasten with bolts (M16×20), then install the rear bracket of the fender on the left and right fenders and fasten with bolts (M6×12).

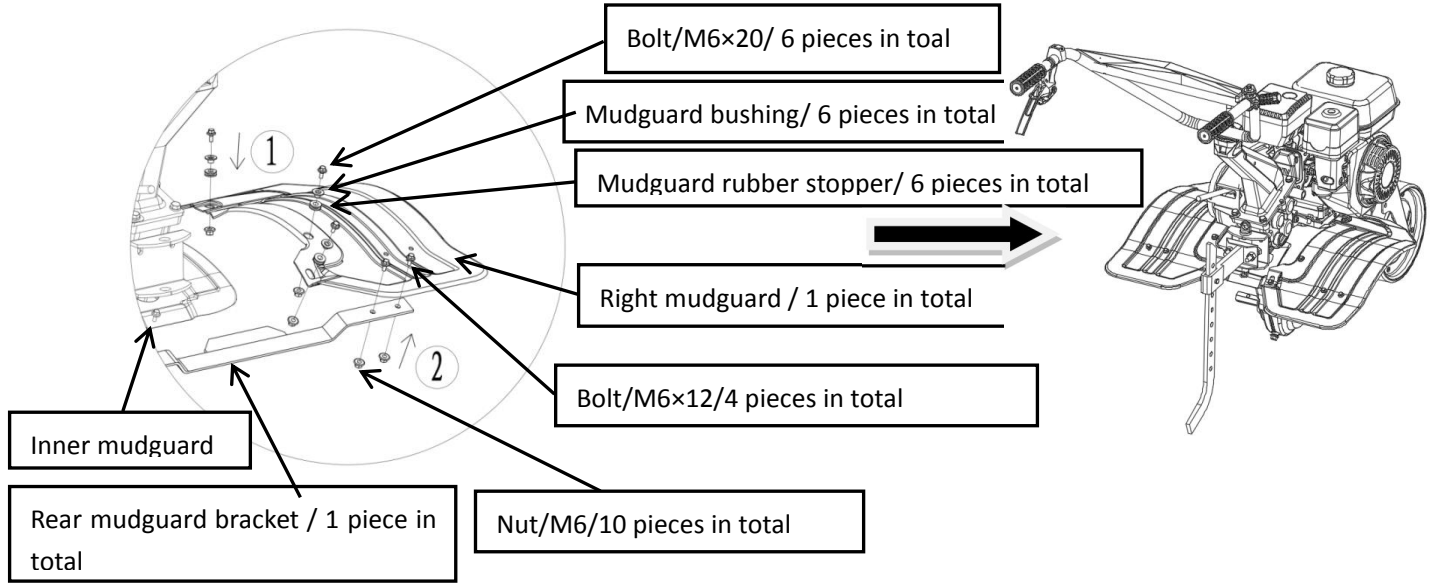


7.

Assemble the belt guard: 7.1 As shown in the figure, install the front end of the belt guard on the tension block A and fasten it with bolts (M6×10); 7.2 Install the rear end of the belt guard on the front support of the belt guard, fasten with bolts (M6×12).

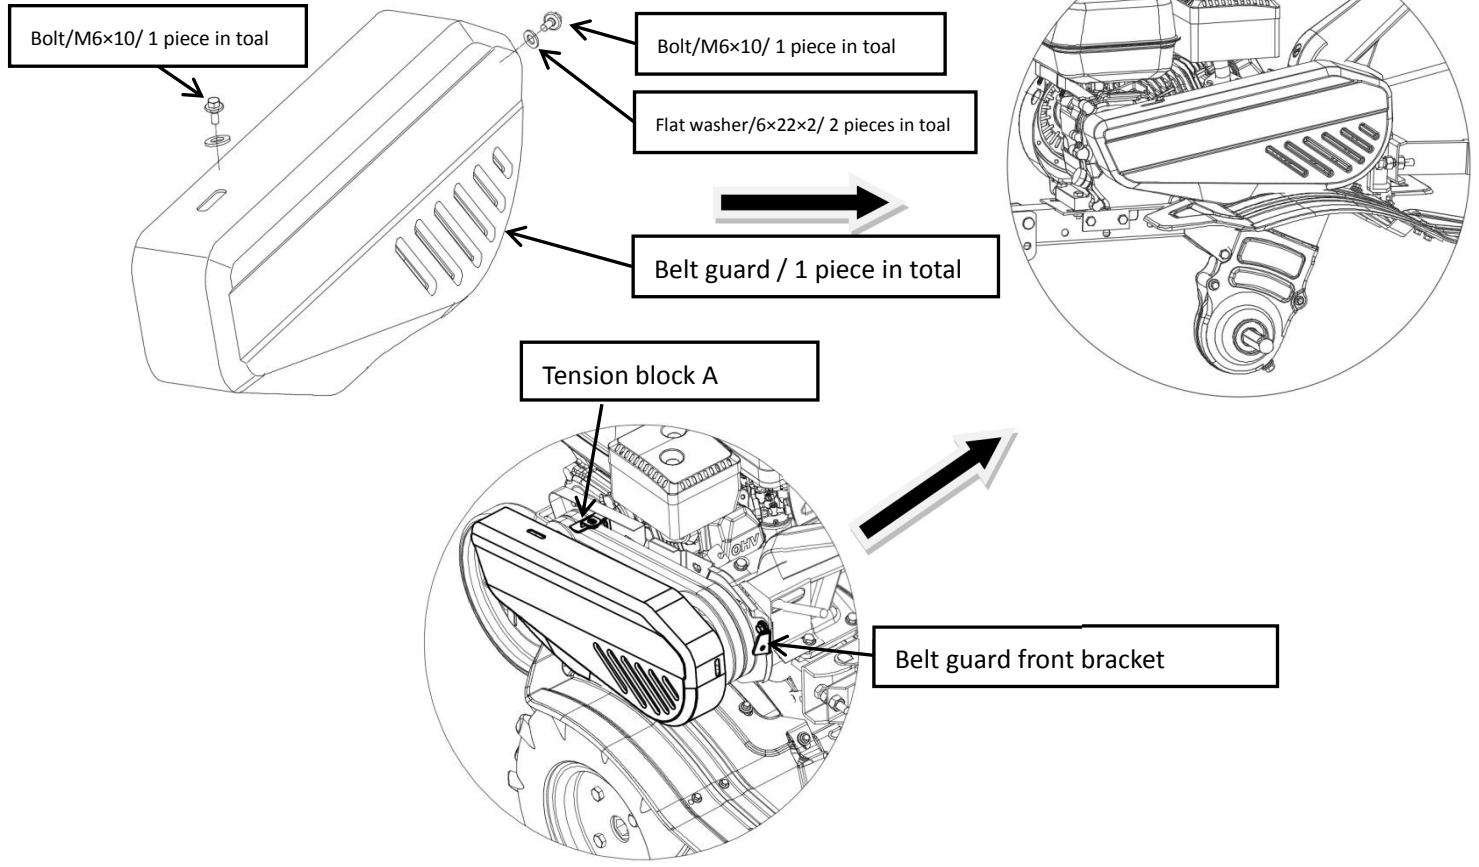

8. Assemble the shift lever: install the rear end of the shift lever on the front end of the shift lever and connect it with a pin shaft and an R pin

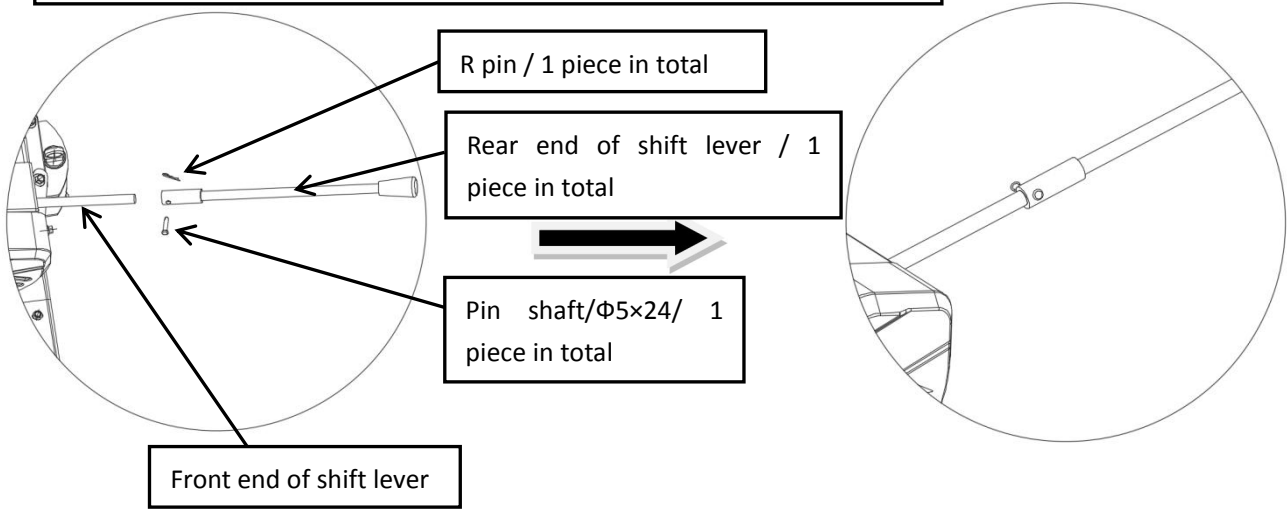

9. Assemble the cutter: 9.1 As shown in the figure, install the blades on the main and auxiliary cutter cylinders, tighten them with bolts, then install the trimming wheel on the auxiliary cutter cylinder II, and Finally, connect the main and auxiliary tool barrels with the edge trimming pin to the R pin; 9.2 After installing the left tool assembly according to the previous steps, note that the blades of the left and right tool assemblies correspond to each other.

