


- Screw the handle and the foot with the 2 screws and the bolts, nuts, washers as below:



- Screw the 2 side plates together with 4 brackets and 4 nuts, bolts and washers



- Screw the side protections with 6 nuts and bolts and 3 nuts, bolts and washers as below:

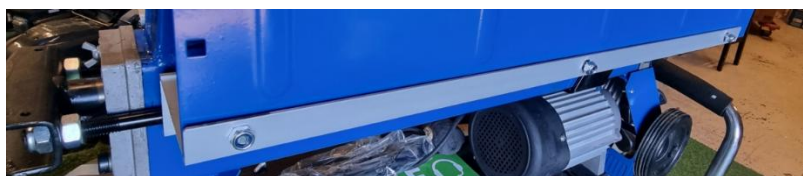




- Insert the tray extension by inserting the 2 hooks on the legs as below:



- Position the side plastic protections by inserting the 10 fixing clips by force

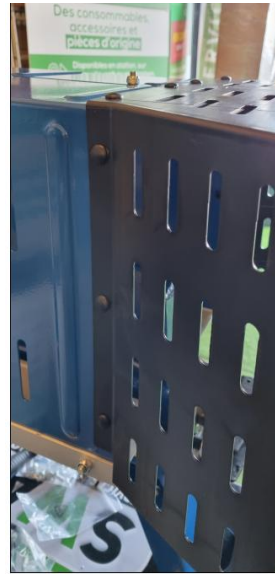

- Position the rear plastic protection by inserting the 5 fixing clips by force

